



## LOUVERED CHROME BATTERY BOX COVERS

7368

### PARTS INCLUDED

- 1 Left Louvered Battery Box Cover
- 1 Right Louvered Battery Box Cover
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED


Phillips Screwdriver

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** Open the right saddlebag. Carefully remove the right side cover by gently pulling outward at the center of the rear of the cover. PIC 1 The darts on the side cover fit into rubber grommets, (PIC 2) so there will be tension on them. Pull slowly but firmly until the darts release. Doing the same, work your way to the front of the cover. Pull outward slowly so the darts are not damaged when pulled from the rubber grommets on the bike. Set on a soft/clean towel or rag.

**NOTE:**After removing the OEM side cover, check to see that the rubber grommets remained attached to the locations on the bike shown in PIC 2.

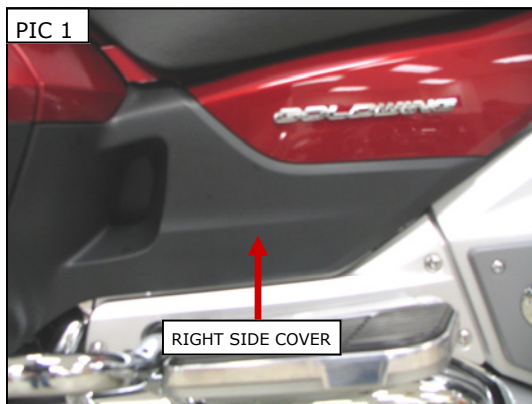

-cont.-

**STEP 3** Remove the three screws as shown in PIC 3; they will be reused. Remove the OEM battery cover and set it aside.

**STEP 4** Place the Louvered Cover on the side cover and secure using the three screws that were removed in STEP 3.

**STEP 5** Carefully align the darts on the new Louvered Cover to fit into the rubber grommets on the bike and reinstall the cover on the bike . PIC 4

**STEP 6** Repeat STEP 2 through STEP 5 for the left side.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

