



## DRIVER FLOOR BOARD SPACER FOR TOURING

7509

### PARTS INCLUDED

- 1 Left Side Spacer (LH on spacer)
- 1 Right Side Spacer (RH on spacer)
- 2 Round Spacers
- 4 3/8" Lock Washers
- 2 3/8"-16 X 3-1/4" Socket Head Cap Screws
- 4 3/8"-16 X 2" Socket Head Cap Screws
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of Hex Wrenches, Set of Combination Wrenches, Set of Hex Wrench Sockets, Ratchet and Extension

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**


**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition and let cool.

**NOTE:** Left and Right sides are determined by sitting on bike.

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-


**STEP 2** Identify left and right spacers. Each of the large spacers are labeled. PIC 1

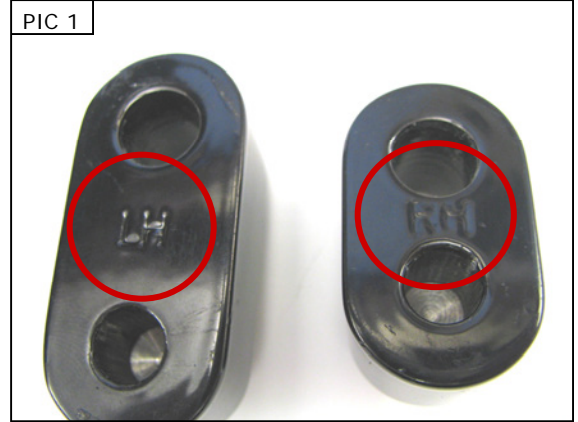

**STEP 3** Remove the socket head cap screw from the right front floorboard mount. Retain the locknut, it **will be reused**. The socket head cap screw and lock washer **will not be reused**. **On CVO bikes, this comes in from the back side of the frame to the mount.**

**STEP 4** Insert one of the supplied 3/8"-16 X 3-1/4" Socket Head Cap Screws, with a provided Lock Washer, through the front mount and provided Round Spacer. Using the lock nut from Step 3, attach the front mount and Spacer to the frame. Finger tighten at this time. PIC 2

**On CVO bikes:** Insert one of the supplied 3/8"-16 X 2" Socket Head Cap Screws with a Lock Washer through the back side of the frame. Place one of the included Round Spacers over the protruding threads and thread the mount on. Leave finger tight for now.

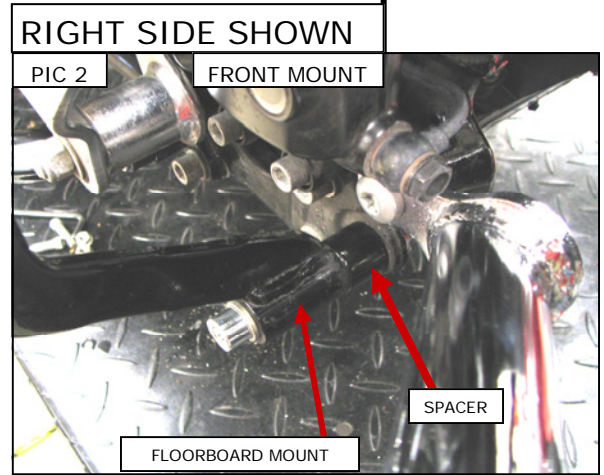

**STEP 5** Remove the socket head cap screw from the rear mount. Set aside, **it will not be reused**. Insert one of the supplied 3/8"-16 X 2" Socket Head Cap Screws, with a provided Lock Washer, through the rear mount and rear Right Side Spacer (this has an RH stamped on it) make sure that the indexing pin on the rear mount fits into the smaller hole on the Spacer, the cap screw goes through the larger hole. Attach the rear mount and Spacer to the bike. Make sure that the indexing pin on the spacer goes into the lower hole on the frame. PIC 3

**STEP 6** Tighten both front and rear mounting screws securely.

**STEP 7** Repeat Steps 3 through 5 for the Left side, using the Spacer that has an LH stamped on it, the Round Spacer and the two remaining supplied Socket Head Cap Screws and Lock Washers.

**STEP 8** Tighten all fasteners securely.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

