



# FLOORBOARD EXHAUST GUARD 7544

## TRADITIONAL BOARD-RIGHT SIDE

### FITS: TRADITIONAL SHAPE BOARDS

ALL '84-UP ELECTRA GLIDES (EXCEPT '04-'05 FLHTCSE AND '06-UP FLHTCUSE), '84-'96 TOUR GLIDES, '98-UP ROAD GLIDES (EXCEPT '09-UP FLTRSE, '10-UP FLTRX), '94-UP ROAD KINGS (EXCEPT '04-'07 FLHRS, '07-'08 FLHRSE)  
ALL '86-UP FLST MODELS (EXCEPT '05-UP FLSTN, '05-'06 FLSTFSE, '08-UP FLSTSB, '09-UP FLSTC, '10-UP FLSTSE, AND '10-UP FLSTFB)

### PARTS INCLUDED

- 1 Right Side Exhaust Guard Assembly
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

**THANK YOU FOR CHOOSING KÜRYAKYN!**  
**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Pliers


**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

### PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Remove the floorboard pad by gently pulling up on the rubber pad, and simultaneously pushing on the rubber darts (PIC 1) protruding from the underside of the floorboard assembly.

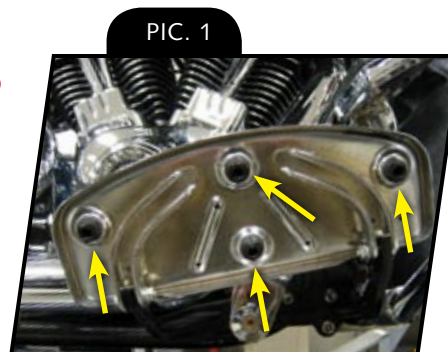

-cont.-

**STEP 3** Clean the mounting area of the floorboard with the included alcohol pad. If the area is extremely dirty, clean with warm water and a mild soap - rinse and dry completely. Make sure that the area is completely free of contaminants to ensure proper adhesion.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 4** As shown in PIC 2, test fit the exhaust guard to the floorboard. Mark the position of the Exhaust Guard with masking tape to aid in final installation.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 5** Rub the adhesive backing to activate the adhesive. Remove the adhesive backing and press the exhaust guard in place using the markings made in STEP 4 as a guide. Hold the accent in place for one full minute, full bonding strength will occur in 24 hours.

**STEP 6** Replace the floorboard pad by placing pad back in to place and pulling the rubber isolators through the floorboard plate.

*Ride On!*

**Kuryakyn**<sup>®</sup>

PIC. 2



PIC. 3



**PAGE**

**2**

**EXHAUST GUARD**

**INSTALLATION**