



PREMIUM DRIVER BOARD INSERTS

7553

PARTS INCLUDED

- 2 Floorboard Inserts
- 1 Hardware Kit Containing:
 - 8 1/4" Rubber Washers
 - 8 1/4" Flat Washers
 - 8 1/4"-20 X 5/8" Button Socket Cap Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Flat Blade Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.


WARNING

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Starting with the right side, remove the footboard pad by gently pulling up on the rubber pad, and simultaneously pushing on the rubber darts protruding from the underside of the footboard with a flat blade screwdriver. PIC 1

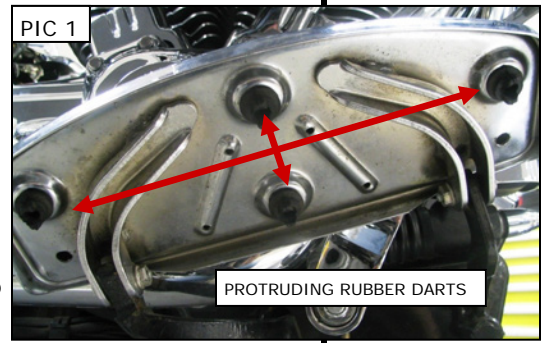


STEP 3 Place floorboard insert onto floorboard pan with rubber mounts fitting into appropriate holes. PIC 2

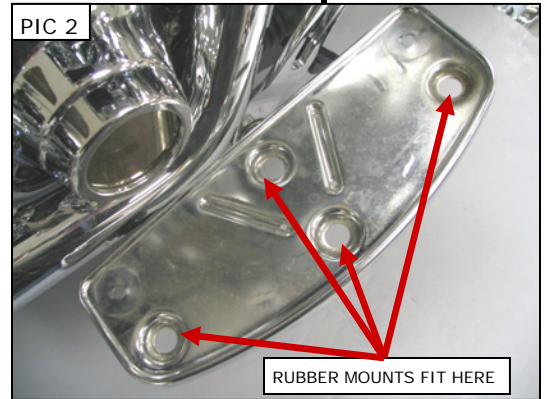

STEP 4 From the underside of the floorboard pan, install one rubber washer and one flat washer with a button socket cap screw on each of the four mounts. **The rubber washer goes between the flat washer and the floorboard pan.** PIC 3 Tighten securely.

STEP 5 Repeat STEP 2 through STEP 4 for the other side.

STEP 6 Tighten all fasteners.

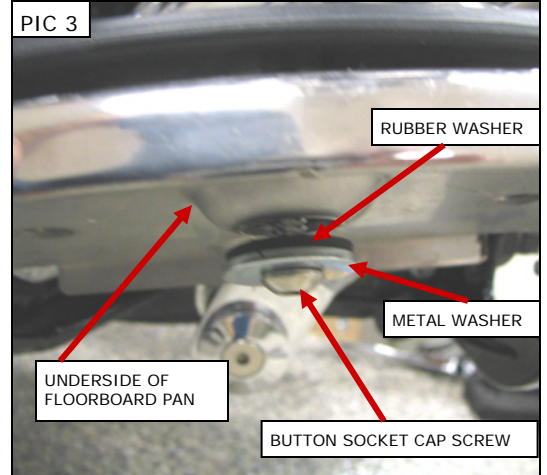

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.