



## DUALLY TRIDENT PEGS

7567

### PARTS INCLUDED

- 1 Left Dually Trident Peg — Black
- 1 Right Dually Trident Peg — Black
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**NOTICE** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**NOTICE** IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

### TOOLS SUGGESTED

Set of Combination Wrenches, Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

**NOTE:** These pegs require the separate purchase of the appropriate Kuryakyn footpeg adapter for your model.

**NOTE:** Pictures shown of Chrome parts. Installation of Black parts will be the same.

**WARNING** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**WARNING** A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.


**STEP 2** Remove the stock peg from the clevis. Pay attention to any spacers or washers installed between the male mount on the peg and the clevis, it may be helpful later. Set this hardware aside, it may be reused.

**NOTE:** The normal orientation of the pegs is with the longer portion of the peg towards the front of the bike. PIC 1



**STEP 3** Install the new peg adapter as per the instructions with the peg adapter. Check that the peg adapter is installed correctly and the adapter is able to fold upward.

**WARNING** FOOTPEGS MUST BE INSTALLED SO THEY WILL FOLD UPWARD AND REARWARD IF HIT BY ANY OBJECT. FAILURE TO ADJUST THE FOOTPEGS TO OPERATE IN THIS MANNER COULD RESULT IN SERIOUS INJURY OR DEATH.

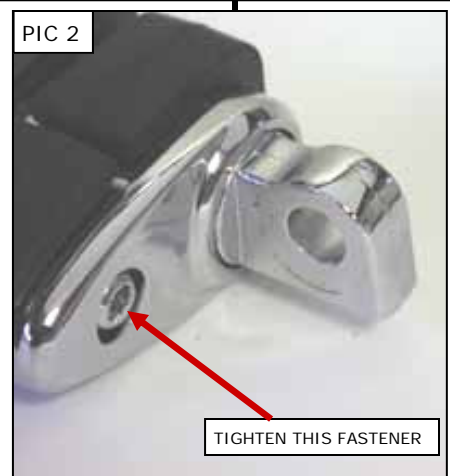

**STEP 4** Place the peg on the peg adapter and loosely install the 5/16"-18 socket head cap screw located on the end of the peg.

**STEP 5** Position the footpeg as desired. Using a hex wrench, tighten the 5/16"-18 socket head cap screw located on the end of the peg. The adapter will seat itself into the peg and keep it from rotating.

**WARNING** CHECK TO MAKE SURE THAT THERE IS PROPER GROUND CLEARANCE WHEN CORNERING. LOSS OF CONTROL OF THE MOTORCYCLE AND SERIOUS INJURY MAY OCCUR IF THE FOOTPEG IS NOT POSITIONED PROPERLY. REPOSITION THE FOOTPEG IF NECESSARY SO THAT THERE IS ADEQUATE CORNERING CLEARANCE.

**STEP 6** Tighten all hardware, including the rear rubber pad retaining fastener (PIC 2), securely.

**STEP 7** Repeat Steps 2 through 6 for the other peg.

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.