



# KINETIC MINI BOARDS without ADAPTER

7611

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

<b>WARNING</b>	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
<b>CAUTION</b>	This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.
<b>NOTICE</b>	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

## MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Kinetic Mini Board without Adapter (A)
- 1 Right Kinetic Mini Board without Adapter (B)
- 1 Hardware Kit containing:
  - 2 Flat washers
  - 2 5/16"-18 X 1" socket head cap screw
- 1 Installation Instructions

## TOOLS SUGGESTED

Set of hex wrenches, combination wrenches

<b>NOTICE</b>	This copy of installation instructions contains important information. Ensure that the end user receives this copy and is aware of its importance for future reference.
---------------	---

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the hot engine and exhaust system to cool.

<b>WARNING</b>	YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.
----------------	--

## PRE-INSTALLATION CONSIDERATIONS:

The Kinetic Mini Boards were designed to be used in many different locations on a variety of motorcycles. These installation instructions contain specific mounting procedures as well as general guidelines for comfortable and safe installation of the boards.



**THE BOARDS MUST BE INSTALLED SO THEY WILL FOLD UPWARD AND REARWARD IF THEY COME IN CONTACT WITH ANY OBJECT. FAILURE TO INSTALL AND ADJUST THE BOARDS TO OPERATE IN THIS MANNER MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.**

**Driver footboard applications:** Ensure that the installation of the boards does not prohibit the proper function of the gear shifter or rear brake pedal. You may only be able to use the middle or front mounting hole to keep the board from extending too far forward thereby reducing gear shifter or brake pedal clearance.

**Passenger footboard applications:** The boards can be installed so that they fold up in the stow position. Ensure that, when folded back, the boards do not contact any part of the motorcycle and that they remain in the stowed position during operation of the bike.

## INSTALL FOOTPEG ADAPTERS:


**NOTE:** Refer to the installation instructions included with the new footpeg adapters.

## INSTALL THE KINETIC MINI BOARDS:

**NOTE:** Refer to PIC 1. Determine the clutch-side (left) board from the brake-side (right) BEFORE installation.

Use your best judgment when installing the Boards. They were designed to fit many different bikes and as a result all mounting positions may not be possible on your specific model of bike.

Refer to PIC 3. Determine which of the three splined mounting holes will best suit you BEFORE continuing on.

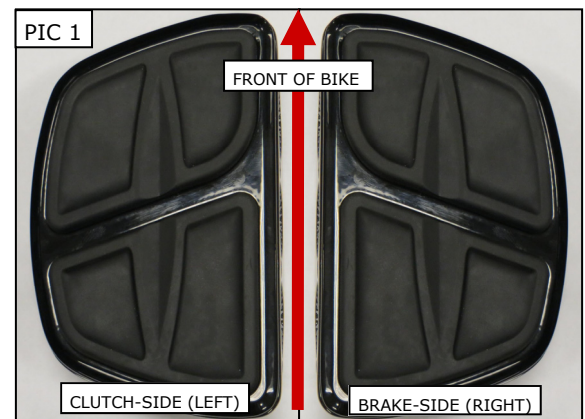


**STEP 2** Refer to PIC 2. Position the Kinetic Mini Board on the footpeg adapter. Install the included 5/16" screw with flat washer, through the Board and into the adapter. PIC 3

**STEP 3** Thread the screw into the Adapter until it is snug. Ensure that the Kinetic Board is able to fold upward and rearward.

**STEP 4** Ensure the splines on the Board and Adapter are engaged and tighten the screw securely.

**STEP 5** Repeat **STEPS 2 through 4** for the brake-side (right).

-cont.-

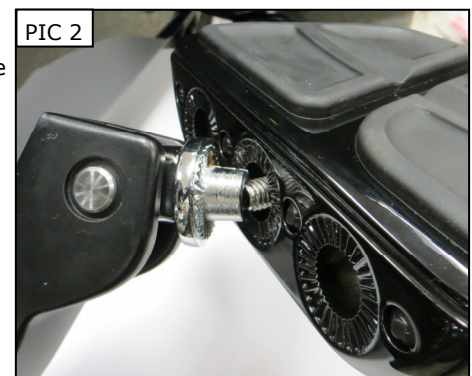


## ADJUST THE KINETIC MINI BOARD ANGLE:

**Kuryakyn®**

**STEP 6** Loosen (but do not remove) the 5/16" screw. PIC 3 Adjust the angle to the desired position. Ensure that the splines are engaged and retighten the screw.

**STEP 7** Fold the board up and ensure that it does not contact any part of the bike. Adjust if necessary.

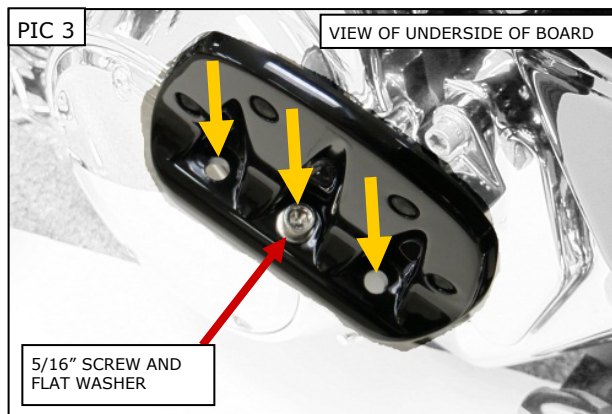

### **WARNING**

ENSURE THAT THE INSTALLATION OF THESE BOARDS DOES NOT INTERFERE WITH THE PROPER OPERATION OF THE MOTORCYCLE **BEFORE** RIDING. INTERFERENCE WITH THE CONTROLS OR ANY COMPONENT ON THE MOTORCYCLE MAY CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

### **NOTICE**

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

*Ride On!*

PAGE  
**3**

**KINETIC MINI BOARDS without ADAPTER**

**INSTALLATION**