



TRANSMISSION COVER

7710

PARTS INCLUDED

- 1 Chrome Cover for Left Side
- 1 Standoff Stud M10 x 1.25 x 6
- 1 Flat Washer 10.3mm I.D. x 20mm O.D.
- 1 Flange Bolt - Chrome M6 x 1.0 x 16mm
- 1 Large Chrome Cover for Right Side
- 1 Slotted Black Bracket
- 1 Right Angle Black Bracket
- 3 Flat Washer - Black Plastic 8mm I.D. x 1/2" O.D.
- 1 Waisted Flange Bolt M8 x 1.25 x 27mm
- 1 Threaded Spacer 14mm O.D. x 11mm
- 1 Flange Bolt M8 x 1.25 x 16mm
- 1 Socket Head Cap Screw M8 x 1.25 x 12mm
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Metric Combination Wrenches, Set of Metric Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.


-cont.-

RIGHT SIDE

STEP 2 See PIC. 1. Remove the stock master cylinder cover. Remove or loosen the stock fasteners indicated by the arrows. Remove the engine oil dipstick and plug the hole temporarily.

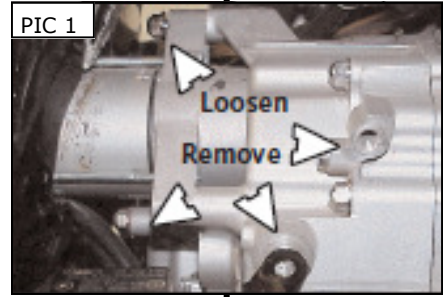


STEP 3 See PIC. 2. Install the right angle bracket and the slotted bracket as shown. The slotted bracket is in a vertical orientation. The right angle bracket is placed horizontally. They can only be installed one way.

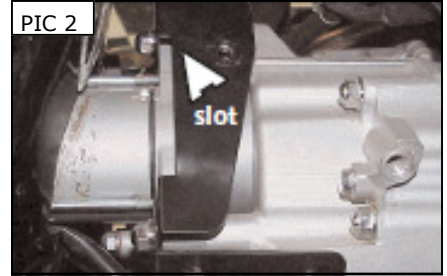

STEP 4 See PIC. 3 & 4. Shown at the left is the "waisted" bolt. Insert this bolt in the right side cover as shown. This bolt will be on the same plane as the slots in the cover. Screw the threaded spacer all the way on to this bolt until it will no longer engage the threads.




STEP 5 See PIC.5. Install the right side cover as shown. Note the location of the socket head and waisted bolts. Place plastic flat washers under the chrome bolt heads. Replace the dipstick.


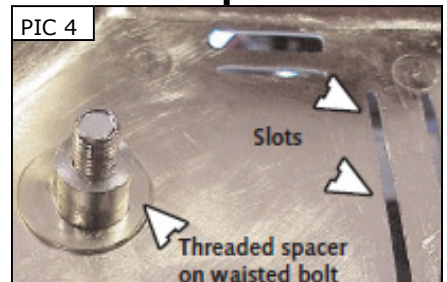


LEFT SIDE

STEP 6 See PIC. 6 & 7. Remove the stock fasteners at the locations shown. Install the standoff stud and stainless flat washer as indicated. A combination wrench can be used to tighten this standoff.

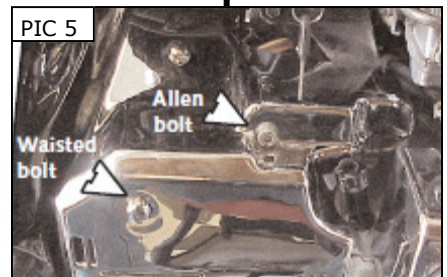

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

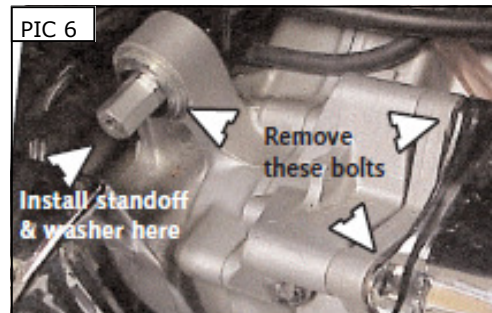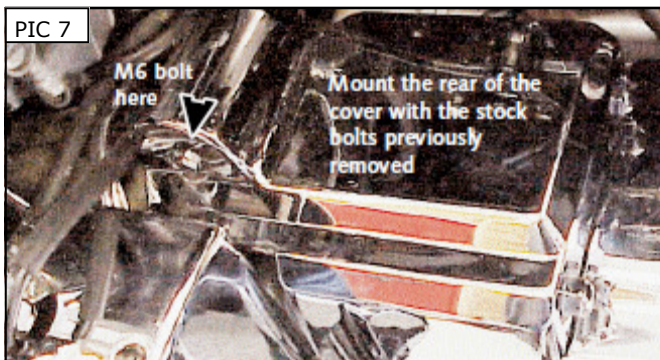

Ride On!