



**SKULL HORN COVER**

**7718**

**FITS: '91-UP H-D MODELS WITH COWBELL HORN COVER**

**PARTS INCLUDED**

- 1 Skull Horn Cover
- 1 Alcohol Pad
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**PROCEDURE**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** Clean the stock horn cover with the included alcohol cleaning pad and allow the area to fully dry.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.


**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 3** Using the back of your fingernail, rub the backing of the adhesive pad on the emblem to activate the catalyst. (See [PIC.2.](#))

**STEP 4** Remove the backing from the adhesive tape and press and hold the cover in place for one (1) minute. Full bonding strength will occur in 24 hours.



**COWBELL HORN COVER**

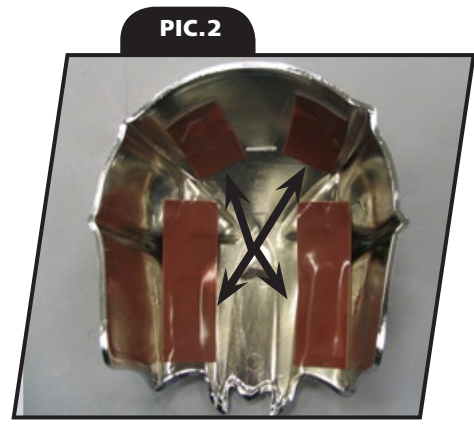

*Ride On!*