



**LOWER LEG DEFLECTOR SHIELDS WITH ACCENTS 7768**

**PARTS INCLUDED**

- 1 Right Side Lower Leg Deflector Shield
- 1 Left Side Lower Leg Deflector Shield
- 1 Right Side Fender Mount Accent
- 1 Left Side Fender Mount Accent
- 1 Alcohol Pad
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**PROCEDURE**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**STEP 2** Clean the lower fork leg (PIC 1) and fender mount thoroughly. Using a mild soap and warm water, clean the lower fork leg making sure to remove all contaminants. Failure to clean this surface will result in poor adhesion. Rinse and dry the area completely.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 3** As shown in PIC 2, test fit the Fender Mount Accent to the front fender mount boss. The accents are marked left and right. Mark the location of best fit with masking tape to aid in final installation.

**STEP 4** Test fit the Deflector Shield to the lower fork leg, note that there is a Left and Right side Deflector Shield. Make sure that mounting the Deflector shield will not interfere with the Fender Mount Accent. Mark the location of best fit with masking tape to aid in final installation.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 5** Clean the mounting area of the lower fork leg and fender mount with the supplied alcohol pad, dry the area completely with a clean cloth. First, rub the adhesive backing on the Fender Mount Accent to activate the adhesive. Remove the tape backing and apply over the fender mount using any markings made in Step 3 as a guide.

**STEP 6** Press and hold the Fender Mount Accent in place for one full minute, full bonding strength will occur in 24 hours.

**STEP 7** Rub the adhesive backing on the Deflector Shield to activate the adhesive. Remove the tape backing and apply the Deflector Shield to the lower fork legs using the markings made in Step 4 as a guide. Check that there is no interference between the Deflector Shields and the Fender Mount Accents.


**STEP 8** Press and hold the Deflector Shield in place for one full minute, full bonding strength will occur in 24 hours.

**STEP 9** Repeat all steps for the fork leg on the opposite side.

*Ride On!*

**Kuryakyn®**

PIC. 1

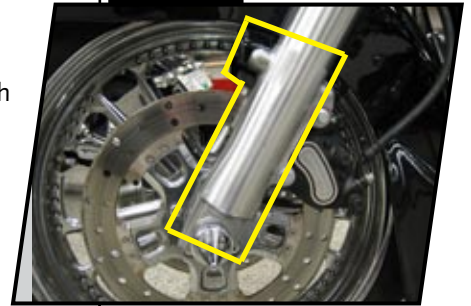

PIC. 2



PIC. 3



**PAGE**

**2**

**LOWER LEG DEFLECTORS & ACCENTS**

**INSTALLATION**