



LOWER FRONT FRAME COVER

7772

FITS: ALL '91-UP ELECTRA GLIDES, STREET GLIDES, ROAD GLIDES, TOUR GLIDES, ROAD KINGS AND TRIKES

PARTS INCLUDED

- 1 Lower Front Frame Cover
- 1 Mount Bracket ('91-'08 models)
- 1 Mount Bracket ('09-up models)
- 1 Hardware Kit
 - 2 10-24 x 1/2" Button Socket Cap Screws
 - 1 3/18-16 x 1" Button Socket Cap Screw
 - 1 Spacer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

FOR '91-UP MODELS

STEP 2 Remove the screw and washer that secure the lower stabilizer link as shown in PIC. 1; they will be used again.

-cont.-

STEP 3 Place the mounting bracket ('91-'08 models) over the stabilizer and start the screw and washer as shown in PIC. 2; do not tighten yet.

STEP 4 Place the cover on the mounting bracket and line the holes in the cover up with the mounting holes in the bracket. Check for clearance between the cover and the frame; adjust the bracket as needed to achieve adequate clearance.

STEP 5 Remove the cover and tighten the screw; torque to 24 ft. lbs.

STEP 6 Place the cover on the bracket and secure with the two screws from the hardware kit. (See PIC. 3)

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

FOR '09-UP MODELS

STEP 1 Loosen the 2 screws shown in PIC 4.

STEP 2 As shown in PIC 5, slide the Mounting Bracket ('09-up models) behind the screw heads (and washer on rear screw). Press down on the Bracket and tighten the screws.

NOTE If there is no engine guard installed on the motorcycle, use the supplied 3/18-16 x 1" Button Socket Cap Screw and spacer in the front hole. Place the Spacer behind the bracket and thread the screw in to the hole.

STEP 3 Place the Cover on the Mounting Bracket and line the holes in the cover up with the mounting holes in the Bracket. Check for clearance between the cover and the frame.


STEP 4 As shown in pic 3, secure the cover with the two 10-24 x 1/2" screws from the hardware kit.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


Ride On!

Kuryakyn®


PIC. 1

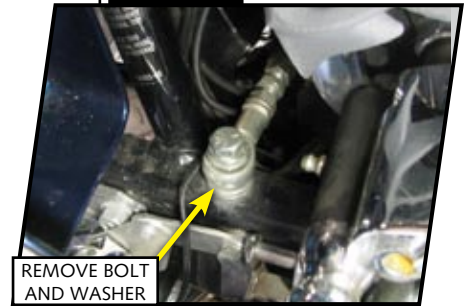


PIC. 2

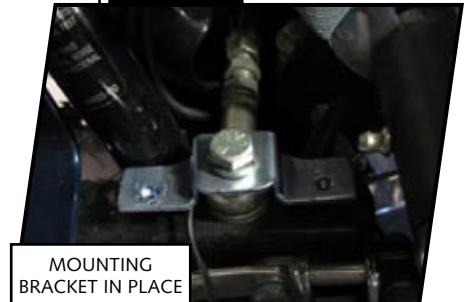

PIC. 3

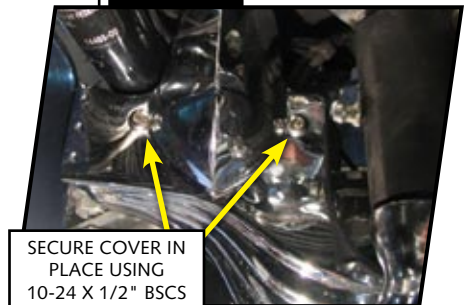

PIC. 4

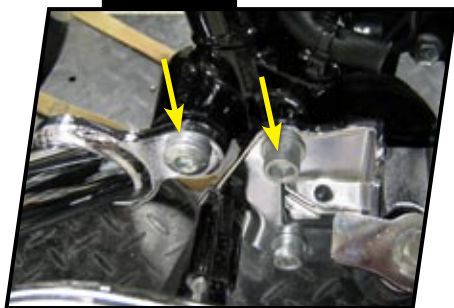

PIC. 5



PAGE

2

LOWER FRONT FRAME COVER

INSTALLATION