



DOWNTUBE CROSSBRACE COVER

7774

PARTS INCLUDED

- 1 Outside Crossbrace Cover
- 1 Inside Crossbrace Cover
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 As shown in PIC 1, locate the inside and outside crossbrace covers.

STEP 3 Clean the front crossbrace with warm soapy water and a clean towel. Dry the area completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 4 As shown in PIC 2, test fit the inside crossbrace cover to the inside (engine side) of the crossbrace. Center the crossbrace cover and mark the location with masking tape. This will aid in final installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 5 Clean the inside of the crossbrace with the alcohol pad provided. Wipe dry with a clean cloth.

STEP 6 Rub the tape backing on the inside crossbrace cover to activate the adhesive. Remove the tape backing and apply the inside crossbrace cover using any markings made in Step 4 as a guide.

STEP 7 Hold the cover in place for one minute. Full bonding strength will occur in 24 hours.

OUTSIDE CROSSBRACE COVER INSTALLATION

STEP 8 As shown in PIC 3, test fit the outside crossbrace cover to the outside of the crossbrace. Center the crossbrace cover and mark the location with masking tape. This will aid in final installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 9 Clean the outside of the crossbrace with the alcohol pad provided. Wipe dry with a clean cloth.


STEP 10 Rub the tape backing on the inside crossbrace cover to activate the adhesive. Remove the tape backing and apply the inside crossbrace cover using any markings made in Step 8 as a guide.

STEP 11 Hold the cover in place for one minute. Full bonding strength will occur in 24 hours.

Ride On!

Kuryakyn[®]

PIC. 1

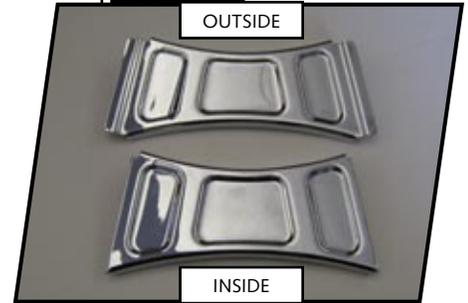

PIC. 2



PIC. 3



PAGE

2

DOWNTUBE CROSSBRACE COVER

INSTALLATION