



**ONE-PIECE INNER PRIMARY COVER 7780**

**FITS: '09-UP ELECTRA GLIDES, STREET GLIDES, ROAD GLIDES, AND ROAD KINGS**  
**NOTE: WILL ALSO FIT '07-'08 MODELS IF THE STOCK CROSS-OVER EXHAUST SYSTEM**  
**HAS BEEN REMOVED AND REPLACED WITH A 2-1 OR A STAGGERED DUAL SYSTEM.**

**PARTS INCLUDED**

- 1 One Piece Inner Primary Cover
- 1 Hardware Kit Including:
  - 1 1/4-20 x 5" Socket Head Cap Screw
  - 3 1/4-20 x 1-1/2" Socket Head Cap Screw
  - 5 1/4" Chrome Hot Spots
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**TOOLS SUGGESTED**

Set of Hex Wrenches, Torque Wrench with Hex Sockets

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**PROCEDURE**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**NOTE** A factory service manual may be helpful in performing this installation

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Remove the fastener shown in PIC 1.

**STEP 3** Remove the three stock fasteners shown in PIC 2.

**STEP 4** Position the inner primary cover assembly on the bike so the tabs align with the hardware locations on the bike. Fasten them with the proper bolts from the hardware kit. Remember that the longest bolt will go in the very front of the inner primary cover (PIC 3) towards the front of the bike. Leave the cover loose for the time being.

**STEP 5** When you have the inner primary cover in the desired locations, gently press down on the inside (closest to the shift linkage) and begin to tighten the hardware one at a time starting from the back and moving forward.

**STEP 6** Tighten all of the fasteners to the proper torque - refer to factory service manual. Insert 1/4" Hot Spots to the ends of the bolts.

**ATTENTION!** Check for proper shift-linkage operation and clearance before operating the motorcycle.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


*Ride On!*

**Kuryakyn**<sup>®</sup>

PIC. 1



PIC. 2

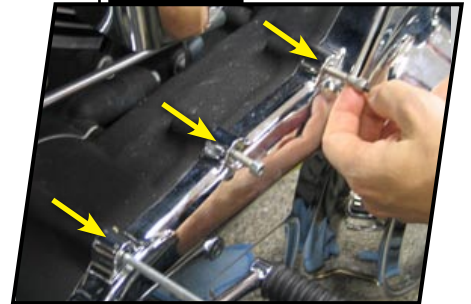

PIC. 3



**PAGE**

**2**

**ONE-PIECE INNER PRIMARY**

**INSTALLATION**