



BOOMERANG COVERS

7851

FITS ALL '00-'07 SOFTAIL MODELS (EX. '00-'07 FAT BOY, '00-'07 DEUCE AND '05-'07 DELUXE.) NOTE: WILL FIT '00-'06 FAT BOY AND '05-'07 DELUXE IF O.E. REAR EXHAUST BRACKET HAS BEEN REMOVED.

PARTS INCLUDED

- 1 Nut Cover Cap Set
- 2 Beauty Ring
- 1 Right Boomerang Cover
- 1 Left Boomerang Cover
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Allen wrenches, Torx wrenches, combination wrenches.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

PROCEDURE

STEP 1 Remove the stock passenger footrest from the footrest support. Remove the footrest support from the frame.

STEP 2 Remove the two fasteners securing the strut cover. Install the boomerang cover; the tab at the top of the boomerang cover slides beneath the strut cover. See [PIC.1](#).

-cont.-

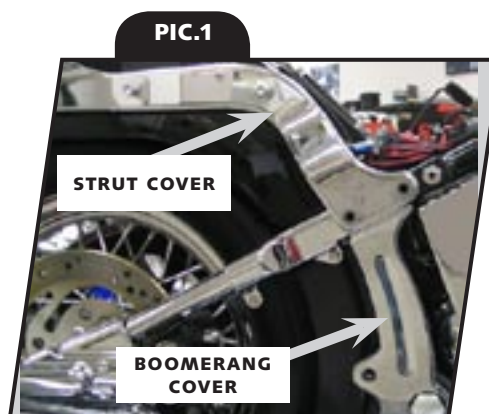

STEP 3 Install the nut cap. The nut caps are right side and left side specific. The right side nut cap has a shallow depression; the left side nut cap has a deeper depression. Secure the nut cap with the Allen setscrew. See [PIC.2](#).

STEP 4 Install the beauty ring over the footrest support fastener. The footrest support fits into the recessed face of the beauty ring. Re-install the stock footrest support through the boomerang cover and into the frame. See [PIC.2](#).

STEP 5 Re-install the footrest and secure with the stock hardware. Repeat for the opposite side.

Ride On!

