



DELUXE NECK COVERS

7866

PARTS INCLUDED

- 1 Right Hand Neck Cover Assembly
- 1 Left Hand Neck Cover Assembly
- 2 Down Tube Covers
- 2 Down Tube Cover Clamps
- 1 Hardware Kit Including:
 - 4 3/8" x 1-1/2" Adhesive Foam Pads
 - 4 3/4" x 1-1/2" Adhesive Foam Pads
 - 2 5/16" Flat Washers
 - 4 #8-32 x 1/2" Socket Head Cap Screws
 - 2 5/16"-18 x 1-1/4" Button Head Cap Screws
 - 1 #10-24 x 2-1/2" Socket Head Cap Screw
 - 1 8" Black Cable Tie
 - 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Socket Set and Ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

NOTE: Due to variations from motorcycle to motorcycle, some motorcycles may require a little extra pressure to engage the fork lock after installation of the neck covers.

-cont.-

- STEP 2** Cut the cable ties that secure the clutch cable to the down tube.
- STEP 3** Remove the wire loom clamp, rubber tank bolt cover, and the gas tank bolt from the right side (sitting on motorcycle) of the neck. PIC 1
- STEP 4** Remove the rubber tank bolt cover, and gas tank bolt from the left side (sitting on motorcycle) of the neck. PIC 1
- STEP 5** Remove the reflectors from the down tubes, by moving them back and forth (they are held in place with double-sided adhesive).
- STEP 6** Clean the inside of the down tube covers and clamps with the included alcohol pads.

NOTICE Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.



NOTICE The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

- STEP 7** Rub the paper backing on the adhesive foam to activate the adhesive before applying. Remove the adhesive backing; position the adhesive foam as shown in PIC 2. Press in place for one minute to ensure proper adhesion. Repeat for the other down tube cover and clamp.
- STEP 8** Snap the down tube covers into place; position them just below the weld line on the down tube.
- STEP 9** Install the smaller foam pads from the hardware kit on the inside of the clamp halves and the inside of the covers as shown in PIC 2.

NOTE: On Road Glides only – the top 3/8"-16 x 3-1/2" hex head fastener securing the fairing mount bracket to the steering neck must be removed and then reinstalled in the opposite direction to allow clearance for the left side neck cover. PIC 3

- STEP 10** Place the left cover on the motorcycle, and start a 5/16"-18 x 1-1/4" button socket cap screw and flat washer to secure the cover and the tank to the frame. Leave finger tight for now.
- STEP 11** Place the right cover on the motorcycle, and start a 5/16"-18 x 1-1/4" button socket cap screw and flat washer to secure the cover and the tank to the frame. Leave finger tight for now.


-cont.-

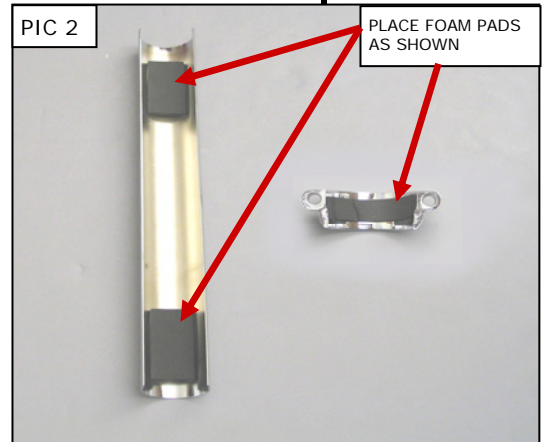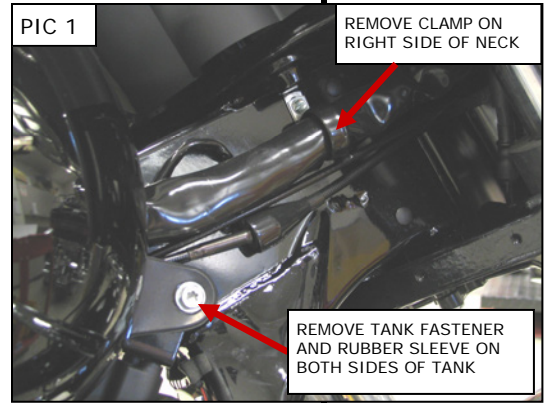

STEP 12 Start the #10-24 X 2-1/2" socket head cap screw that secures the top of the neck covers together. Leave finger tight for now.

STEP 13 Start two 8-32 x1/2" socket head cap screws, that secure the down tube cover clamps to the cover, on the left and right side as shown in PIC 4. Leave finger tight for now.

STEP 14 Ensure that the wires are in the recessed area of the neck covers.

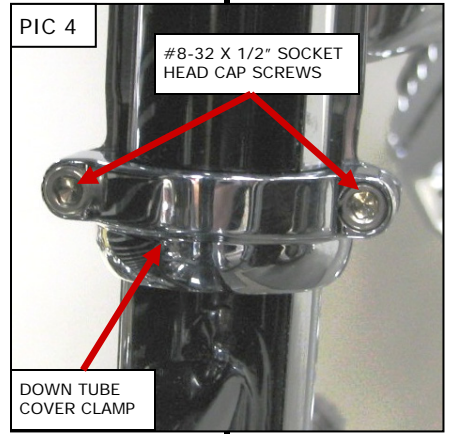

NOTICE Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

NOTICE When installing the neck covers, you will need to slightly push down while tightening the top fastener. This will allow adequate clearance between the top of the neck covers and the inner fairing or headlight shroud when the bars are rotated all the way side to side.

STEP 15 Tighten the 5/16"-18 x 1-1/4" screws that secure the covers and the tank.

STEP 16 Tighten the #10-24 X 2-1/2" screw that secures the top halves of the covers together.

STEP 17 Tighten the screws from STEP 13 that secure the down tube cover clamps to the covers.

STEP 18 Secure the clutch cable to the down tube in the same location that the cable tie that was removed in STEP 2 was located.

STEP 19 Turn handlebars in both directions to their full stop position to make sure that the clutch cable, throttle cables, wiring or any other component of the motorcycle, is not stretched or pinched.

WARNING ENSURE THAT THE CLUTCH CABLE, THROTTLE CABLES, WIRING OR ANY OTHER COMPONENT OF THE MOTORCYCLE IS NOT PINCHED OR STRETCHED AT ANY POINT WHEN THE HANDLEBARS ARE TURNED TO THEIR FULL STOP POSITION ON EITHER SIDE. STRETCHED OR PINCHED COMPONENTS CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SERIOUS INJURY OR DEATH.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.