



TRANSMISSION SHROUD SET

7877

FITS: '07-UP TOURING MODELS (DRESSERS, ROAD KINGS, ROAD GLIDE, STREET GLIDE) WITH TRUE DUAL HEAD PIPES

PARTS INCLUDED

- 1 Front Transmission Shroud
- 1 Rear Transmission Shroud
- 1 Hardware Kit containing:
 - 4 Stand-Off Studs 5/16"-18 x 1-1/4"
 - 1 1/4-20 x 3/4" Button Head Cap Screw (BHCS)
 - 4 10-24 x 3/8" Button Head Cap Screw
 - 4 5/16 Flat Washers
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

ATTENTION! Some applications will require loosening or removal of the exhaust for installation.

NOTE It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Set of hex wrenches, set of combination wrenches or socket/ratchet set, torque wrench.

PROCEDURE


STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the stock fastener that is in the location marked "A" in PIC.1.

STEP 3 Install an included stand-off stud with a flat washer in location "A"; torque to 13-18 ft. lbs.

STEP 4 Remove the stock fastener in location "B"; install an included stand-off stud with a flat washer in location "B". Torque to 13-18 ft. lbs.

-cont.-

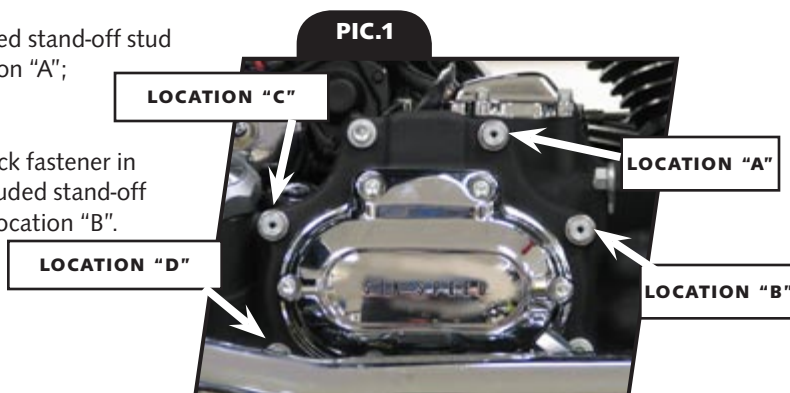

STEP 5 Remove the stock fastener in location "C"; install an included stand-off stud with a flat washer in location "C". Torque to 13-18 ft. lbs.

STEP 6 Remove the stock fastener in location "D"; install an included stand-off stud with a flat washer in location "D". Torque to 13-18 ft. lbs.

STEP 7 Slide the Front Transmission Cover into place; first, slide the bottom of the cover behind the exhaust then pivot the cover in until it locates over the stand-offs.

STEP 8 Slide the Rear Transmission Cover into place.

NOTE Temporarily removing the fastener securing the wire clamp, shown in [PIC.2](#), will ease installation. Ensure that the fastener is replaced after the cover has been secured in place.

STEP 9 Secure the two covers together with the 1/4"-20 x 3/4" BHCS; loosely for now. See [PIC.3](#).

STEP 10 Install the four 10-24 fasteners through the covers and into the stand-off stud; loosely for now.


STEP 11 Re-install the wire clamp.

STEP 12 Ensure proper clearance and alignment of the covers then tighten the 1/4-20 and 10-24 fasteners.

Ride On!

Kuryakyn

PIC.2

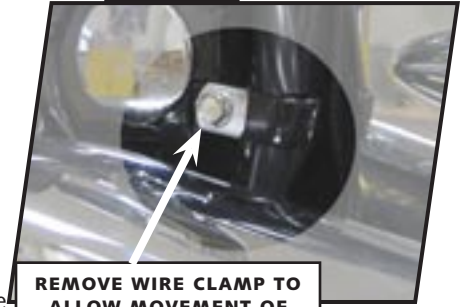

REMOVE WIRE CLAMP TO ALLOW MOVEMENT OF WIRES.

PIC.3



PAGE

2

TRANSMISSION SHROUD SET INSTALLATION