



ISO BOARDS

7905

PARTS INCLUDED

- 1 Left ISO-Board
- 1 Right ISO-Board
- 1 Hardware Kit Including:
  - 4 1/4"-20 x 1-1/4" Shoulder Bolts
  - 4 1/4"-20 Nylock Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.



This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.



IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Combination Wrenches, IN/LBS Torque Wrench and Socket Set

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.



YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Remove the stock footboards from the motorcycle. PIC 1 Set these aside, they will not be reused.

**STEP 3** Place one of the new ISO-Boards on the footboard mounting brackets to position the adjustable mounts. With a hex wrench tighten the bolts that hold the mounts in place. PIC 2 Check all fasteners on each footboard for tightness. PIC 2




**STEP 4** Using the 1/4"-20 x 1-1/4" shoulder bolts and nylock nuts, install the ISO-Boards to the OEM mounting brackets. PIC 3

**STEP 5** Tighten the mounting hardware to 84-96 IN/LBS.

**STEP 6** Repeat step 2 through 4 for the other ISO-Board.

**NOTICE**

**It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.**

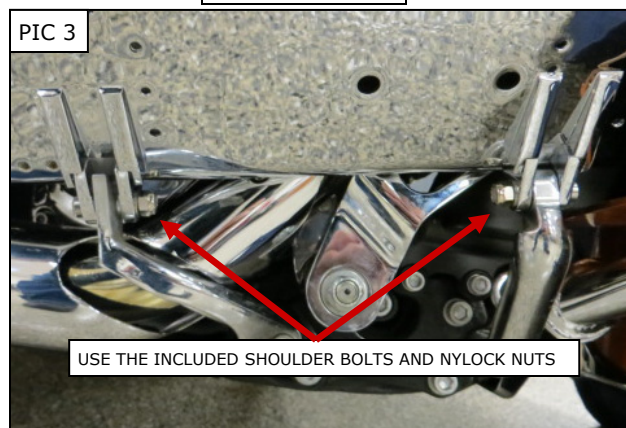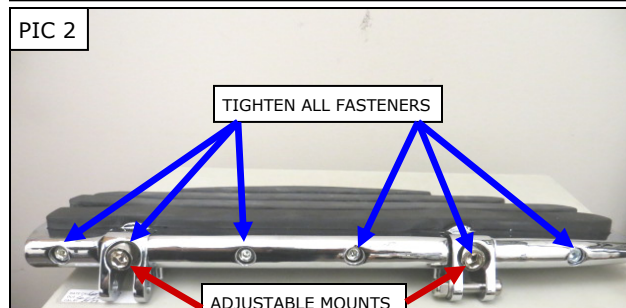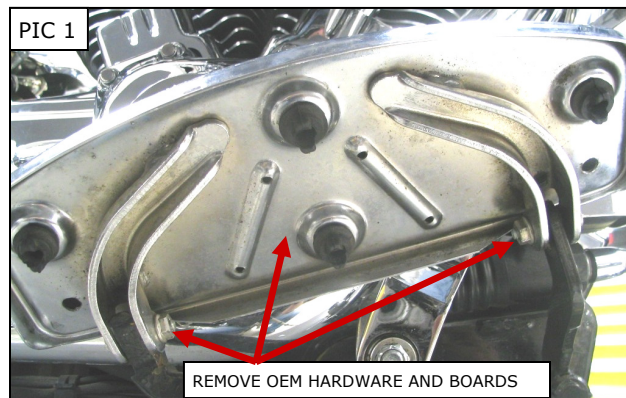

*Ride On!*