



ADJUSTABLE PASSENGER PEGS

7926

PARTS INCLUDED

- 1 Right Adjustable Passenger Peg Assembly
- 1 Left Adjustable Passenger Peg Assembly
- 2 ISO Pegs
- 2 Nylon Rest Stops
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

⚠ WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
⚠ CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.

NOTICE **IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.**

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Hex Bit Sockets and Torque Wrench—FT/LBS

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

⚠ WARNING **YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.**

NOTE: These assemblies are intended for use on '93-'06 STOCK H-D footboard mounts. This kit IS NOT compatible with H-D's "Adjustable Passenger Footboard Mounting Kit," Harley P/N 50789-99 or H-D's chrome passenger footboard support kit, P/N 52714-04.

STEP 2 Be sure the stock footboard brackets are set in the middle mounting position on the bike.

STEP 3 Remove the lower clamp halves on the adjustable peg brackets.

STEP 4 Establish the proper orientation of the assembly. When the adjustable arms are retracted, they should lay horizontally, extending toward the rear of the motorcycle. PIC 1 and PIC 2 When they are deployed, they will angle up and toward the front of the bike. PIC 3 and PIC 4 There are three screws on each clamp assembly. **When the Adjustable Pegs are installed on the appropriate side of the bike, the single 5/16" clamp screw will be forward of the stock footboard mount.**

STEP 5 Place the upper clamp and swing arm assembly on top of the stock footboard mount. Place the nylon rest stop on the lower clamp so that it is in the position shown in PIC 6. Install the corresponding lower clamp half, but do not tighten the bolts at this time. Slide the adjustable peg assembly outward, away from the motorcycle as far as it will go. This should still allow the footboard to fold up completely. Tighten this assembly at this time. Keep the gap in the front and rear of the clamp equal — do not over tighten the clamp bolts! **(10–14 ft/lbs for 1/4"–20 fasteners, 15–18 ft/lbs for 5/16"–18 fasteners.)**







STEP 6 Repeat the installation procedure on the opposite side of the bike.

STEP 7 See PIC 5. To adjust the pegs, retract the sliding bolt, and rotate it into the lock slot. Move the swing arm forward and backward to your approximate desired position and release the lock bolt. Move the swing arm front and rear until the lock bolt snaps into place. Re-engage the lock bolt.

WARNING THE FOLDING ARM IS INTENDED AS A FOOTREST AND IS NOT INTENDED TO BE USED FOR MOUNTING OR DISMOUNTING THE MOTORCYCLE OR TO SUPPORT THE FULL WEIGHT OF THE PASSENGER.

CAUTION Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

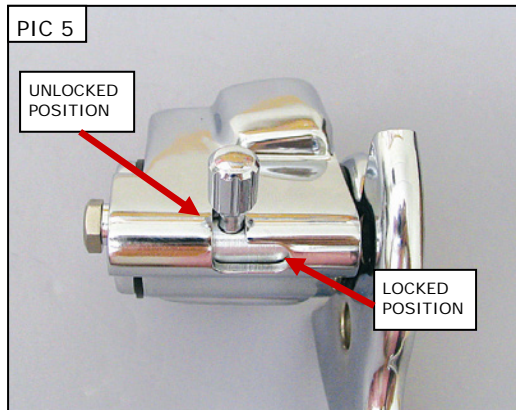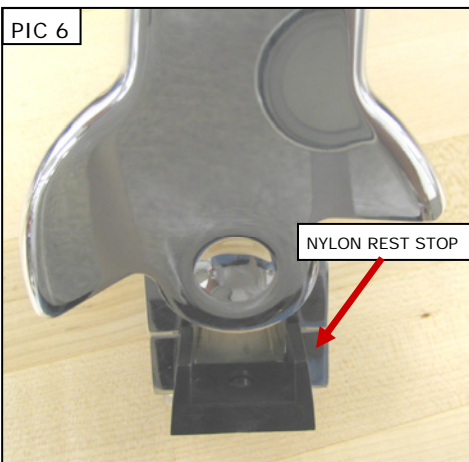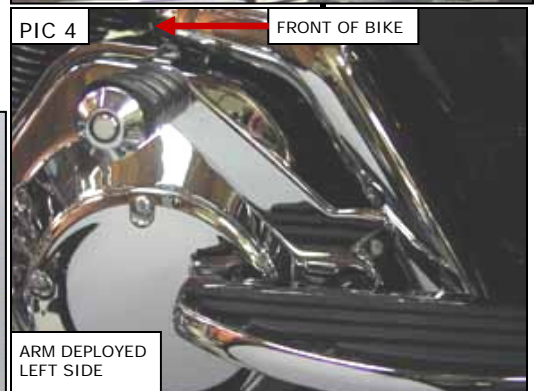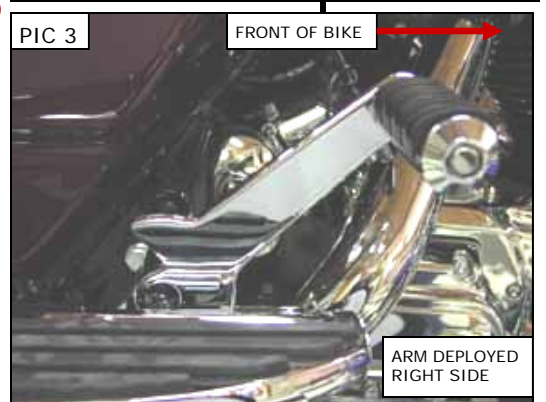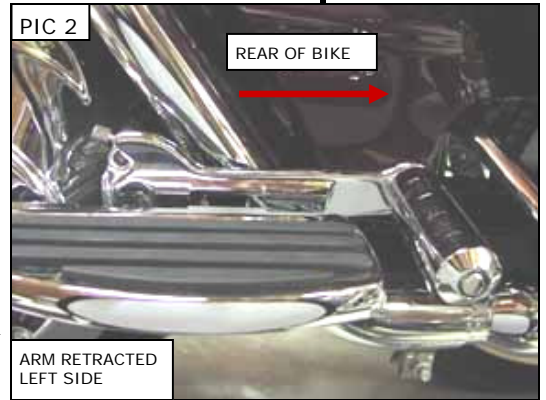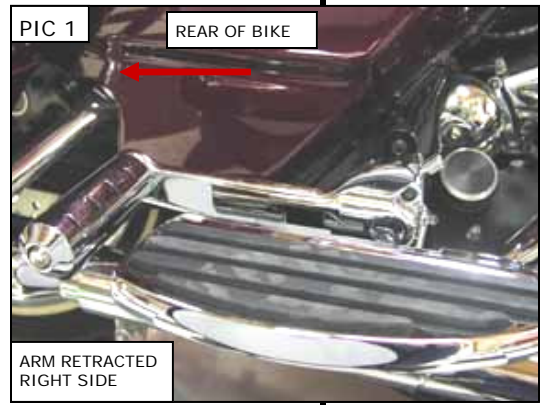

Ride On!

ADJUSTABLE PASSENGER PEGS INSTALLATION