



BRAKE PEDAL COVER

8022

FITS: '99-UP XL883C SPORTSTER CUSTOM, '99-UP XL1200C SPORTSTER CUSTOM, '03'08 FXDWG DYNA WIDE GLIDE, '08-UP FXDF FAT BOB WITH FORWARD CONTROLS, '02'06 VRSCA V-ROD, '04-'05 VRSCB V-ROD, '07-UP VRSCAW V-ROD WITH & WITHOUT
ABS, '07-UP VRSCDX NIGHT ROD SPECIAL WITH & WITHOUT ABS, '07 VRSCX V-ROD
LIMITED EDITION, '09 VRSCF V-ROD MUSCLE

'01-UP GL 1800 GOLD WING

PARTS INCLUDED

- 1 Brake Cover Top
- 1 Brake Rubbers
- 1 Brake Cover Bottom
- 2 Blue Patched S.H.C.S. #8-32 x .313 Stainless Steel
- 2 10-24 x 1/2 Set Screw
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN! IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Separate the two halves of the brake pedal cover. Make sure the rubbers protrude evenly through the openings in the brake cover top.

STEP 3 Sandwich the stock brake pedal tread between the top and bottom halves. The


brake lever must pass through the opening in the

bottom half of the cover.

STEP 4 Secure the top to the bottom with the 10–24 socket heads provided.

STEP 5 Any free play in the cover can be removed by tightening the set screws in the back half of the cover. Do not over tighten

-cont.-

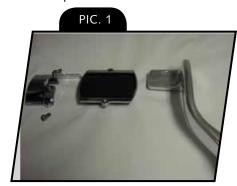


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Küryakyn

Ride On!



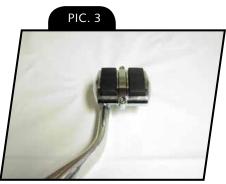

PAGE 2

BRAKE PEDAL COVER

INSTALLATION