



**PHANTOM AXLE COVERS 8202**

**PARTS INCLUDED**

- 2 Phantom Axle Covers—Black
- 1 Hardware Kit Including:
  - 2 1/4"-20 x 7/8" Hex Head Cap Screws—HHCS
  - 2 Mounting Tab Clamps with 1/4" Hole
  - 2 1/4" I.D. Internal Tooth Lock Washers
  - 4 #10/32 x 1/2" Button Socket Cap Screws—BSCS
  - 4 #10 Wave Washers
  - 2 "L" Brackets
  - 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
----------------	--

<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>
---------------	--

<b>NOTICE</b>	<b>IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.</b>
---------------	---

**TOOLS SUGGESTED**

Set of Hex Wrenches, Set of Combination Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

**NOTE:** Check to be certain there is clearance between the Phantom covers and saddlebags and/or the OEM "Shotgun" style pipes. These items may require spacing if adequate clearance does not exist.

**NOTE:** Pictures shown of Chrome parts. Installation of Black parts will be the same.

<b>WARNING</b>	<b>YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.</b>
----------------	---

**STEP 2** Temporarily remove any accessories that obscure the axle and adjuster area, such as saddlebags.




**STEP 3** Using a combination wrench, loosen the **LOCK NUT** only on the axle adjuster. **DO NOT** loosen the axle adjuster itself. PIC 1

**STEP 4** On each side of the motorcycle, insert the "L" bracket between the locknut and the swing arm as shown in PIC 1. Tighten the locknut securely clamping the "L" bracket into place.

**STEP 5** Install the small tab clamp to the rear of each cover as shown (PIC 2)— loosely for now. Use the 1/4"-20 x 7/8" hex fasteners and 1/4" I.D. internal tooth star washers.

**STEP 6** "Hook" the rear tab clamp over the end of the Swing Arm where indicated. PIC 3 Using the #10-32 B.S.C.S. and #10 Wave Washers, fasten the Phantom covers to the mounting brackets. Tighten the 1/4" hex fastener at the rear of the cover to tighten the tab clamps.

**STEP 7** Re-install any accessories removed in STEP 2.

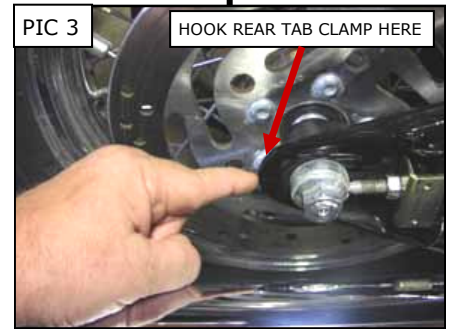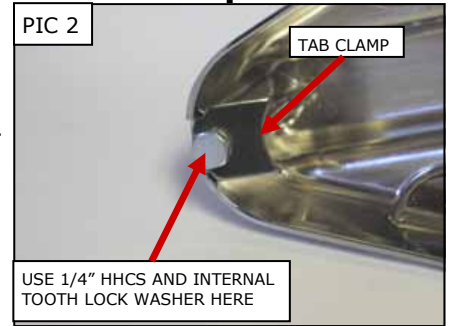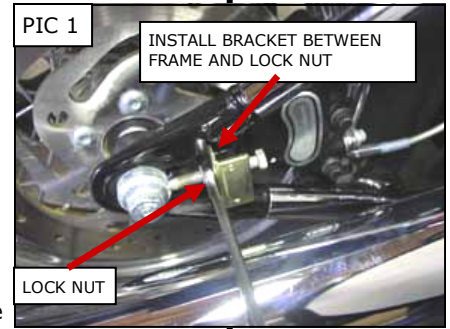

**NOTICE**

**It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.**

*Ride On!*