



**OIL FILLER SPOUT COVER**

**8264**

FITS HARLEY-DAVIDSON '93-'06 DRESSER AND ROAD KING MODELS (EX. SCREAMIN' EAGLE MODELS WITH 103" ENGINE). COMPATIBLE WITH H-D ENGINE-TRANSMISSION INTERFACE COVERS 66503-00, 66503-02, AND 66096-02. ALSO COMPATIBLE WITH KÜRYAKYN TRANSMISSION SHROUD P/N 8201 AND P/N 8209.

**PARTS INCLUDED**

- 1 Oil spout cover
- 1 Hardware kit, including:
  - 1 1/4-28 x 7/8" button head fastener
  - 1 1/4-20 x 1 1/2" fastener
  - 2 1/4 washer
  - 1 0.270" spacer
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**TOOLS SUGGESTED**

Allen wrenches.


**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**PROCEDURE**

**STEP 1** Remove the oil filler cap/dipstick assembly; stuff a rag in the oil filler hole to prevent any foreign objects from falling into the oil filler hole.

**STEP 2** Remove the stock fastener from the starter end cover; remove the rear outermost stock fastener from the transmission top cover. See [PIC.1](#).

**-cont.-**

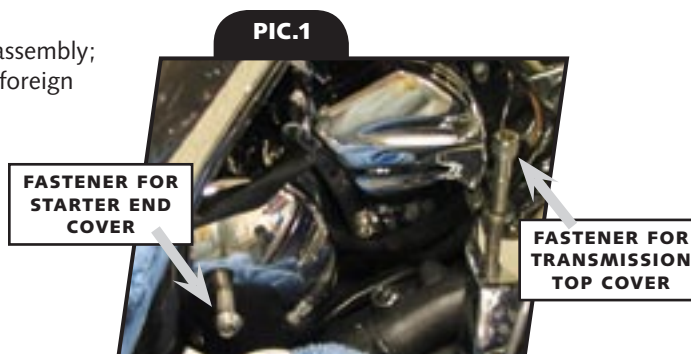

**STEP 3** Install the oil spout cover into position. For motorcycles without a transmission cover (Küryakyn P/N 8201 or P/N 8209, or H-D Engine Transmission Interface Cover), install the 0.270" spacer between the oil spout cover and the transmission top cover; secure with the supplied 1/4-20 x 1-1/2" fastener and flat washer.


**NOTE** Motorcycles with a transmission shroud do not need the spacer.

**STEP 4** Secure the oil spout cover to the starter end cover with the 1/4-28 x 7/8" button head fastener and washer. See PIC.2.

**ATTENTION!** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Küryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

**STEP 5** Remove the rag from the oil filler hole and reinstall the oil filler cap/dipstick assembly.

*Ride On!*

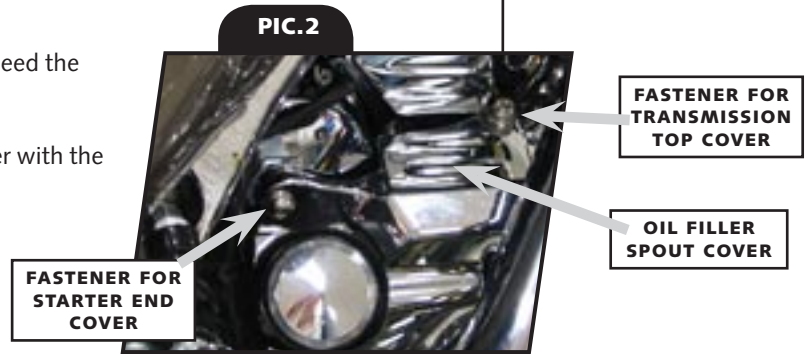

**PAGE**

**2**

**OIL FILLER SPOUT COVER INSTALLATION**