



CHROME SWINGARM COVER SET 8288

PARTS INCLUDED

- 1 Upper Left Swing Arm Cover Die Cast
- 1 Left Upper Tube Cover
- 1 Left Lower Tube Cover
- 1 Upper Right Swing Arm Cover Die Cast
- 1 Right Upper Tube Cover
- 1 Right Lower Tube Cover
- 1 Hardware Kit Including:
 - 2 Upper Swing Arm Brackets—Flat Brackets
 - 1 Black Bracket—"P" Clamp
 - 4 #8 Split Lock Washers
 - 2 1/4" Flat Washers
 - 1 1/4"-20 x 5/8" Socket Head Cap Screw—SHCS
 - 2 #6-32 x 5/16" Hex Head Cap Screws—HHCS
 - 2 #6-32 x 5/16" Button Socket Cap Screws—BSCS
 - 1 1/4"-20 Nylock Nut
 - 2 #8-32 x 1/2" Hex Head Cap Screws—HHCS
 - 4 1/8" x 3/8" Flat Washers
- 1 Left Phantom Cover—**NO LIGHT**
- 1 Right Phantom Cover—**NO LIGHT**
- 1 Hardware Kit for Phantom Cover Including:
 - 2 Mounting Tab Clamps W/1/4" Hole
 - 2 L-Brackets
 - 2 1/4"-20 x 7/8" Hex Head Cap Screws—HHCS
 - 2 1/4" Internal Tooth Lock Washers
 - 4 #10-32 x 1/2" Button Socket Cap Screws—BSCS
 - 4 #10 Wave (curved) Washers
 - 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!
IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
----------------	--

NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
---------------	--

NOTICE	IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.
---------------	---

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.



YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Identify the components used on the right and left sides of the bike. The frame tube covers are cut to length to exactly fit the lengths of tubing on each side of the swingarm. To identify placement of these different tube covers, look for cutouts that will fit around various contours and tabs welded to the swing arm. The rear axle or "Phantom" covers are identified with "L" or "R" on the inner surface.

STEP 3 Snap the chrome tubing covers into place on each side of the swingarm. PIC 1 Although these fit tightly, you may place a couple small dabs of silicone on the inner surface of each cover for added security.

STEP 4 Install the upper swing arm covers.

RIGHT SIDE: PIC 2 and PIC 3 show the orientation of the "flat" and "P" style clamps on the cover. The "flat" clamp will be used on the end of the cover nearest the front of the bike, and the "P" clamp will be used nearest the rear. Just the "P" clamp is fastened with a 1/4"-20 x 5/8" Socket Head Cap Screw, 1/4" washer and a Nylock Nut. The "flat" clamp is fastened to the cover using the #6-32 x 5/16" fasteners. The HHCS is on the bottom and the BSCS is on the top. Do not over tighten the tension bolt that is screwed into the flat clamp. PIC 2 and PIC 3 Just tighten it up enough to take the movement out of the cover.







LEFT SIDE: This cover will attach in a similar manner to the right side, but instead of the "P" clamp in the rear location, it will attach to the belt guard mounting tab on the swing arm. The stock 5/16" bolt and nut will be used here, but a 5/16" flat washer will be placed over the mounting tab for added strength. (PIC 4 shows an installed upper swing arm cover — right side).

STEP 5 Install the rear Phantom Covers. Check for proper side orientation. Install the small tab clamp to the rear of each cover as shown (PIC 5) — loosely for now. Use the 1/4"-20 x 7/8" hex fasteners and 1/4" I.D. internal tooth star washers.

STEP 6 Loosen the rear axle adjuster lock nut – **DO NOT LOOSEN THE ADJUSTER!** Install the mounting brackets by sliding the brackets between the locknut and the frame as shown. PIC 6 Tighten the locknut against the bracket, firmly pinching the bracket into place.

STEP 7 "Hook" the rear tab clamp over the end of the Swing Arm where indicated. PIC 7 Using the #10-32 B.S.C.S. and #10 Wave Washers, fasten the Phantom covers to the mounting brackets. Tighten the 1/4" hex fastener at the rear of the cover to tighten the tab clamps.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

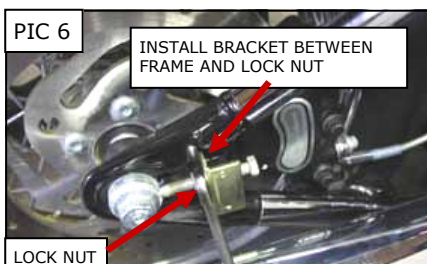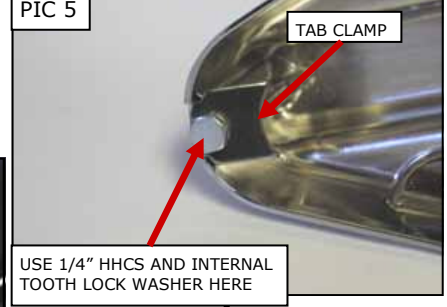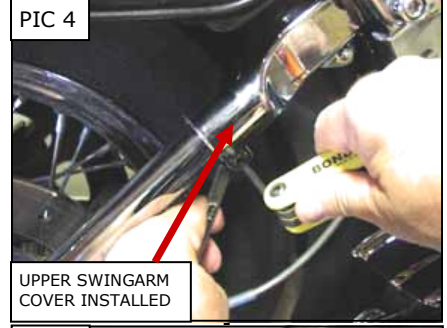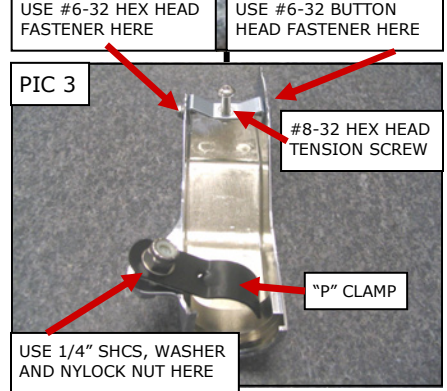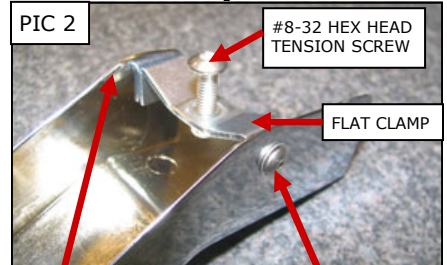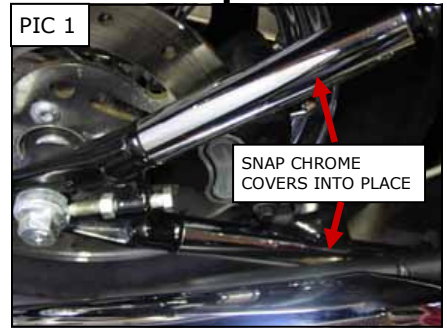

Ride On!