



DELUXE INNER PRIMARY COVER

8299

PARTS INCLUDED

- 1 Chrome Inner Primary Cover
- 1 Hardware Kit Including:
 - 2 "L" Bracket
 - 1 "Z" Bracket
 - 4 #6-32 x 1/4" Slotted Pan Head Screw
 - 1 1/4"-20 x 1/2" Socket Head Cap Screw — Chrome
 - 1 1/4" Hi-Collar Lock Washer — Chrome
 - 1 1/4" I.D. Flat Washer, Chrome
 - 1 5/16"-18 x 1 3/4" Hex Head Cap Screw — Chrome
 - 1 5/16" Special Trimmed Flat Washer — Steel
 - 1 5/16" I.D. x 7/8" O.D. x 1/4" Thick Spacer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Socket set and Ratchet, Flat Blade Screwdriver, Torque Wrench—in/lbs and ft/lbs

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

NOTE: Not compatible with lowering kits or crossover dual exhaust (one pipe on each side).

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-




STEP 2 Fasten the "L" Brackets to the chrome cover using the four #6-32 x 1/4" slotted pan head screws as shown in PIC.1. Then affix the "Z" bracket to the chrome cover using the 1/4"-20 x 1/2" socket head cap screw, lock and flat washer as shown on the right hand side of PIC.2 and a close-up of the finished installation in PIC.3.

STEP 3 Remove the four fasteners from the primary cover. PIC 4

STEP 4 Place the chrome cover on the inner primary and secure with the three socket head cap screws removed in Step 3. **Torque to 108 in/lbs.**

STEP 5 Observe the slot at the front of the cover. If a gap exists between the cover and the inner chain case housing then place the supplied spacer in this location. PIC 2 Whether the spacer is used or not, secure with the supplied chrome 5/16"-18 x 1 3/4" hex head cap screw and special flat sided chrome washer. **Torque to 26 ft/lbs.** Finished installation see PIC.4.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

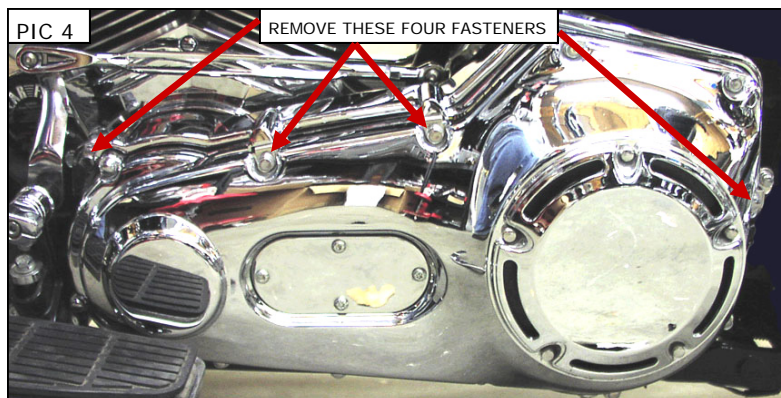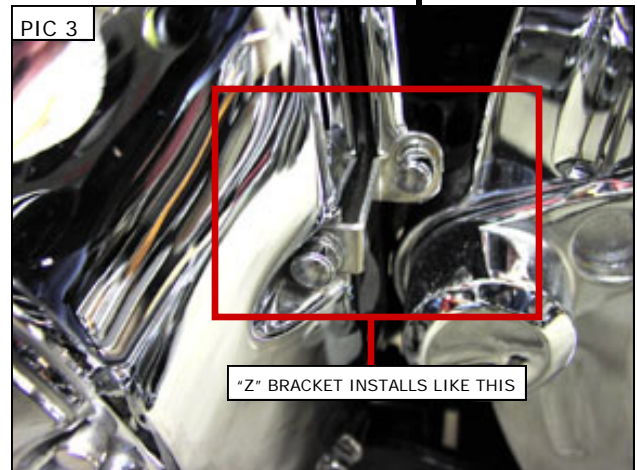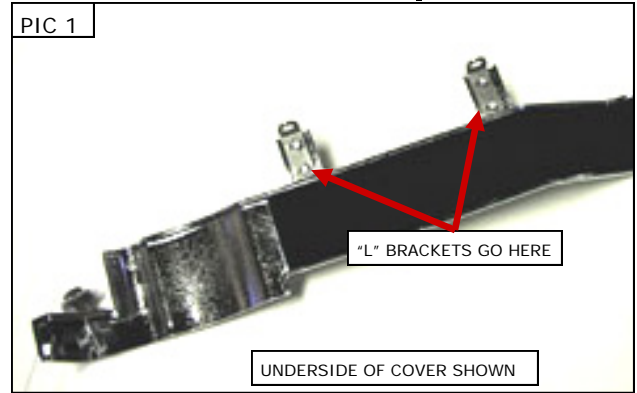

Ride On!

DELUXE INNER PRIMARY COVER **INSTALLATION**