



TAPPET BLOCK ACCENT FOR TWIN CAM 8389

FITS: ALL '99-UP TWIN CAM ENGINES

PARTS INCLUDED

- 1 Tappet Accent
- 1 Hardware Kit, including:
 - 1 10-24 x 1/2 Button Socket Cap Screw (BSCS)
 - 1 Bracket
 - 8 1/4 Hot Spots
 - 8 Hollow Point Sleeves
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, inch pound (in. lbs.) torque wrench with hex bits, soapy water and a clean rag

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the two stock socket head cap screws shown in PIC. 1; set these aside, they will be re-used.

STEP 3 Hold the included bracket in place (See PIC. 2) and install the two stock screws removed in STEP 2; leave the screws finger tight to allow for adjustment of the bracket.

-cont.-

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

- The product must be properly installed, maintained and operated under normal conditions.

- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Küryakyn and a customer.

- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

STEP 4 Remove any grease or debris from the area in front of the tappet covers (See [PIC. 2](#)) with soapy water and a clean rag; allow the area to dry completely.

ATTENTION! Thoroughly clean the area of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50° F. Do not attempt this installation in temperatures less than 50° F.

STEP 5 Clean the area (See [PIC. 2](#)) with an alcohol cleaning pad; allow the area to dry completely.

STEP 6 Rub the backing on the adhesive strips to activate the adhesive before applying.

STEP 7 Remove the adhesive backing from all of the adhesive strips.

STEP 8 Position the Tappet Accent as shown in [PIC. 3](#).

STEP 9 Insert the included 10-24 screw through the Tappet Accent (See [PIC. 3](#)) and into the bracket; thread the screw into the bracket. Finger tighten the screw at this time.

STEP 10 Press into place for 1 minute to ensure proper adhesion. Full bonding strength will occur within 24 hours.

STEP 11 Align the Tappet Accent and tighten the 10-24 screw.

STEP 12 Torque the two stock socket cap head screws (from STEP 3) to 90-120 in. lbs (10.3-13 Nm).

STEP 13 Push the Hollow Point Sleeves onto all eight tappet cover screws as shown in [PIC. 4](#).

STEP 14 Push the Hot Spots into all eight screws from STEP 12. See [PIC. 4](#).

STEP 15 Ensure proper clearance and operation before riding the motorcycle.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Kuryakyn®


PIC. 1




PIC. 2

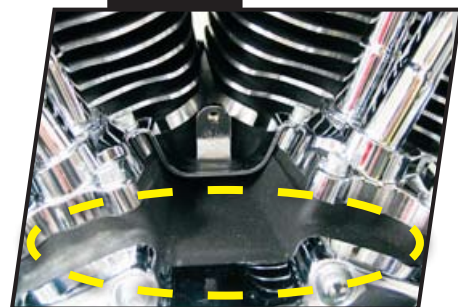

PIC. 3

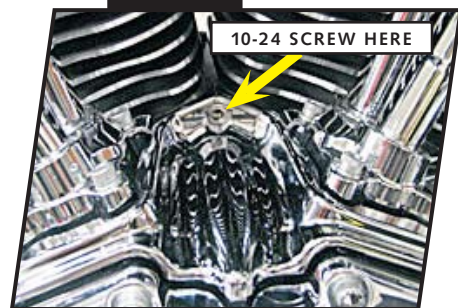

PIC. 4

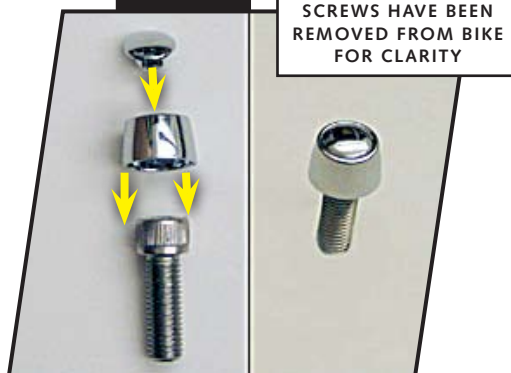

Ride On!

PAGE

2

TAPPET BLOCK ACCENT INSTALLATION