



FRONT FENDER ACCENT 8643

TRAILING EDGE

FITS: STREET GLIDE, ROAD GLIDE, ROAD KING CUSTOM, SCREAMIN' EAGLE DRESSERS OR ROAD KINGS (EX. '07 FLHRSE)

PARTS INCLUDED

- 1 Front Fender Accent
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Warm soapy water and a clean rag.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Clean the front fender using warm soapy water and a clean rag and allow to dry.

STEP 3 Clean the trailing edge of the front fender with the included alcohol pad (PIC. 1).

STEP 4 Test fit the accent on the fender; the flat edges of the trim accent (shown in PIC. 2) will be placed at the bottom edge of the fender.

STEP 5 Using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst.

-cont.-

PIC. 1



ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50° F.
Do not attempt this installation in temperatures less than 50° F.

STEP 6 Starting at the center, peel the adhesive backing, stopping before reaching the curve in the trim accent; do not remove the backing, leave the ends hanging as shown in [PIC. 2](#).

STEP 7 Install the trim on the fender; push in on the center of the trim accent so that the adhesive bonds to the fender.

STEP 8 Slowly remove the remaining backing pieces from the trim accent as shown in [PIC. 3](#).


STEP 9 Press the tips of the trim accent in place so that they bond to the fender.

STEP 10 Press and hold the trim accent for one (1) minute, full bonding strength will occur in 24 hours.

Ride On!

Kuryakyn[®]

PIC. 2

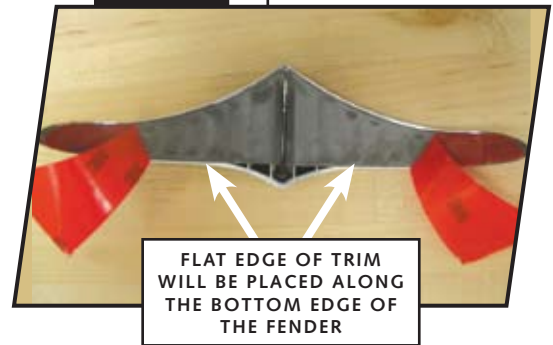

PIC. 3



PAGE

2

FRONT FENDER ACCENT INSTALLATION

Discover various motorcycle custom accessories and trim in our online store.