



FRONT UPPER STABILIZER LINK COVER 8697

FITS: '08-UP ELECTRA GLIDES, ROAD GLIDES, STREET GLIDES AND ROAD KINGS

PARTS INCLUDED

- 1 Stabilizer Link Cover
- 2 Adhesive Strips
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE - '09-UP MODELS

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 2 Test fit the Link Cover to the Upper Front Stabilizer Link (PIC 1)

NOTE *If your bike is equipped with Kuryakyn Neck Covers, it may be necessary to loosen and adjust the neck covers to help in the installation of the Link Cover.*

STEP 3 Clean the Stabilizer Link. If excessively dirty, clean with mild soap and warm water and dry completely. Clean the mounting area with the supplied alcohol pad.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 4 Rub the adhesive backing on the Link Cover to activate the adhesive. Remove the adhesive backing from the accent.

STEP 5 Apply the Link Cover to the Stabilizer Link (PIC 2). Press and hold the Cover in place for one minute, full bonding strength will occur in 24 hours.

FOR 2008 MODELS

STEP 1 Apply the spare adhesive strip to both sides of the center strip. (PIC 3)

STEP 2 Follow the same steps as above to mount the Link Cover on 2008 models.


Ride On!

Kuryakyn[®]

PIC. 1



PIC. 2

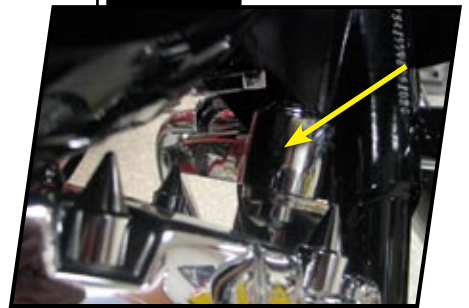

PIC. 3

