

INSTALLATION INSTRUCTIONS

ADJUSTABLE TOUR-PAK® RELOCATOR FOR '14-UP TOURING

8731

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Tour Pak® Relocator Assembly	1	Hardware Kit, containing:
1	Relocator Pad	1	10-24, Nut, Nylon Insert, SS
		1	10-24 X .75" Socket Head Cap Screw, SS
		1	3/8"-16 x 1.25", Button Head Socket Cap Screw, SS, 18-8
		1	3/8", Washer, Split Lock, SS

YOU WILL ALSO NEED:

Set of hex wrenches, soft, clean blanket, set of Torx drivers, set of combination wrenches, and socket set and ratchet, and IN LBS (NM) torque wrench

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn IGN OFF. Remove the main fuse.

STEP 2 Prepare a sturdy work surface within arm's reach of the Tour Pak. Cover the surface with a soft blanket.

WARNING THE END USER'S SAFETY DEPENDS UPON PROPER INSTALLATION OF THIS PRODUCT. IF A STEP IN THESE INSTRUCTIONS IS NOT WITHIN YOUR CAPABILITIES OR YOU DO NOT HAVE THE CORRECT TOOLS, HAVE YOUR DEALER PERFORM THE PROCEDURE. IMPROPER INSTALLATION OF THIS PRODUCT COULD RESULT IN DEATH OR SERIOUS INJURY.

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 3 Refer to PIC 1. Press the cam-lock-lever inward; rotate the locking lever outward; repeat for the other three to unlock the Relocator Base.



INSTALLATION INSTRUCTIONS

ADJUSTABLE TOUR-PAK® RELOCATOR FOR '14-UP TOURING

8731

-CONTINUED-

STEP 4 Slide the Relocator Base off of the Tour Pak Extrusion as shown in PIC 2; set the Base and Extrusion aside for now.

STEP 5 Remove the seat.

Remove the two Tour Pak electrical connectors from their anchors.

Disconnect all of the connectors between the main harness and the Tour Pak.

Remove the contents of the Tour Pak; remove the Tour Pak liner; close and secure the lid.


STEP 6 Remove the four (4) existing flange nuts and flat washers from beneath the Tour Pak; they secure the Tour Pak to the support; save the nuts and washers for later.

STEP 7 Refer to PIC 3. Carefully remove the Tour Pak; set it upside down on the work surface.

STEP 8 Refer to PIC 3. Align the Extrusion over the four threaded studs on the Tour Pak as shown; secure the Extrusion to the Tour Pak with the four (4) existing nuts and flat washers. Torque the nuts to 60-72 IN LBS (6.8-8.1 Nm).

STEP 9 Refer to PIC 4. Align the Extrusion over the four holes in the support. Insert the four (4) included Screws through the Extrusion and support; secure the screws with the included Locknuts and Washers.

STEP 10 Refer to PIC 4 . Slide the Tour Pak/Base assembly onto the Extrusion.

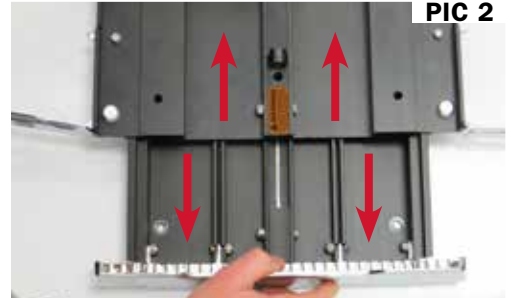

PIC 2



PIC 3



PIC 4

WARNING

FAILURE TO INSTALL THE TRAVEL LIMITING SCREW AND RETAINING NUT AND BOLT COULD LEAD TO LOSS OF CONTROL OF YOUR MOTORCYCLE, WHICH MAY CAUSE SERIOUS INJURY OR DEATH.

STEP 11 Refer to PIC 5 . Locate and install 3/8"-16 x 1.25" button head socket screw and 3/8" split lock washer.

STEP 12 Refer to PIC 5. Locate and install the 10-24 socket head cap screw and 10-24 nut.

STEP 13 Rotate the four locking levers inward until they are captured by the cam-lock-levers. The Tour Pak is now secured in place.

STEP 14 Reconnect the connectors. Do not connect them to their anchors.

STEP 15 Open the lid; remove the two existing screws and acorn nuts from the Tour Pak Pad; save the nuts for later; discard the pad and screws.



PIC 5

INSTALLATION INSTRUCTIONS

ADJUSTABLE TOUR-PAK® RELOCATOR FOR '14-UP TOURING

8731

- STEP 16** Refer to PIC 6. Secure the included Relocator Pad to the Tour Pak with the two (2) included 10-24 Screws and existing acorn nuts. Secure the wiring with the hook and loop straps.
- STEP 17** Reinstall the seat. Reinstall the Tour Pak liner; replace any of the removed contents; close and secure the lid.
- STEP 18** Disengage the locking levers; adjust the Tour Pak as desired; engage the locking levers.
- STEP 19** Reinstall the main fuse; ensure that the installation of the Relocator does not interfere with the operation of the motorcycle before riding.



PIC 6

NOTICE

IT IS THE END USER'S RESPONSIBILITY TO ENSURE THAT ALL FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

INSTALLATION INSTRUCTIONS

ADJUSTABLE TOUR-PAK® RELOCATOR FOR '14-UP TOURING

8731

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Tour Pak® Relocator Assembly	1	Hardware Kit, containing:
1	Relocator Pad	4	¼"-20 X 1" Hex Head Cap Screws
		4	¼"-20 X Nylon Insert Locknuts
		4	¼" Flat Washers
		2	10-24 X 3/4" Button Head Cap Screws
		1	10-24, Nut, Nylon Insert, SS
		1	10-24 X .75 SHCS, SS
		1	3/8"-16 x 1.25", BHSC, SS, 18-8
		1	3/8", Washer, Split Lock, SS

YOU WILL ALSO NEED:

Set of hex wrenches, soft, clean blanket, set of Torx drivers, set of combination wrenches, and socket set and ratchet, and IN LBS (NM) torque wrench

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

WARNING THE END USER'S SAFETY DEPENDS UPON PROPER INSTALLATION OF THIS PRODUCT. IF A STEP IN THESE INSTRUCTIONS IS NOT WITHIN YOUR CAPABILITIES OR YOU DO NOT HAVE THE CORRECT TOOLS, HAVE YOUR DEALER PERFORM THE PROCEDURE. IMPROPER INSTALLATION OF THIS PRODUCT COULD RESULT IN DEATH OR SERIOUS INJURY.

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn IGN OFF. Remove the main fuse.

STEP 2 Prepare a sturdy work surface within arm's reach of the Tour Pak. Cover the surface with a soft blanket.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 3 Refer to PIC 1. Press the cam-lock-lever inward; rotate the locking lever outward; repeat for the other three to unlock the Relocator Base.



INSTALLATION INSTRUCTIONS

ADJUSTABLE TOUR-PAK® RELOCATOR FOR '14-UP TOURING

8731

-CONTINUED-

STEP 4 Slide the Relocator Base off of the Tour Pak Extrusion as shown in PIC 2; set the Base and Extrusion aside for now.

STEP 5 Remove the seat.

Remove the two Tour Pak electrical connectors from their anchors.

Disconnect all of the connectors between the main harness and the Tour Pak.

Remove the contents of the Tour Pak; remove the Tour Pak liner; close and secure the lid.

Note:

The Relocator Base attaches to the motorcycle

The Tour Pak Extrusion attaches to the bottom of the Tour Pak.


STEP 6 Remove the four (4) existing flange nuts and flat washers from beneath the Tour Pak; they secure the Tour Pak to the support; save the nuts and washers for later.

STEP 7 Refer to PIC 3. Carefully remove the Tour Pak; set it upside down on the work surface.

STEP 8 Refer to PIC 3. Align the Extrusion over the four threaded studs on the Tour Pak as shown; secure the Extrusion to the Tour Pak with the four (4) existing nuts and flat washers. Torque the nuts to 60-72 IN LBS (6.8-8.1 Nm).

STEP 9 Refer to PIC 4. Align the Relocator Base over the four holes in the support on the bike. Insert the four (4) included Screws through the Base and support; secure the screws with the included Washers and Locknuts.


STEP 10 Slide the Tour Pak/Extrusion assembly onto the Base.

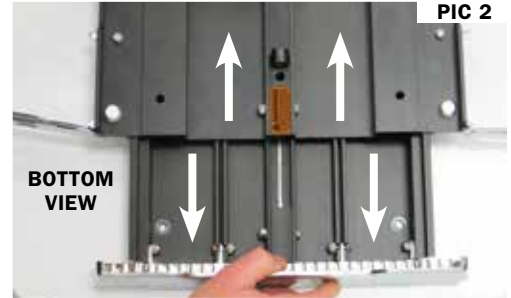

WARNING FAILURE TO INSTALL THE TRAVEL LIMITING SCREW AND RETAINING NUT AND BOLT COULD LEAD TO LOSS OF CONTROL OF YOUR MOTORCYCLE, WHICH MAY CAUSE SERIOUS INJURY OR DEATH.

STEP 11 Refer to PIC 5. Locate and install 3/8"-16 x 1.25" button head socket screw and 3/8" split lock washer.

STEP 12 Refer to PIC 5. Locate and install the 10-24 socket head cap screw and 10-24 nut.

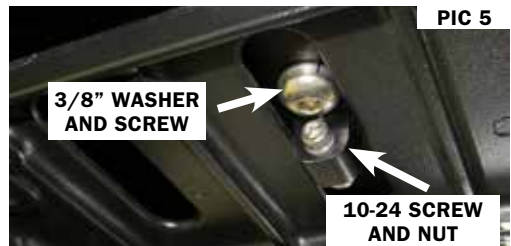

INSTALLATION INSTRUCTIONS

ADJUSTABLE TOUR-PAK® RELOCATOR FOR '14-UP TOURING

8731

- STEP 13** Rotate the four locking levers inward until they are captured by the cam-lock levers. The Tour Pak is now secured in place.
- STEP 14** Reconnect the connectors. Do not connect them to their anchors.
- STEP 15** Open the lid; remove the two existing screws and acorn nuts from the Tour Pak Pad; save the nuts for later; discard the pad and screws.
- STEP 16** Refer to PIC 6. Secure the included Relocator Pad to the Tour Pak with the two (2) included 10-24 Screws and existing acorn nuts. Secure the wiring with the hook and loop straps.
- STEP 17** Reinstall the seat. Reinstall the Tour Pak liner; replace any of the removed contents; close and secure the lid.
- STEP 18** Disengage the locking levers; adjust the Tour Pak as desired; engage the locking levers.
- STEP 19** Reinstall the main fuse; ensure that the installation of the Relocator does not interfere with the operation of the motorcycle before riding.



PIC 6

NOTICE

IT IS THE END USER'S RESPONSIBILITY TO ENSURE THAT ALL FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.