



**SPLINED ADAPTER MOUNTS**

**8808**

**FRONT APPLICATIONS: HONDA: ALL '01-UP GL1800; SUZUKI: '01-UP BOULEVARD M50/VOLUSIA 800 AND '06-UP M109R.**

**NOTE: NOT FOR USE WITH PEG MOUNTED FLOORBOARDS ON GL1800 OR OTHER MOTORCYCLES WITHOUT ADJUSTABLE SHIFTER POSITION.**

**PARTS INCLUDED**

- 2 Splined Adapter Mount
- 4 "D" Spring Washer
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**TOOLS SUGGESTED**

Needle nose pliers

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**PROCEDURE**

**STEP 1** Park the motorcycle on a hard, level surface; turn off the ignition.

**STEP 2** Remove the hardware securing the footpeg to the footpeg mount. Set the hardware aside for now, it will be re-used.

**ATTENTION!** Note the location and orientation of return springs (where applicable) before disassembly.

**STEP 3** Remove the existing footpeg and spring where applicable; set the footpeg and spring aside for now.

**-cont.-**

**NOTE** The four "D" Spring Washers have been included for use when the existing footpeg is missing the stock return spring. Install the "D" Spring Washers on either side of the Splined Adapter Mount with the flat of the "D" facing inboard.

**STEP 4** Install the Splined Adapter Mount as you would the existing footpeg. Ensure that the squared off end of the Adapter Mount is on the bottom when installed. Ensure that the curved end of the spring locates over the Splined Adapter Mount as shown in PIC.1.

**STEP 5** Install the hardware in the reverse order it was removed in STEP 2.

**NOTE** Push down on the spring to install the pivot pin.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**STEP 6** Repeat STEP 2 through STEP 5 for the other side.


**STEP 8** Use the instructions included with the new footboards/footpegs to complete the installation.

**WARNING!** IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

*Ride On!*

**PIC.1**

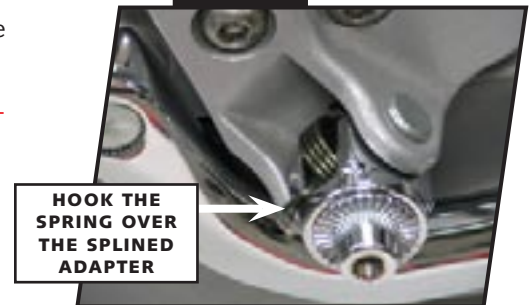

**PAGE**

**2**

**SPLINED ADAPTER MOUNTS** **INSTALLATION**