

## INSTALLATION INSTRUCTIONS

### SPLINED ADAPTER MOUNTS FOR HONDA & YAMAHA, GLOSS BLACK

8869

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

2	Splined Adapter Mount	1	Hardware Kit, CONTINUED:
1	Hardware Kit, containing:	2	1/4-20 x 3/8 Stainless Steel Set Screw
2	Spacer	2	#10-32 x 1 SSS
4	D-Spring Washer	2	Cotter Pins

#### YOU WILL ALSO NEED:

Set of Hex wrenches, combination wrenches, set of sockets and ratchet, needle nose pliers

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

**WARNING** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Remove the hardware securing the footpeg to the footpeg mount; set it aside, it will be re-used.

**STEP 3** Remove the existing footpegs from the mounts and set them aside, they will not be re-used.


**STEP 4** Test fit the tube spacer over the removed OEM footpeg mounting pin.

*Note: The spacer may not be needed in some applications.*

**STEP 5** If the spacer fits over the mounting pin, insert an included spacer in one of the Splined Adapter Mounts as shown in PIC.2. The spacer is press fit.

**STEP 6** Thread a 1/4-20 x 3/8 SSS into the lower hole in the Adapter Mount as shown in PIC.1. Ensure that the hex head end of the setscrew is threaded into the Adapter Mount so that it can be accessed from the through hole in the splined face. See PIC.2.

**STEP 7** For Folding Floorboards that require a solid mount. Thread a #10-32 x 1 SSS into the upper hole in the Adapter mount as shown in PIC.1. Install flush with the back of the adapter. Ensure that the hex head end of the setscrew is threaded into the Adapter Mount so that it can be accessed through the hole in the splined face. See PIC.2.

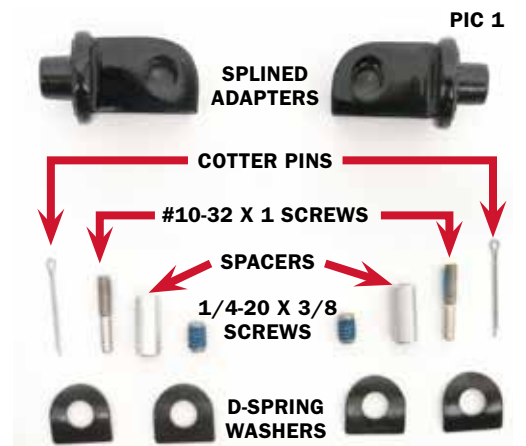

## INSTALLATION INSTRUCTIONS

### SPLINED ADAPTER MOUNTS FOR HONDA & YAMAHA, GLOSS BLACK

8869

-CONTINUED-

*Note: The four "D" Spring Washers have been included to take up excessive freeplay and add tension for folding pegs in the "up position". They will not be necessary in some instances. Install the "D" Spring Washers on either side of the Splined Adapter Mount with the flat of the "D" facing inboard.*

**STEP 8** Install the Adapter Mount in the footpeg or floorboard mount on the motorcycle using the hardware removed in STEP 2.

**STEP 9** Adjust the angle of the Adapter Mount. Insert the correct size hex wrench in the lower hole in the splined face of the Adapter Mount and turn the setscrew clockwise for a higher angle and counterclockwise for a flatter angle.

**STEP 10** For folding floorboards that require a solid mount. Insert the correct size hex wrench through the top hole in the splined face of the Adapter Mount and turn the setscrews clockwise until they contact the footpeg mount on the motorcycle. This will "lock" the Adapter Mount in place against the footpeg mount on the motorcycle

**STEP 11** Install the new footpeg or floorboards on the Adapter Mount. Refer to the instructions included with the new footpegs for more information.

#### NOTICE

**IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT WARRANTY COMPONENTS LOST DUE TO IMPROPER INSTALLATION. PERIODIC MAINTENANCE MAY BE REQUIRED.**

**STEP 12** Repeat STEP 2 through STEP 11 for the other side.

#### CAUTION

**ENSURE THAT THE INSTALLATION OF THIS PRODUCT DOES NOT INTERFERE WITH THE PROPER OPERATION OF THE MOTORCYCLE BEFORE RIDING.**

#### WARNING

**IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.**