



NON-PIVOTING SPLINED MALE ADAPTERS 8883

FITS: HD MALE MOUNT APPLICATIONS. INTENDED FOR USE WITH KURYAKYN FOOT-BOARDS P/N 7916, 4455, 4351 OR 4357

PARTS INCLUDED

- 2 Non-Pivoting Splined Male Adapters
- 4 1/4 x 28 x 3/8" Set Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the stock hardware securing the footpeg. Keep the hardware, it will be used later.

STEP 3 As shown in PIC 1, insert the hex wrench through the splined end of the adapter, mount the set screw to the wrench and thread the included set-screws in to the adapter from the opposite end.

STEP 4 For now, thread the set-screws into the adapter so they are not exposed and will not interfere with installation. Test fit the adapter to the mount.

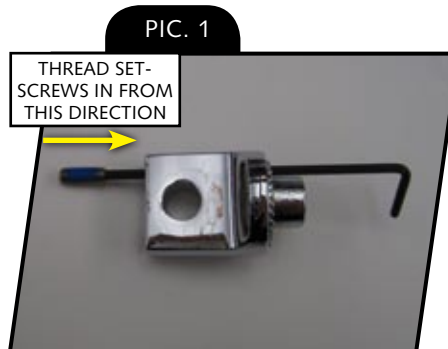

-cont.-

STEP 5 As shown in PIC 2, install the hardware removed in Step 2 to secure the new adapter in to the mount.

STEP 6 Tighten the set-screws (PIC 3) in the adapter to keep it level and from moving when a footboard is installed.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Ride On!

Kuryakyn[®]

PIC. 2



PIC. 3

