

## INSTALLATION INSTRUCTIONS

### SPLINED PEG ADAPTERS FOR DUCATI SCRAMBLER, SILVER

8903

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

2 Splined Peg Adapters

2 D-Spring Washer

#### YOU WILL ALSO NEED:

Snap Ring Pliers

PICTURES SHOWN ARE OF THE BLACK PARTS. INSTALLATION OF THE SILVER PARTS WILL BE THE SAME.

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

**STEP 2** Remove the stock peg from the clevis. Pay attention to any spacers or washers installed between the male mount on the peg and the clevis, it may be helpful later. Set this hardware aside, it will be reused.

#### FRONT PEG ADAPTER INSTALLATION

**STEP 3** Refer to PIC 1 and 2. Install the new splined adapter using any spacers, washers, or springs removed in Step 2. Line up the hole on the male mount on the adapter with the hole in the clevis.

**STEP 4** Refer to PIC 3. Secure the splined adapter in the clevis using the OEM hardware. Check that the splined adapter is installed correctly and the splined adapter is able to fold upward.

**STEP 5** Install the Kuryakyn footpegs or floorboards that require a splined adapter as per the instructions with the footpegs or floorboards.

**STEP 6** Repeat Steps 2 through 5 for the opposite side.

#### SPLINED ADAPTERS

SIDE VIEW


TOP VIEW



D-SPRING WASHER



PIC 1

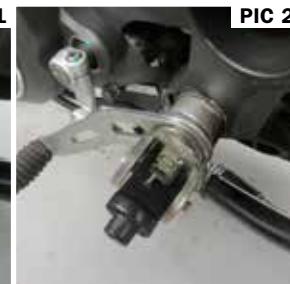

PIC 2



PIC 3

## INSTALLATION INSTRUCTIONS

### SPLINED PEG ADAPTERS FOR DUCATI SCRAMBLER, SILVER

8903

-CONTINUED-

#### REAR PEG ADAPTER INSTALLATION

- STEP 7** Install the Kuryakyn footpegs or floorboards that require a splined adapter as per the instructions with the footpegs or floorboards.
- STEP 8** Refer to PIC 4 and 5. Locate the one (1) provided D-Spring Washer and one (1) of the OEM D-Washers that was removed in Step 2. Align the holes of the D-Spring washer with peg adapter, with the washer's curvature pressed against the adapter and the straight edge facing towards the bike.
- STEP 9** Refer to PIC 6 and 7. Line up the holes of the adapter, the washers, and the clevis; set assembly into the clevis.
- Note: Once the adapter and washers are set into the clevis, insert a slim fitting tool through the holes to realign them all. This will allow for proper clearance when reinstalling the pin.*
- STEP 10** Refer to PIC 8. Secure the splined adapter in the clevis using the OEM hardware. Check that the splined adapter is installed correctly and the splined adapter is able to fold upward.
- STEP 11** Repeat Steps 7 through 10 for the opposite side.



#### WARNING

FOOTRESTS MUST BE INSTALLED SO THEY WILL FOLD UPWARD AND REARWARD IF HIT BY ANY OBJECT. FAILURE TO ADJUST THE FOOTRESTS TO OPERATE IN THIS MANNER COULD RESULT IN SERIOUS INJURY OR DEATH.

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.