



THE REVOLUTION DRIVER BACKREST for GL 1800 8930

PARTS INCLUDED

- 1 Driver Back Rest Assembly
- 1 Right Side Mounting Bracket
- 1 Left Side Mounting Bracket
- 1 Backrest Pouch with Backer and Shoulder Strap
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

| | |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| WARNING | THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY. |
| NOTICE | This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality. |
| CAUTION | This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage. |

NOTICE IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.



TOOLS SUGGESTED

Set of Standard Hex Wrenches, Set of Metric Hex Wrenches


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the passenger handles from the motorcycle. Using the OEM hardware, install the mounting brackets as shown in PIC 1 and PIC 2. Tighten securely.

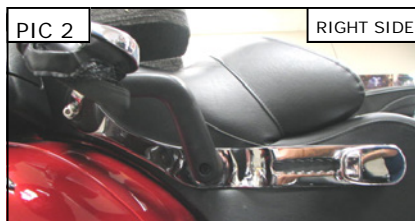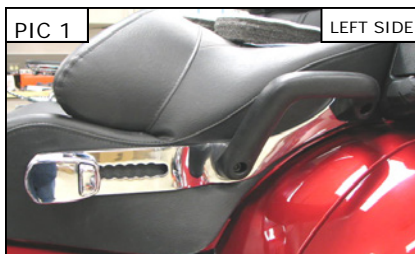

STEP 3 Holding the Backrest assembly so the pad is towards the gas door, insert the legs of the hoop into the opening in each mounting bracket. The openings in the bottom of the hoop legs will fit over the block inside each mounting bracket. PIC 3 and PIC 4

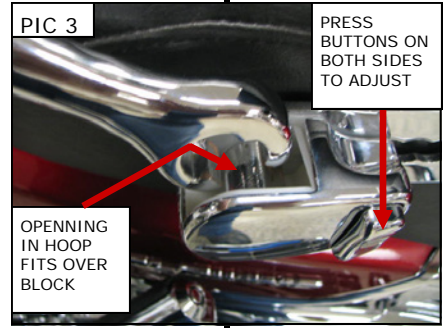


STEP 4 With the legs of the hoop over the blocks in the mounting brackets, rotate the Backrest assembly towards the back of the motorcycle until it is in the upright position. PIC 4




DO NOT ATTEMPT TO HAVE A PASSENGER MOUNT OR DISMOUNT FROM THE MOTORCYCLE WITH THE BACKREST IN THE FOLDED DOWN POSITION. THE BACKREST IS NOT LOCKED IN THIS POSITION AND MAY MOVE OUT OF THE MOUNTS CAUSING LOSS OF BALANCE RESULTING IN DAMAGE TO THE MOTORCYCLE OR SERIOUS INJURY TO THE PASSENGER. REMOVE THE BACKREST FOR THE PASSENGER TO MOUNT OR DISMOUNT THE MOTORCYCLE.

STEP 5 To move the Backrest assembly forward or backward, push and hold the release buttons on each of the mounting brackets and slide the assembly along the track. Once the desired position is found, release the buttons. With the buttons released, ensure that the Backrest assembly has locked into place. PIC 3 and PIC 4

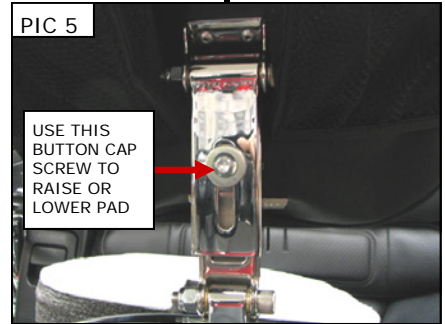

STEP 6 To raise or lower the Backrest pad, fold the pad up and slightly loosen the button cap screw on the post. PIC 5 Raise or lower the pad to the desired position, (there are detents inside the post that attaches the pad to the hoop that you may feel or here click as you move the pad). Tighten the button cap screw securely to lock the pad in place if you would like to maintain one set position.

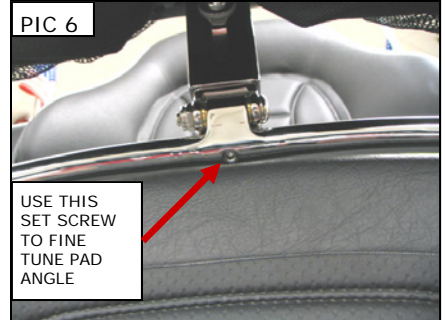

STEP 7 To fine tune the angle of the Backrest pad, turn the set screw on the underside of the hoop in to tilt the pad forward or out to tilt it back to the upright position. PIC 6

STEP 8 To store the Backrest assembly in the trunk of the motorcycle, tip the assembly forward and remove it from the mounts. Fold the Backrest pad forward until it is beneath the hoop. The assembly will now fit in the trunk. PIC 7 and PIC 8



STEP 9 Attach the Backrest Pouch to the Backrest by removing the Backer from the Backrest Pouch (it is attached with hook and loop strips). Press the hook strips on the Pouch onto the loop pads on the back of the Backrest.

STEP 10


To use the Backrest Pouch as a carry bag, simply pull it off the Backrest Pad (it is attached with hook and loop strips), and attach the hook strips on the Pouch to the loop strips on the Pouch Backer. PIC 9 Remove the shoulder strap from the small pouch on the Backer and attach the snaps to the "D" rings on the Backrest Pouch. PIC 10

WARNING THIS BACKREST IS NOT MEANT TO BE USED AS A SAFETY RESTRAINING DEVICE. FAILURE TO HOLD ON TO THE MOTORCYCLE MAY RESULT IN INJURY OR DEATH.

WARNING THIS BACKREST IS NOT DESIGNED TO RESTRAIN AGAINST EXCESSIVE FORCE. DO NOT PUSH BACK WITH YOUR FULL BODY FORCE TO ADJUST YOUR POSITION ON THE SEAT WHILE THE MOTORCYCLE IS IN MOTION.

CAUTION Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

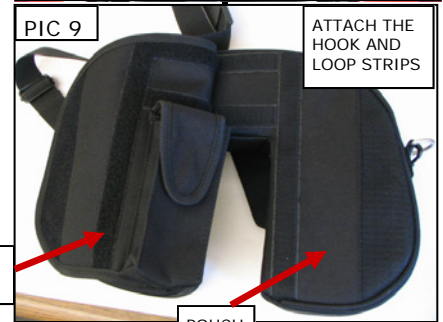

Ride On!