



DRAGON WINGS FOR GOLD WING

8939

Thank You For Choosing Küryakyn!

Protect yourself and others from potential injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Hand Dragon Wing Assembly
- 1 Left Hand Dragon Assembly
- 1 Hardware Kit containing:
 - 6 M5 X 0.8 X 40MM Socket Button Head Cap Screws
 - 6 M5 Flat Washers

YOU WILL ALSO NEED:


Plastic trim tool, masking tape and a marker, center punch, drill bit and drill, set of hex wrenches

NOTICE


These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future use.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

STEP 2 Refer to PIC 1. Use a plastic trim tool to release the bottom of the trim piece from the fairing; start at the bottom and work upwards.

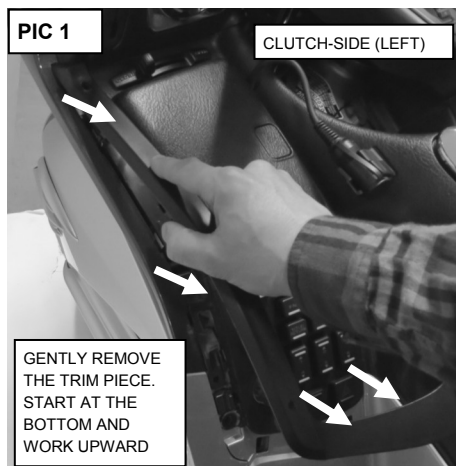

STEP 3 Refer to PIC 2. Locate the three screws underneath the trim piece; use masking tape and a marker to mark their horizontal locations; remove and discard the screws.

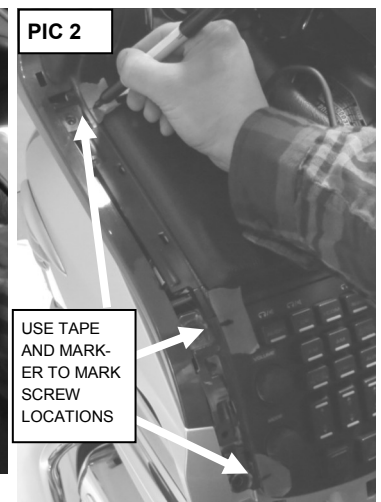



STEP 4 Refer to PIC 3. Reinstall the trim; use tape and a marker to carry the three screw locations across to the trim; **CAREFULLY REMOVE THE TRIM.**

STEP 5 Refer to PIC 4. Make vertical marks in the center between the ridge and edge of the trim.

STEP 6 Refer to PIC 5. Make a center punch mark on the trim at the intersection of the vertical and horizontal lines. Repeat for all three locations.

STEP 7 Remove and discard the tape; drill small pilot holes in the trim at the center punch marks.

Ensure that the trim has been removed from the bike before drilling or damage will occur!

STEP 8 Enlarge the pilot holes to ?.

STEP 9 Reinstall the trim; ensure that the drilled holes align over the screw holes; the holes may need to be enlarged to align, if so, remove the trim before drilling.

STEP 10 Locate the included Screws and Washers; assemble the three Washers and Screws; set them within arm's reach of the work area.

STEP 11 Refer to PIC 6. Locate the included Left Hand Dragon Wing; align it over the three holes; secure the Dragon Wing with the three Screws and Washers; start all three Screws in the threads before fully tightening.

STEP 12 Repeat STEPS 2 THROUGH 11 for the other side.

