

INSTALLATION INSTRUCTIONS

PASSENGER ARMRESTS FOR TOURING & TRI GLIDE, CHROME

8955

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Right-Side Mount	1	Right-Side Armrest Pad
1	Left-Side Mount	1	Left-Side Armrest Pad
2	Paint Protectors		

YOU WILL ALSO NEED:

Set of sockets and ratchet, warm, soapy water and a clean rag, set of hex wrenches

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

INSTALL THE ARMREST MOUNTS:

STEP 2 Use masking tape to mark the Tour Pak® at the rearward edge of the right-side speaker pod as shown in PIC 1. Repeat for the left side.

WARNING THE END USER'S SAFETY DEPENDS UPON PROPER INSTALLATION OF THIS PRODUCT. IF A STEP IN THESE INSTRUCTIONS IS NOT WITHIN YOUR CAPABILITIES OR YOU DO NOT HAVE THE CORRECT TOOLS, HAVE YOUR DEALER PERFORM THE PROCEDURE. IMPROPER INSTALLATION OF THIS PRODUCT COULD RESULT IN DEATH OR SERIOUS INJURY.

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.



STEP 3 Open the Tour Pak™ lid.

STEP 4 On the front of the Tour Pak™, locate and remove the two Torx screws shown in PIC 2. Removing the screws will release the tether anchor.

NOTICE WITH THE SCREWS REMOVED, THE TETHER ANCHOR CAN RETRACT RAPIDLY CAUSING DAMAGE TO THE MOTORCYCLE. SECURE THE TETHER ANCHOR WHILE THE SCREWS ARE BEING REMOVED.

Note: Get someone to help secure the Tour Pak™ lid until the tether anchor is reattached to prevent the lid from opening too far.

STEP 5 Remove the Tour Pak™ liner; pull upward on the rear of the liner to remove it.

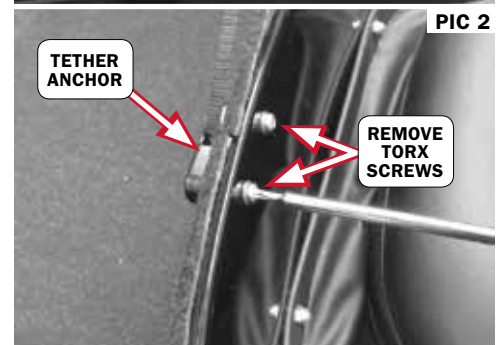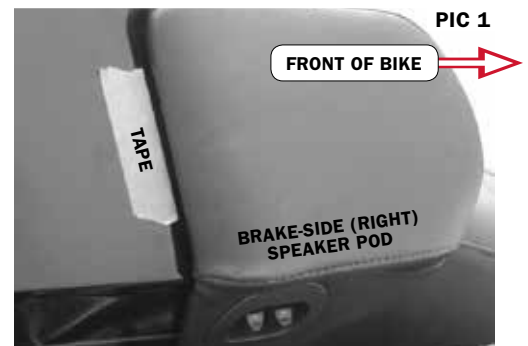

INSTALLATION INSTRUCTIONS

PASSENGER ARMRESTS FOR TOURING & TRI GLIDE, CHROME

8955

-CONTINUED-

STEP 6 With the lid open, reattach the tether anchor. Do not over tighten the screws.

STEP 7 Remove the two lower hex head screws and washers shown in PIC 3; set them aside for now, they will be reused. Let the power outlet (if equipped) hang for now.

NOTICE

AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 8 Cover the right-side saddlebag lid with a soft cloth or service cover. Refer to PIC 3. Inside the Tour Pak™, loosen, but do not remove, the top hex head screw until the speaker pod can be removed. Set the speaker pod on the soft cloth or service cover. Ensure the bass port and gasket remain in place.

Repeat STEPS 7 and 8 for the other side.

STEP 9 Using warm, soapy water and a clean rag, remove all dirt, polish, and other debris from the area shown in PIC 4. Rinse and allow the area to dry completely.

STEP 10 Remove and discard the backing from the included Paint Protectors.

STEP 11 Refer to PIC 4. Using the masking tape mark from STEP 2 as a guide, apply the Paint Protector to the Tour Pak™ just forward of the masking tape; smooth out any air bubbles with your finger. Remove and discard the masking tape. Repeat for the other side.

STEP 12 Refer to PIC 5. Ensure the bass port flange is fully seated in the hole, then position the included Right-Side Mount over the top screw; align the speaker pod with the bass port flange and attach it with the top screw. Leave the screw finger tight for now.


STEP 13 Inside the Tour Pak™, align the power outlet with the lower holes. Insert the two lower screws and thread them into the speaker pod; torque the three hex head screws to 20-25 in-lbs (2.3-2.8 Nm). Repeat STEP 12 AND 13 for the other side.

STEP 14 Get someone to help secure the lid; remove the tether anchor, reinstall the liner, then reinstall the tether anchor; torque the two Torx screws to 25-35 in-lbs (2.8-3.9 Nm). Close the lid.

ASSEMBLE THE ARMREST PADS:

STEP 15 Insert the Right-Side Pad stud into the Right-Side Mount as shown in PIC 6. Refer to PIC 7. Press the adjustment button inward as shown. Adjust to the High, Mid, or Low position and release the button; pull up and push down until the detent “clicks” into place. The range of adjustment is approximately 1” (2.54 Cm). Refer to PIC 8. Swing the drink holder out to use; rotate it back to stow.

DO NOT ADJUST THE ARMREST HEIGHT WHILE RIDING OR WITH A DRINK IN THE HOLDER!

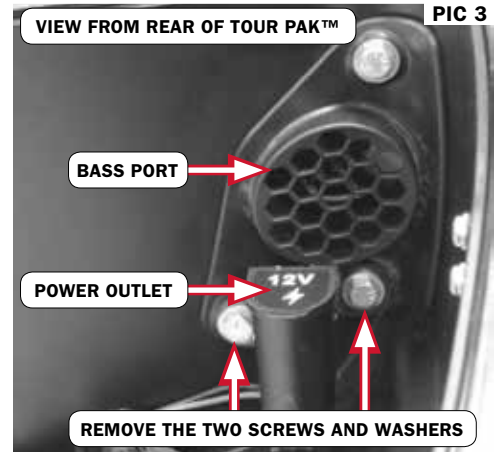

INSTALLATION INSTRUCTIONS

PASSENGER ARMRESTS FOR TOURING & TRI GLIDE, CHROME

8955

-CONTINUED-

INSTALL DRINK HOLDER IN LEFT-SIDE ARMREST PAD:

STEP 16 Remove the shoulder bolt and wave washer from the bottom side of the drink holder.

STEP 17 Refer to PIC 9. Align the drink holder with the threaded hole in the other pad; insert the shoulder bolt with wave washer through the drink holder; tighten the shoulder bolt and **TORQUE TO 15 IN LBS (1.69 NM)**.

NOTICE

PERIODIC REMOVAL, CLEANING, AND GREASING OF ARMREST STUD IS RECOMMENDED.

WARNING

PASSENGER ARMRESTS ARE NOT A SAFETY RESTRAINING DEVICE. FAILURE TO HOLD ONTO THE MOTORCYCLE MAY RESULT IN SERIOUS INJURY OR DEATH.

THIS PRODUCT WAS DESIGNED FOR USE AS A PASSENGER ARMREST ONLY. DO NOT USE IT TO ASSIST MOUNTING OR DISMOUNTING THE MOTORCYCLE. DO NOT APPLY YOUR FULL BODY WEIGHT TO THE ARMRESTS TO ADJUST SEATING POSITION.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

