

INSTALLATION INSTRUCTIONS

RELOCATOR FOR TOUR-PAK® FOR '09-'13 TOURING & TRIKE

8957

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1	Right-side Relocator Block	1	Hardware Kit, containing:
1	Left-side Relocator Block	8	1/4" Flat Washers
		8	1/4" Lock Washers
		4	1/4"-20 X 7/8" Hex Head Screws
		4	Cable Ties

YOU WILL ALSO NEED:

Socket set and ratchet, combination wrenches, set of hex wrenches, set of hex sockets, in./lbs. torque wrench

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Unhook the CB cable (if equipped) located under the clutch-side (left) passenger armrest.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 3 Open the Tour-Pak®. Refer to PIC 1. Remove the two acorn nuts located inside the document pouch in the Tour-Pak®. Remove the pouch.

STEP 4 Remove the trunk liner and set it aside.

NOTICE ASSISTANCE IS HIGHLY RECOMMENDED TO SECURE THE TOUR-PAK® AS THE MOUNTING SCREWS ARE BEING REMOVED.

STEP 5 Remove the four screws securing the Tour-Pak® to the mount. PIC 2 Set the screws aside for now; they will be reused later. Note the location of the ground strap; it will be re-installed later. PIC 2

STEP 6 Carefully move the Tour-Pak® out of the way. Have someone secure the Tour-Pak® while the Relocator Blocks are being installed.

STEP 7 Refer to FIG 1. Determine the Right-and Left-Hand Relocator Blocks. The countersunk holes are offset to ensure that they are installed on the correct side. The beveled edges face the front of the motorcycle.



INSTALLATION INSTRUCTIONS

RELOCATOR FOR TOUR-PAK® FOR '09-'13 TOURING & TRIKE

8957

-CONTINUED-

STEP 8 Refer to PIC 3. Attach the clutch-side (left) Relocator Block to the OEM mount with two of the included 1/4"-20 Screws, Lock Washers and Flat Washers. Insert the screws through the countersunk holes. Leave the first screw loose until the other has been installed, then Torque the screws to 96 TO 100 IN./LBS.

STEP 9 Repeat STEP 8 for the brake-side (right). PIC 4

STEP 10 The Relocator allows for three different mounting positions over a range of about three inches.

Refer to FIG 1. Determine which of the three mounting positions will work best for you; 1", 2" or 3" back.

STEP 11 Add an included Lock Washer and Flat Washer to each screw (removed in STEP 5) and set them within arms reach of the work area.

STEP 12 Carefully position the Tour-Pak® over the Relocator Blocks. Align the holes in the Tour-Pak® with the threaded holes in the Blocks. Attach the Tour-Pak® to the Blocks with the screws from STEP 11. Leave the screws loose until all have been started in their threaded holes, then torque the screws to 96 to 100 in./lbs.

NOTICE

ENSURE THAT THE GROUND STRAP (PIC 2) IS REATTACHED TO THE FLOOR OF THE TOUR-PAK® DURING REINSTALLATION.

STEP 13 Reinstall the Tour-Pak® liner.


STEP 14 Reinstall the document pouch and acorn nuts. Reinstall the CB cable (if removed).

STEP 15 Ensure the Tour-Pak® is secure before riding the motorcycle.


NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

FIG 1

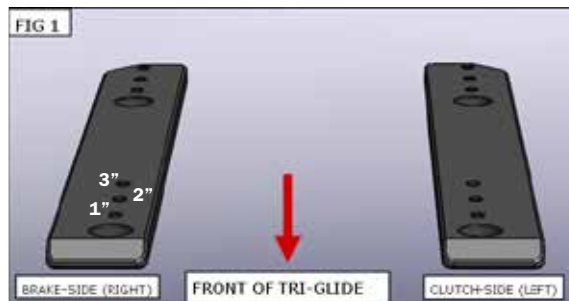

PIC 3

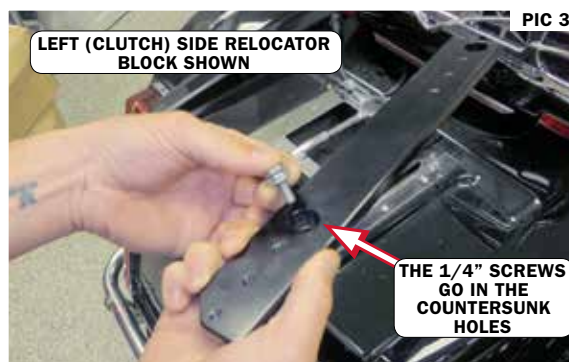

PIC 4

