



LARGE REFLECTOR COVERS

9002

PARTS INCLUDED

- 2 Large Reflector Cover Assemblies
- 2 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove any grease or debris from the large reflector areas on the bike with soapy water and a clean rag; allow the area to dry completely. Clean the areas with the included alcohol pads to remove any residue and allow to dry completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 3 Test fit the Large Reflector Cover. Make any reference marks with a non-permanent marker or masking tape. Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the adhesive backing. Press the Large Reflector Cover into place for one minute to ensure proper adhesion. Full bond strength will occur within 24 hours. PIC 1 Repeat for the other side.

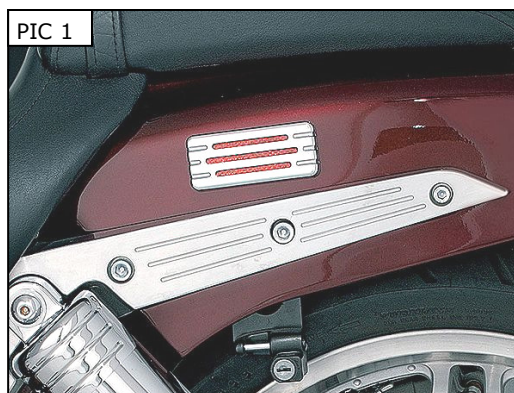

Ride On!