



TAILLIGHT COVER without SLOTS

9008

PARTS INCLUDED

- 1 Chrome Taillight Cover without Slots
- 2 Nylon Spacers
- 2 #8-32 x1-1/4" Phillips Pan Head Screws (PPHS)
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.


TOOLS SUGGESTED

Phillips Head Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the two screws that secure the taillight lens to the base. PIC 1 Set these aside, they may be reused.

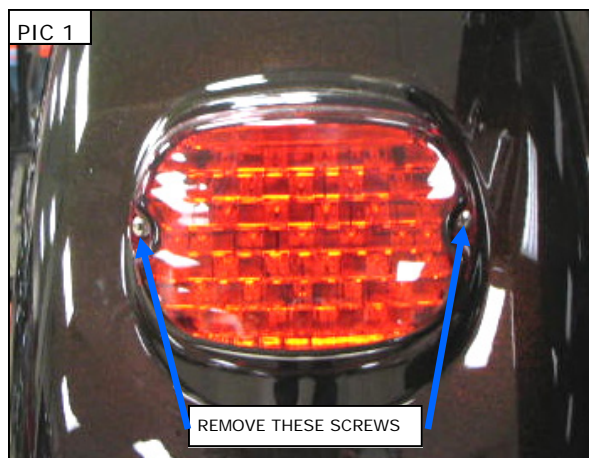

-cont.-

STEP 3 Test fit the cover in place over the taillight lens, and check for clearance between the cover and the fender. PIC 2 If the cover touches the fender, it may cause damage to the paint; the spacers have been included to prevent the visor from contacting the fender.

NOTE: If the cover does touch the fender, install the nylon spacers on the backside of the installation tabs by removing the adhesive backing on the spacer and placing them on the tabs as shown in PIC 3.

CAUTION! Ensure that the cover will not touch the fender, which may result in damage to the paint. Küryakyn is not responsible for damage to paint/fender due to improper installation.

STEP 4 If the spacers are not needed place the cover over the taillight lens and secure the cover and lens with the OEM screws removed in Step 2. If the OEM screws **DO NOT** snug up the lens and cover in at **LEAST** three full turns, or if the spacers from Step 3 are used, use the included #8-32 x1-1/4" Phillips Head screws; **DO NOT OVER TIGHTEN** them or you may damage the cover or taillight lens.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

