



**SPEED TAB**

**9037**

**PARTS INCLUDED**

- 1 Speed Tab Cover — Chrome
- 1 1/4"-20 Collared Socket Head Fastener
- 1 1/4"-28 Collared Socket Head Fastener
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**TOOLS SUGGESTED**

#2 Phillips Screwdriver, Set of Hex Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.



**STEP 2** Remove the rear seat tab fastener. Determine whether this fastener is 1/4"-20, or 1/4"-28 thread pitch.

**STEP 3** Either remove the seat, or slide the rear of the seat out of the way.

**STEP 4** Install the corresponding collared fastener in place of the stock fastener. PIC 1

**STEP 5** Replace the seat into position on the fender, with the collared fastener protruding through the hole in the seat mounting tab.

**STEP 6** Slide the speed tab into place so it snaps onto the collared fastener. PIC 2

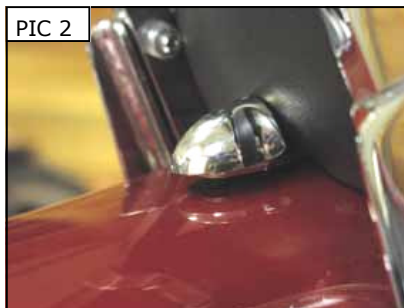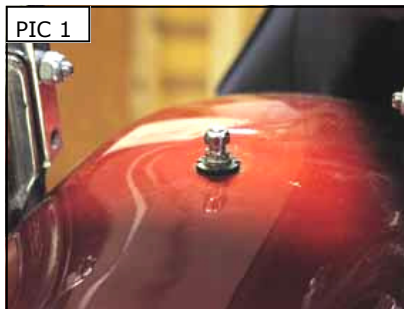

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

*Ride On!*