

INSTALLATION INSTRUCTIONS

CLASSIC FACEPLATE FOR HYPERCHARGER ES, CHROME & BLACK

9369

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Hypercharger ES Faceplate

YOU WILL ALSO NEED:

Hex key set

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- STEP 2** **IF HYPERCHARGER ES IS INSTALLED ON MOTORCYCLE:** Disconnect the servo motor wire from the controller wire (refer to your Hypercharger installation instructions for reference).
- IF HYPERCHARGER ES IS NOT INSTALLED ON MOTORCYCLE:** Proceed to Step 3.
- STEP 3** Refer to FIG 2 and 3. Remove the cover off the Hypercharger ES air cleaner by unfastening the two outside edge socket head cap screws from the cone. Set hardware aside, it will be reused.
- STEP 4** Refer to FIG 4. On the inside of the cover, remove the existing four (4) flat head socket caps screws and Hypercharger ES Faceplate. Set hardware aside, it will be reused.
- STEP 5** Locate provided Hypercharger ES Faceplate. Align and place the faceplate into the Cover.
- STEP 6** Locate the four (4) screws that was removed in Step 4. Fully fasten the faceplate to the cover, but do not over tighten.
- STEP 7** **IF HYPERCHARGER ES IS INSTALLED ON MOTORCYCLE:** reinstall the cover to air cleaner assembly on the motorcycle using the hardware that was removed in Step 3. Reconnect the servo motor wire to the controller wire.

IF HYPERCHARGER ES IS NOT INSTALLED ON MOTORCYCLE: leave the cover off and refer to the installation instructions provided with the Hypercharger ES.

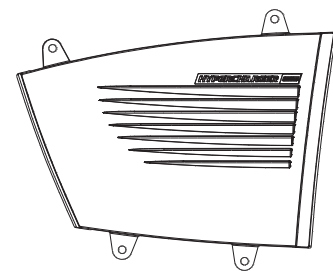


FIG 1

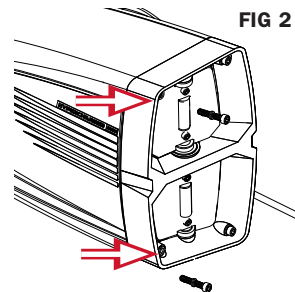


FIG 2

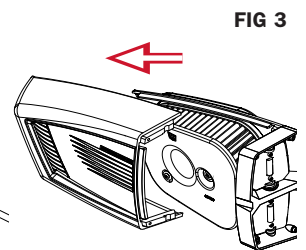


FIG 3

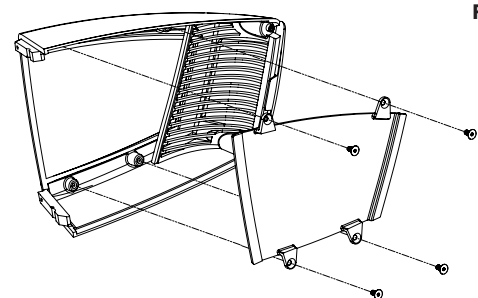


FIG 4



INSTALLATION INSTRUCTIONS

CLASSIC FACEPLATE FOR HYPERCHARGER ES, CHROME & BLACK

9369

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.
