

CRUSHER REVOLT AIR CLEANER FOR '07-UP XL, CHROME

9614

THANK YOU FOR CHOOSING CRUSHER!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|-----------------------------|---|---|
| 1 | Revolt Air Cleaner Assembly | 1 | Crankcase Breather Kit, containing: |
| 1 | Round Flat Filter | 1 | 90 Degree Fitting |
| 2 | Breather Bolt | 2 | Straight Fittings – USE ONE (1) |
| 2 | Breather Hose | 3 | 1/4"-20 x 1-3/8" Socket Head Cap Screws |
| | | 1 | Adhesive Gasket |
| | | 2 | Non-Adhesive Gaskets |
| | | 4 | Cable Ties |
| | | 1 | Breather Adapter |
| | | 1 | 16" Hose – NOT USED |
| | | 1 | Tee fitting – NOT USED |

YOU WILL ALSO NEED:

Set of Hex Wrenches, Set of Combination Wrenches

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1


Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**. Allow the engine and exhaust system to cool. Remove the main fuse.

WARNING

THE END USER'S SAFETY DEPENDS UPON PROPER INSTALLATION OF THIS PRODUCT. IF A STEP IN THESE INSTRUCTIONS IS NOT WITHIN YOUR CAPABILITIES OR YOU DO NOT HAVE THE CORRECT TOOLS, HAVE YOUR DEALER PERFORM THE PROCEDURE. IMPROPER INSTALLATION OF THIS PRODUCT COULD RESULT IN DEATH OR SERIOUS INJURY.

ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

INSTALLATION REQUIRES CONTACT WITH THE EXHAUST SYSTEM. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED BEFORE BEGINNING TO PREVENT INJURY.

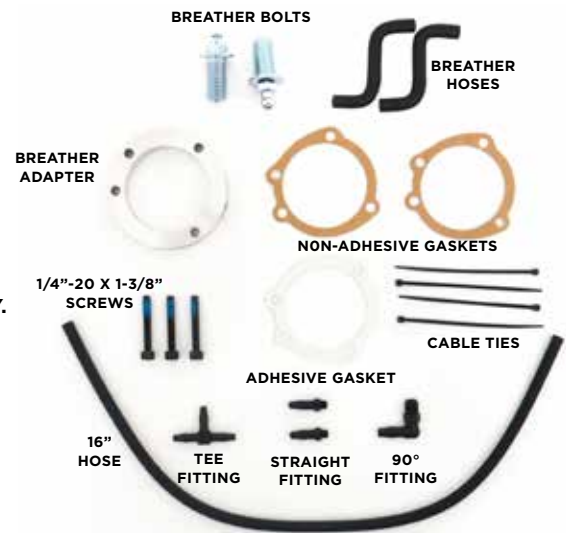

CRUSHER REVOLT AIR CLEANER FOR '07-UP XL, CHROME

9614

-Continued-





STEP 2 Remove the existing air cleaner so that the intake flange is completely exposed. Carefully remove any existing gasket material from the flange. Ensure that the flange is clean and dry.

STEP 3 Refer to PIC 1. Locate the included Adhesive Gasket. Remove and discard the adhesive backing from the included Gasket; align it with the intake flange and press it into place.

STEP 4 Refer to PIC 1. Locate the included Breather Bolts. Replace the existing bolts with the new Breather Bolts. Tighten the Breather Bolts.

STEP 5 Locate the included Breather Adapter and Fittings. Assemble the Breather Adapter and Fittings as shown in PIC 2.

STEP 6 Locate the included Breather Hoses. Refer to PIC 3 and 4. Trim 1/4" from each end of ONE of the included Breather Hoses. Connect the trimmed Hose to the front Breather Bolt and the 90° Fitting on the Breather Adapter. Connect the remaining Breather Hose to the rear Breather Bolt and the Straight Fitting on the Breather Adapter. Ensure that the Hoses are free of kinks or tight bends. Secure the ends of the two Hoses with the included Cable Ties; trim the excess Cable Tie ends.

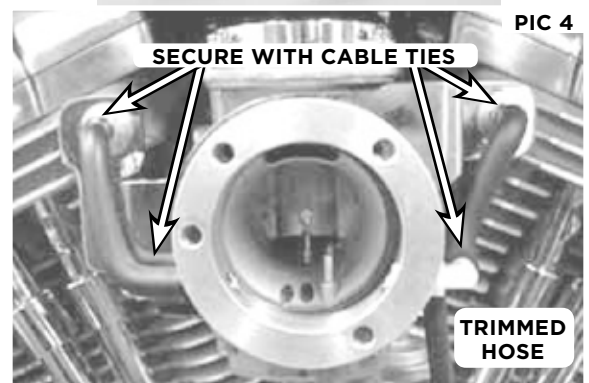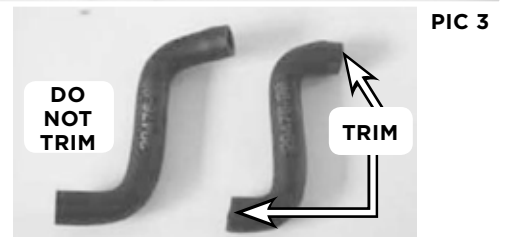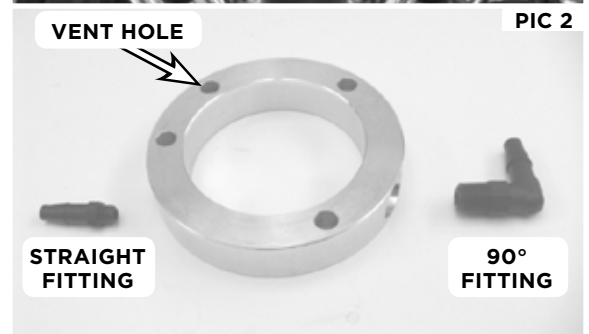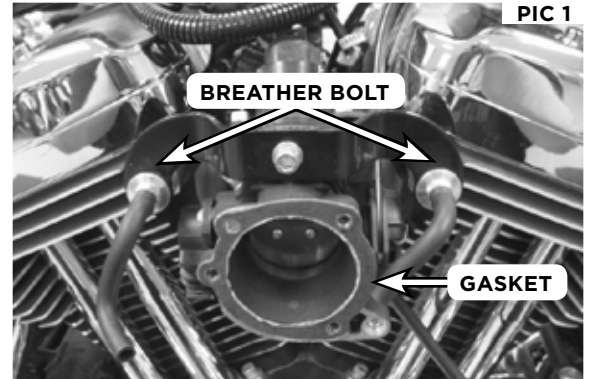

CRUSHER REVOLT AIR CLEANER FOR '07-UP XL, CHROME

9614

-Continued-

STEP 7 Refer to FIG 1. Completely disassemble the Revolt Assembly. Make note as to how it is assembled, it will help for reassembly.

STEP 8 Refer to FIG 1. Locate the Velocity Base.

Insert the three (3) included 1/4"-20 X 1-3/8" Socket Head Cap Screws through the Velocity Base mounting holes. DO NOT place a bolt through the float bowl vent hole at the 10-o'clock position.

Align one of the included Non-Adhesive Gaskets over the screws protruding from the backside of the Velocity Base.

STEP 9 Align the Velocity Base and intake flange; secure the assembly to the intake flange with the three screws. DO NOT over tighten the screws!

STEP 10 Refer to FIG 1 and PIC 5. Locate the included Super Ring. "Snap" the Ring into place; ensure it is secure before continuing.

STEP 11 Locate the included Round Flat Filter, Screen, and Trim Ring.

Place the Filter in the Velocity Base; align the holes in the Screen with the Outer Ring; cover the Filter with the Screen and Trim Ring; secure with the five (5) 1/4"-20 x 1/2" Socket Head Cap Screws.

STEP 12 Reinstall the main fuse. Double check the tightness of all related fasteners, check for hose clearance and check throttle for correct operation, making sure it returns properly, before starting bike.


WARNING

FAILURE OF THE THROTTLE TO RETURN COULD RESULT IN LOSS OF CONTROL CAUSING SERIOUS INJURY OR DEATH.

NOTICE

IT IS THE END USER'S RESPONSIBILITY TO ENSURE THAT ALL FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

FIG 1

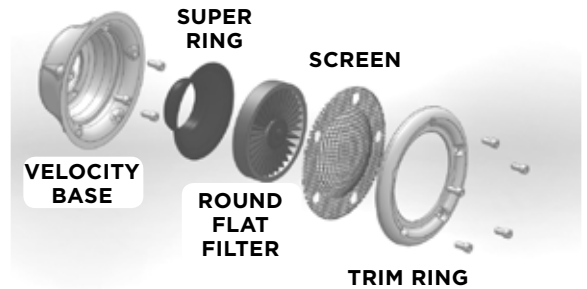

PIC 5

