

INSTRUCTIONS FOR PART **18-113** GL1800 FORK LIGHTS

Note: Read instructions thoroughly before installing.

- 1. Place bike on center stand.
- 2. Take off caliper covers by removing the four screws from the caliper cover. Figure 1.

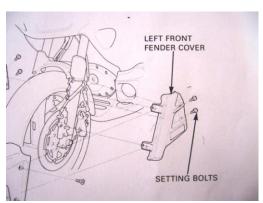


Figure 1

- 3. Place template over the edge of the cover as shown in figure 2 and mark pilot holes. Template on reverse side.
- 4. Drill three pilot holes then gradually enlarge hole to 5/16 inch. This may take several drills. Figure 3.
- 5. Install lights and wire to accessory switch. (We recommend our part 18187, Economy Accessory Switch Kit.)
- 6. Reinstall caliper cover.

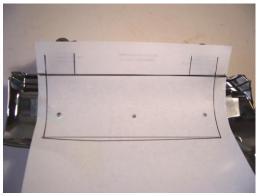


Figure 2



Figure 3

