


Instructions for Linbar[®] and Multibar[®] Part # 104-1, BL104-1, 1304

Fits Dyna Wide Glide from 1991-present.
Will only fit with stock forward controls.

**LINDBY
CUSTOM, INC.**

1. Remove forward controls and install the two brackets with the hole pointing forward and down behind the forward controls. Do not tighten bolts yet.
2. Install Linbar / Multibar on the top using 3/8 x 1 1/4 bolt, then install left and right side using 3/8 x 1 1/4 bolt.
3. Tighten all bolts to manufacturer's specifications.
4. Hardware included:
 - 3 Hex bolts 3/8 x 16 x 1 1/4
 - 3 Nylon lock nut 3/8 x 16
 - 6 Sae flat washers 3/8

*Bar width: 35"

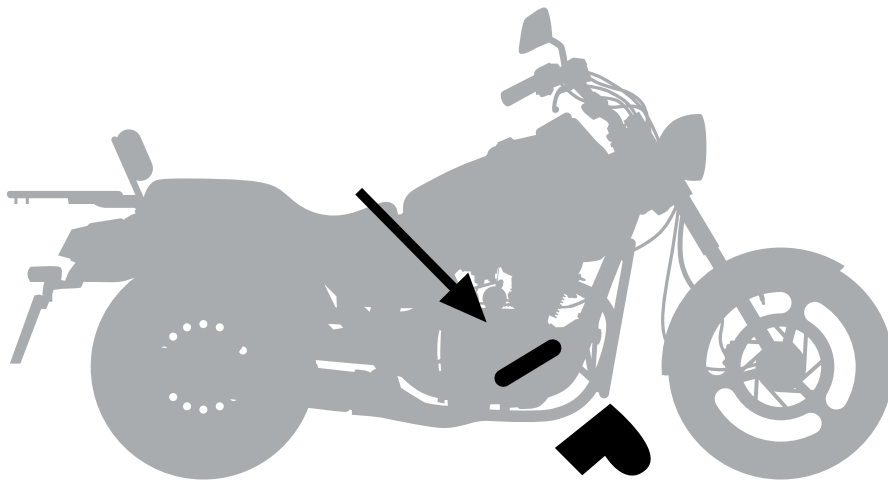

Front Linbar patent D361311
Front Multibar patent D548142

Rely only on high-grade motorcycle frame & body offered on our virtual shelves.