

# Instructions for Linbar<sup>®</sup>, Multibar<sup>®</sup> and Unibar<sup>®</sup> Part #115-1, 1315, 1415

Fits Sportster Rubber Mount Engine 2004-up

**LINDBY  
CUSTOM, INC.**


1. Remove two bolts in upper front engine stabilizer.
2. Install supplied brackets between the forward controls and the frame on left and right side.

**NOTE:** *On motorcycles with mid controls install the brackets on the 2 mounting points where the forward controls mount. Use the 3/8" x 1" bolts supplied.*

3. Install the top mount of the highway bar using the 2 bolts you uninstalled in step 1.
4. Install the 2 lower mounts of the highway bar to the brackets you installed in step 2, using provided nuts, bolts and washers.
5. Tighten all bolts to factory spec.
6. Hardware included:
  - 2 Hex bolt 3/8 x 16 x 1 1/4
  - 2 Hex bolt 3/8 x 16 x 1 1/2
  - 4 Hex bolt 3/8 x 16 x 1
  - 2 Nylon lock nuts 3/8 x 16
  - 10 Sae flat washers 3/8
  - 2 **Brackets with Slot**

\*Bar width: 31"

**NOTE:** *If there is not enough clearance between front exhaust and the highway bar, adjustment of exhaust system may be needed.*

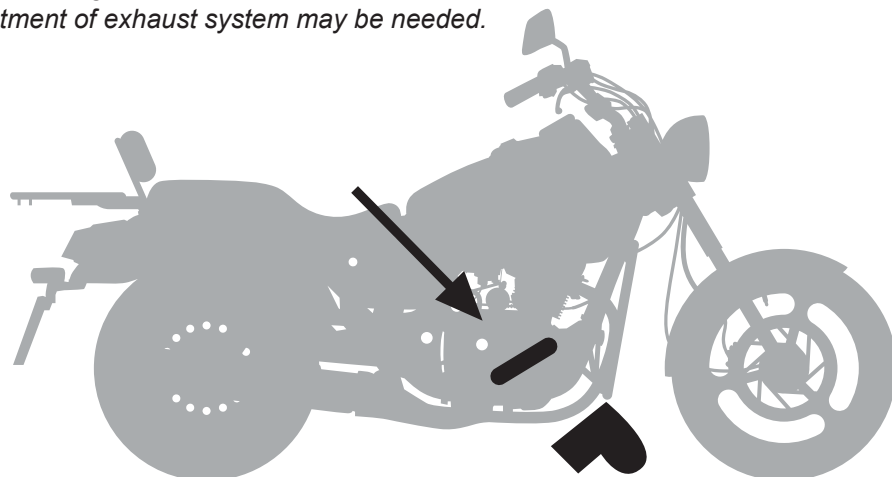

Front Linbar patent D361311  
Front Multibar patent D548142

Rely only on high-grade motorcycle frame & body offered on our virtual shelves.