

# Instructions for Linbar<sup>®</sup>, Multibar<sup>®</sup> and Unibar<sup>®</sup> Part # 910-1, 13910, 14910


Fits Honda Shadow Aero 750 cc 2004-up  
and Honda Spirit 750 cc C2 w/Shaft Drive 2007-up



1. Remove the top bolt holding the radiator.
2. Remove left and right front bolt in foot control brackets.
3. Install LINBAR/ MULTIBAR to the frame at the top radiator mount. Use the longer 6mm bolt provided in bolt kit.
4. Install left and right lower mount of LINBAR/ MULTIBAR to the lower foot peg mount.
5. Make sure that the rear brake is adjusted correctly, so the brake pedal doesn't touch the LINBAR/ MULTIBAR when applied.
6. Tighten all bolts to manufacturer's specifications.
7. Hardware Included:
  - 1 Hex bolt 6mm x 35mm x 1.00 (10.9)
  - 1 Flat washer 6mm
  - 1 Fender washer 6mm

\*with thick brackets:

  - 1 Hex bolt 10mm x 40mm x 1.25
  - 1 Hex bolt 10mm x 100mm x 1.25
  - (2) 10mm flat washer

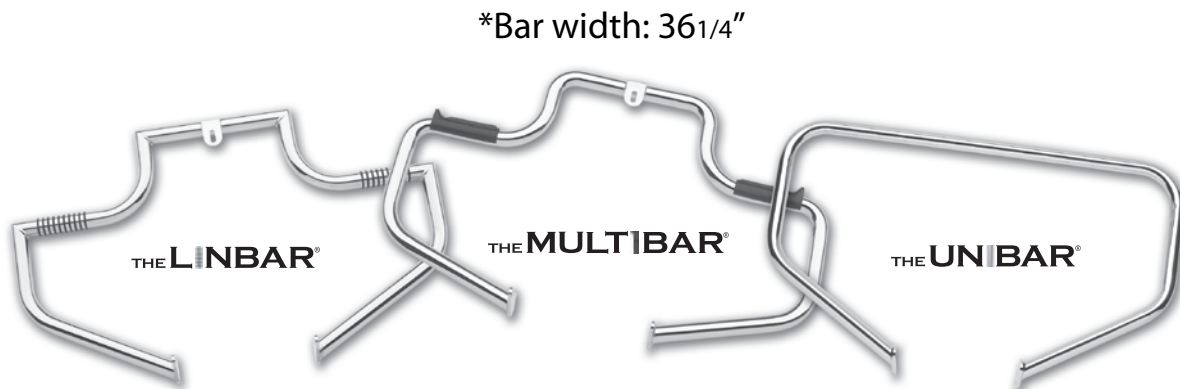

Linbar patent number D361311  
Multibar patent number D548142

View [other motorcycle frame & body](#) made by [Lindby Custom](#) on our website.