



## **INSTALLATION INSTRUCTIONS**

# **BMW S1000RR 2015-**

*© by MRA-Klement GmbH – 10/2015 4025066153091*

# INSTALLATION INSTRUCTIONS

## **BMW S1000RR 2015-**

*Thank you for buying a MRA Windshield.*

*Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.*

Number	Article	Article No..	Required tools
1	MRA screen	---	Wrench 10mm
1	Edge protection trim	---	Torx T20

### **Fitting the screen to the motorcycle:**

1. Stand your motorbike up on a level surface.
2. Remove the mirrors from each side (P1).
3. Remove the original screws fastening the screen, and carefully remove the original screen.
4. Remove the rubber nuts from the original screen and place them into your MRA screen (P2). Leave the rubber grommets in the original screen (P3).
5. Carefully place your MRA screen into the fairing.
6. Take the original fastening screws, insert them into the holes and carefully tighten them up.
7. Mount the mirrors back on again.
8. Mount the edge protection strip onto the screen as shown in Figure 4.
9. Slide the end sleeves over the end of the edge protector strip and gently squeeze the sleeves with a pair of pliers to secure the edge protector strip.


**After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.**



P 1



P 2

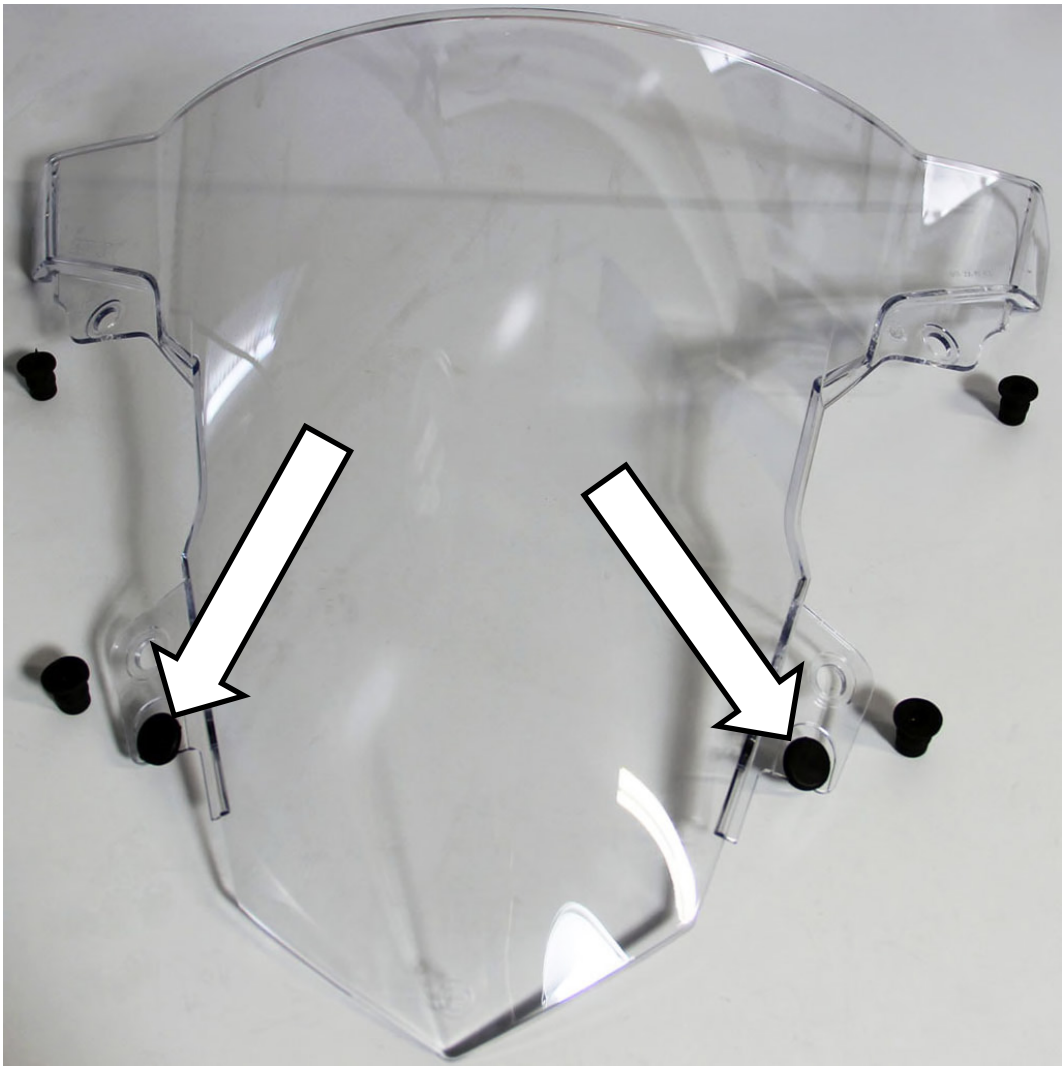

**P 3**



**P 4**