



INSTALLATION INSTRUCTIONS

HONDA CTX 700 N

© by MRA-Klement GmbH – 09/2015 4025066153121

INSTALLATION INSTRUCTIONS

Honda CTX 700 N

Thank you for buying a MRA Windshield.

Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.

Number	Article	Article No..	Required tools
1	MRA screen	---	Allen key socket driver, 6 mm
1	Two brackets	11046	Torque wrench
2	Allen screws, M8x50 mm	10704	Allen key, 3 mm
2	Washers, black, 16x8x1 mm	11036	
2	Spacers, black, 15 mm	10777	
2	Caps, black	10454	
2	Spacers, 3 mm	10872	
2	Neoprene spacers, 10 mm	10688	
2	O-rings	10992	
2	Screws, M5 x 25 mm	10641	
2	Screws, M5 x 20 mm	10673	
4	Plastic washers	10635	
4	Rubber Nuts M5	10629	

Fitting the screen to the motorcycle:

- Stand your motorbike up on a level surface.
⚠ NOTE: Lay a cloth or similar over the tank for protection!
- Loosen the rear screws on the handlebar clamp and unscrew the front screws, firmly holding the handlebars in place.
- Carefully lay the handlebars onto the tank.
- Insert the spacers into the holes (P1).
- Fasten the brackets onto the handlebars using the M8x50 screws and washers. Do not tighten the screws; you will still need to adjust the brackets.
- Insert the rubber nuts into the holes on the brackets (P2).
- Insert the 25 x 25 mm screws with the plastic washers through the two upper mounting holes in the screen, and place the 10 mm neoprene spacers onto the screws from the inside (P4).
- Now insert the M5 x 20 mm screws with the plastic washers through the lower mounting holes in the screen, and place the 3 mm spacer with the o-ring onto the screws from the inside (P4).
- Line up your MRA screen to the centre of your motorbike.
- Now bring the handlebars into their proper position – watch the dot on the handlebars (P3) – and tighten the front clamping screws (with the brackets) using your torque wrench set to 27 nm.
- Tighten the rear screws up to 27nm.
- Now place the caps onto the screw heads.
- Mount the edge protection strip included onto the screen as shown in P5.

After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.




P 1



P 2



P3

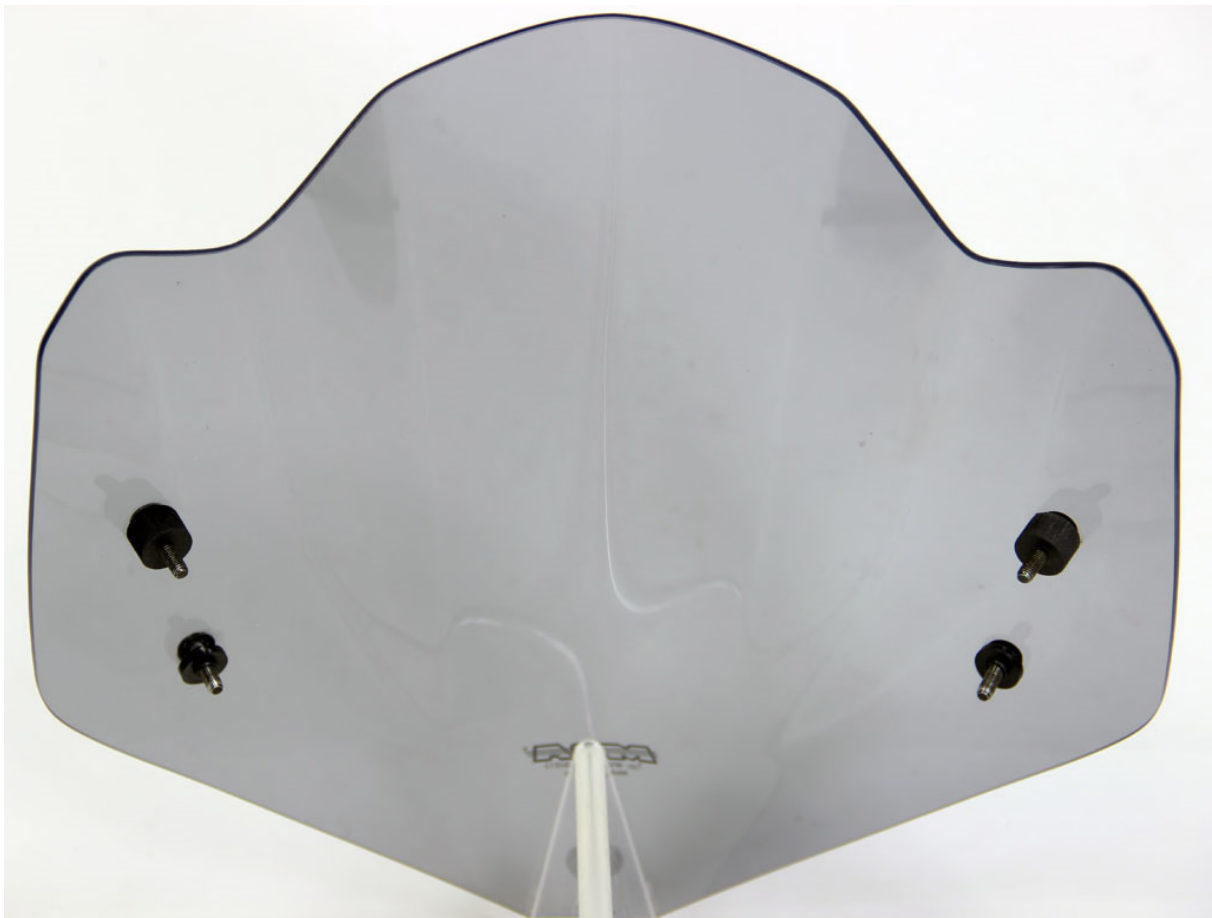

P4



P 5