



INSTALLATION INSTRUCTIONS

HONDA CRF1000L Africa Twin 2016-

INSTALLATION INSTRUCTIONS

CRF1000L Africa Twin 2016-

Thank you for buying a MRA Windshield.

Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.

Number	Article	Article No..	Required tools
1	MRA screen	---	Allen keys, 3 and 6 mm
6	Plastic washers, 12 x 5 mm	10635	
4	Oval head screws, M5 x 20 mm	10673	
2	Oval head screws, M5 x 25 mm	10641	
2	Rubber nuts, M5	10629	
2	Spacers, 6 mm	11038	
2	O-rings, black, 4.5 x 1.5 mm	10992	
4	Neoprene discs 16x4,5x4mm	10634	
1	Edge protection strip with end sleeves	---	

How to mount the screen on your motorbike:

1. Stand your motorbike up on a level surface.
2. Dismantle the original screen.
3. Insert the rubber nuts included into the fairing brackets (P1).
4. Insert the M5 x 25 mm oval head screws and plastic washers included through the upper holes in your MRA screen. After that, place the 6 mm spacers and O-rings onto the screws from inside (P2). Insert the 4 neoprene disks into the screen as shown in picture P2a.
5. Mount your MRA screen with the remaining four oval head screws (M5 x 20 mm) and the plastic washers.
6. Line up your MRA screen towards the midline of your bike and tighten up the screws.
7. Mount the edge protector strip; slide the end sleeves over the ends of the edge protector strip and gently crimp the sleeves with a pair of pliers to secure it (P3, P4).

After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.




P 1




P 2



P 2a

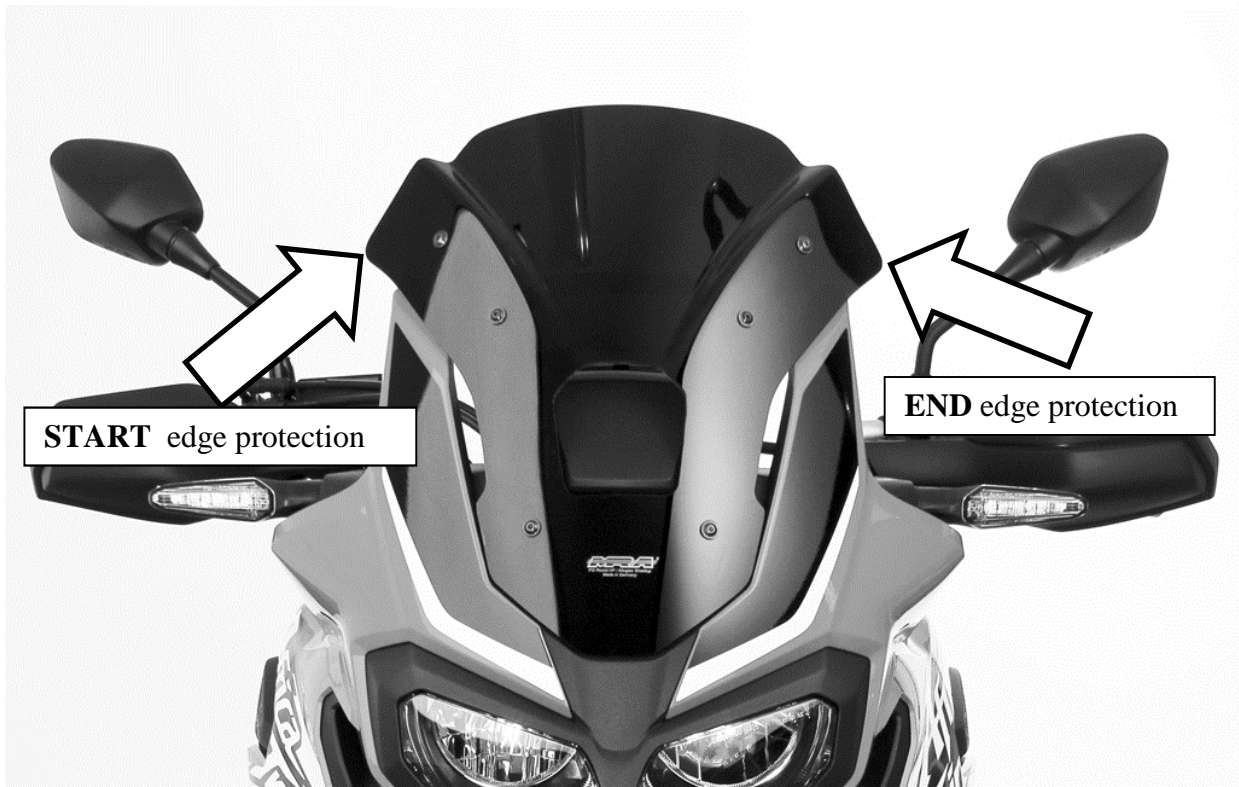

**Sportscreen
P 3**

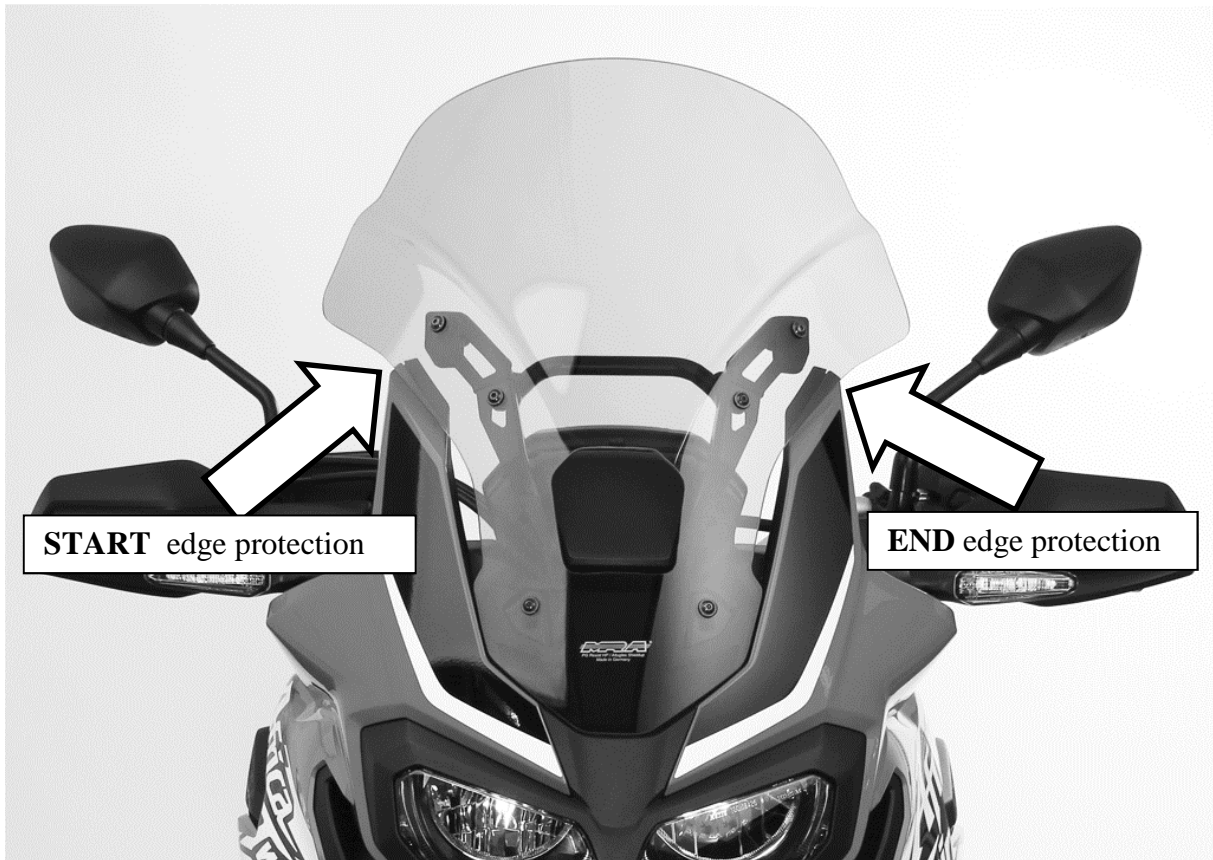

**Touringscreen
P 4**