



## **INSTALLATION INSTRUCTIONS**

# **HONDA CRF1000L Africa Twin 2016-**

# INSTALLATION INSTRUCTIONS

## ***CRF1000L Africa Twin 2016-***

*Thank you for buying a MRA Windshield.*

*Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.*

Number	Article	Article No..	Required tools
1	MRA screen	---	Allen keys, 3 and 6 mm
6	Plastic washers, 12 x 5 mm	10635	
4	Oval head screws, M5 x 20 mm	10673	
2	Oval head screws, M5 x 25 mm	10641	
2	Rubber nuts, M5	10629	
2	Spacers, 6 mm	11038	
2	O-rings, black, 4.5 x 1.5 mm	10992	
4	Neoprene discs 16x4,5x4mm	10634	
1	Edge protection strip with end sleeves	---	

### **How to mount the screen on your motorbike:**

1. Stand your motorbike up on a level surface.
2. Dismantle the original screen.
3. Insert the rubber nuts included into the fairing brackets (P1).
4. Insert the M5 x 25 mm oval head screws and plastic washers included through the upper holes in your MRA screen. After that, place the 6 mm spacers and O-rings onto the screws from inside (P2). Insert the 4 neoprene disks into the screen as shown in picture P2a.
5. Mount your MRA screen with the remaining four oval head screws (M5 x 20 mm) and the plastic washers.
6. Line up your MRA screen towards the midline of your bike and tighten up the screws.
7. Mount the edge protector strip; slide the end sleeves over the ends of the edge protector strip and gently crimp the sleeves with a pair of pliers to secure it (P3, P4).

**After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.**




**P 1**




**P 2**



P 2a

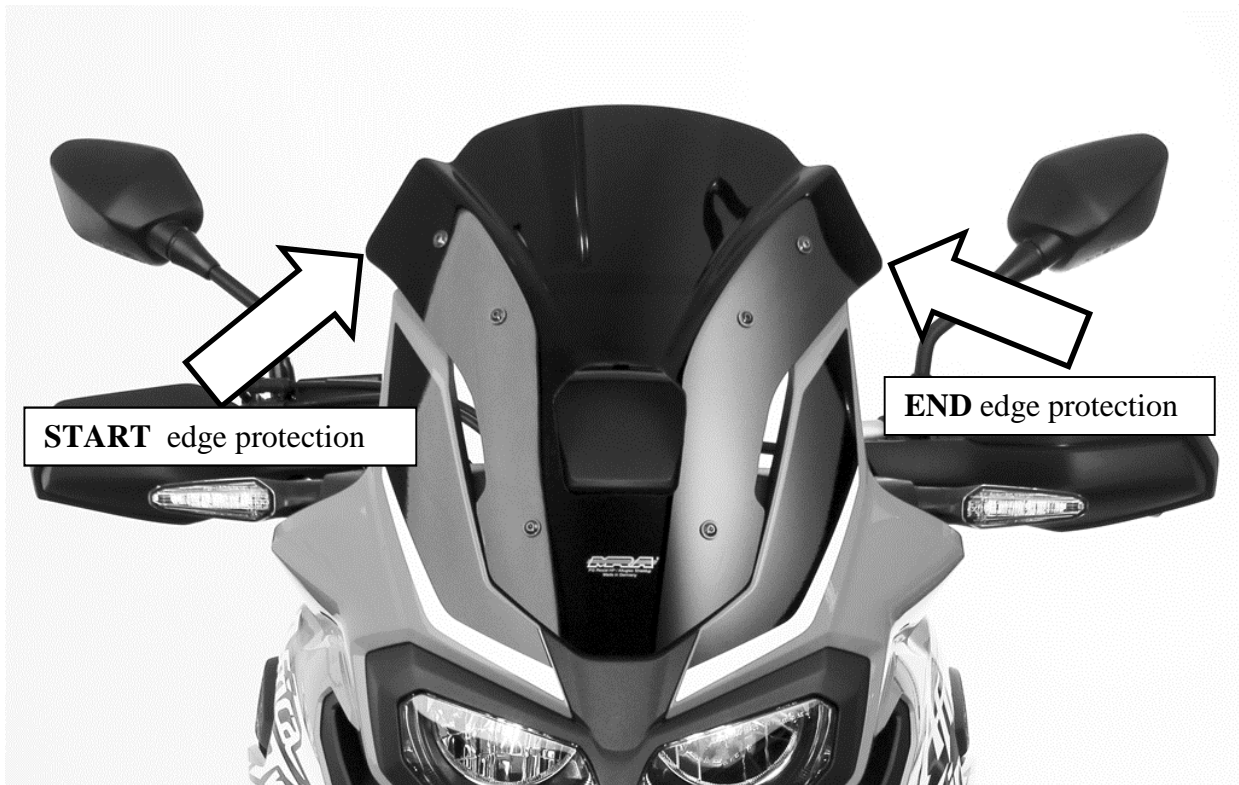

**Sportscreen  
P 3**

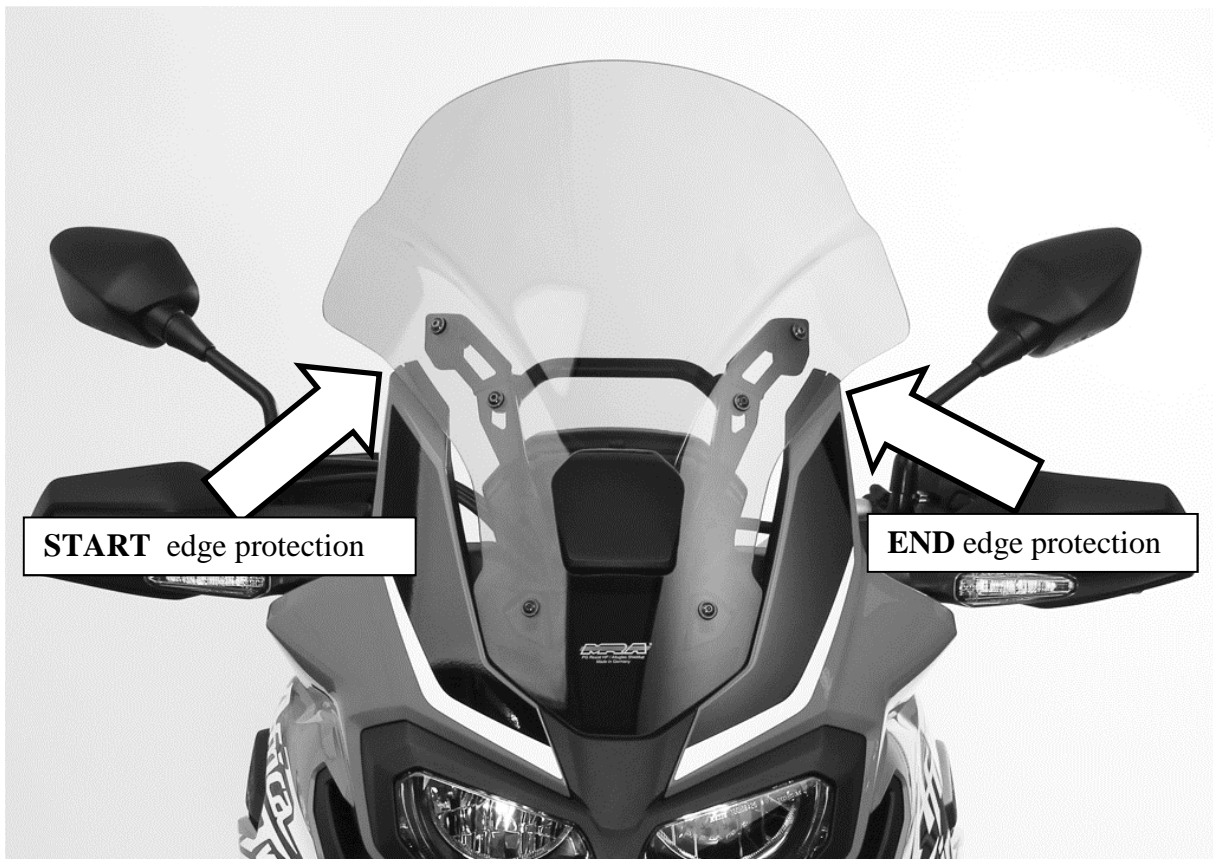

**Touringscreen  
P 4**