



INSTALLATION INSTRUCTIONS

KAWASAKI Ninja 650 2017-

© by MRA-Klement GmbH – 01/2018 4025066161829

INSTALLATION INSTRUCTIONS

Kawasaki Ninja650 2017-

Thank you for buying a MRA Windshield.

Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.

Number	Article	Article No..	Required tools
1	MRA-Screen	---	Allen key 3mm, 4mm
1	Holders, 1 pair	11311	
4	Rubber screw-nuts M5	10629	
4	Plastic washer, 12x5x0.5mm	10635	
4	Fillister head screws M5x20mm	10673	
4	Spacer sleeves 3mm	10872	
4	O-rings 4.5x1.5	10992	
1	Protective edge strip, clamping sleeves	---	


Fitting the screen to the motorcycle:

1. Place the motorcycle on a flat surface.
2. Remove the original windscreen.
3. Remove the original windscreen retaining plates (image 1).
4. Install the retaining plates included in the delivery (11311) with the original Allen screws in the desired position on the motorcycle (image 2).
5. Tighten the Allen screws and place the rubber screw-nuts (10629) into the retaining plates (image 2).
6. Then, push the Allen screws with the plastic washers (10635) through the 4 holes on the MRA screen. From underneath, place the spacer sleeves (10872) with the O-rings (10992) against them (image 3).
7. Position the screen and tighten the fillister head screws.
8. As in image 4, fit the protective edge strip onto the screen. Cut off the rest if required.
9. Push the clamping sleeves over the ends of the protective edge strip and lightly compress these using a pair of pliers to secure the edge strip.


After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.



P 1

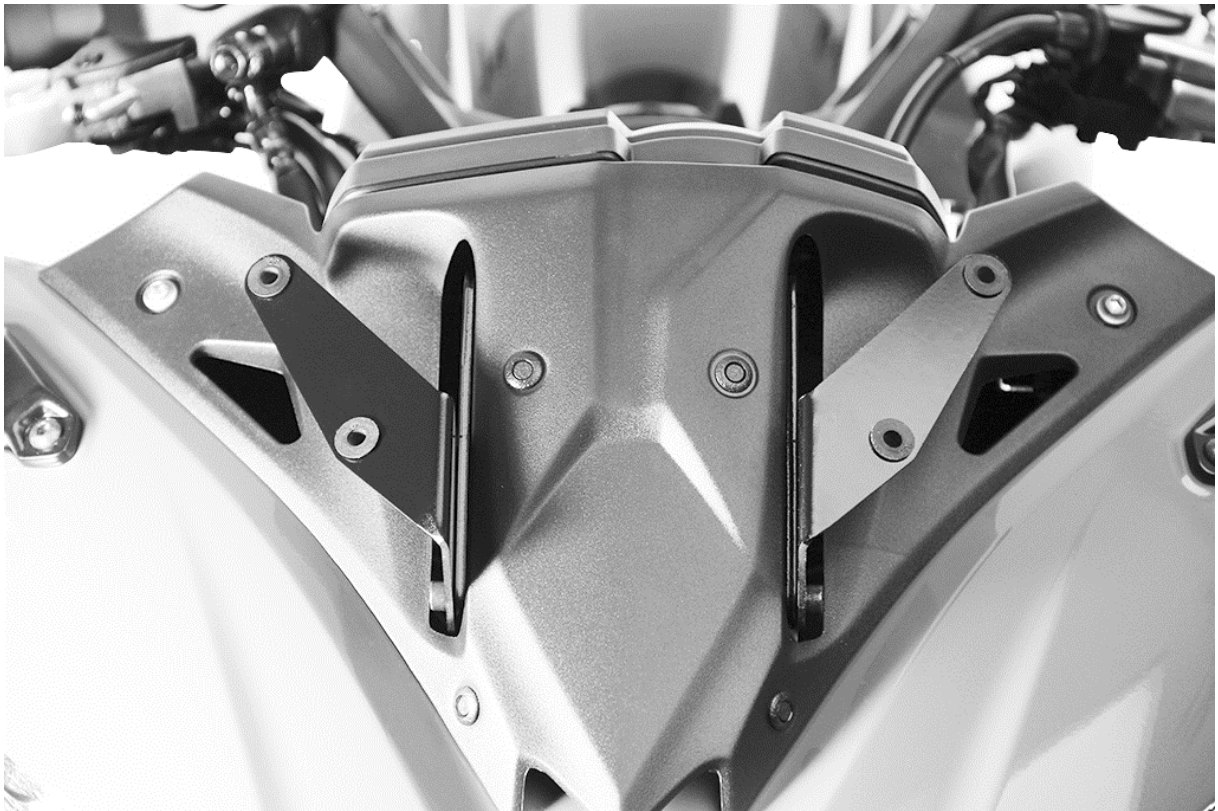

P 2

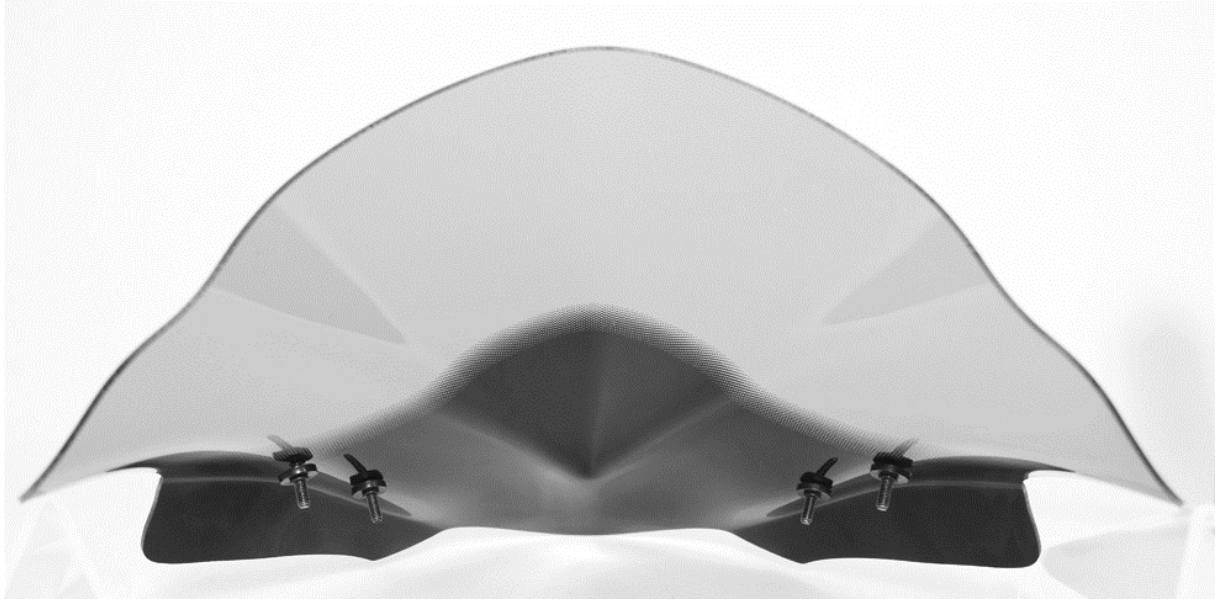

P 3



P 4