



INSTALLATION INSTRUCTIONS

YAMAHA MT 07 2018-

© by MRA-Klement GmbH – 8/2018 4025066163311

INSTALLATION INSTRUCTIONS

YAMAHA MT 07 2018-

Thank you for buying a MRA Windshield.

Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.


Number	Article	Article No..	Required tools
1	MRA windscreen	---	Allen key 3mm and 5mm
1	Pair of retaining plates	11342	
4	Elastic nuts M5	10629	
4	Plastic discs 12x5x0.5mm	10635	
4	Lens head screws, M5x16mm	10554	
2	Distance sleeves M6, 7mm	11343	
2	Hexagonal cheese-head screw M6x40mm	11016	
2	Allen screws M6x20mm	10662	
2	Washers 12x6x1mm	10559	
4	Washers, black, 16x8x1mm	11036	
1	MRA-sticker, round	11349	
1	Edge protection strip with clamping sleeves	---	

Fitting the screen to the motorcycle:

1. Place the motorcycle on a flat surface. Attach the round MRA sticker to the panel as shown in picture A.
2. Remove the 4 original Allen screws from the headlight mask.
3. Put the Allen screw provided, M6x40mm [11016], together with the 12x6mm washer [10559], through the front hole of the retaining plate and push the plastic spacer [11343] onto the screw from below (P1).
4. Insert the provided M6x20 Allen screw [10662], together with the 12x6mm washers [10559] through the rear hole of the retaining plate.
5. Mount the retaining plate on the motorcycle and insert the provided elastic nuts [10692] onto the retaining plates (P2).
6. Mount the MRA windshield on the retaining plates with the provided neoprene washers and the M5x16mm rounded head screws [10554].
7. Hoist the edge protection profile up onto the rear exposed area of the windscreen, starting from the fillet and going to the opposite side. Cut off the rest if required. Push the clamping sleeves over the ends of the protective edge strip and lightly compress them, using a pair of pliers to secure the edge strip.
8. Now remove the lateral Allen screws from the lamp cover.
9. Plug the provided 16x8mm washer [11036] onto the Allen screw (P3).

10. Remount the Allen screw on the motorcycle. Take care to ensure that the washer slides over the metal sleeve (P4) and the rubber grommet presses against it. Fully tighten the screws.


After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.

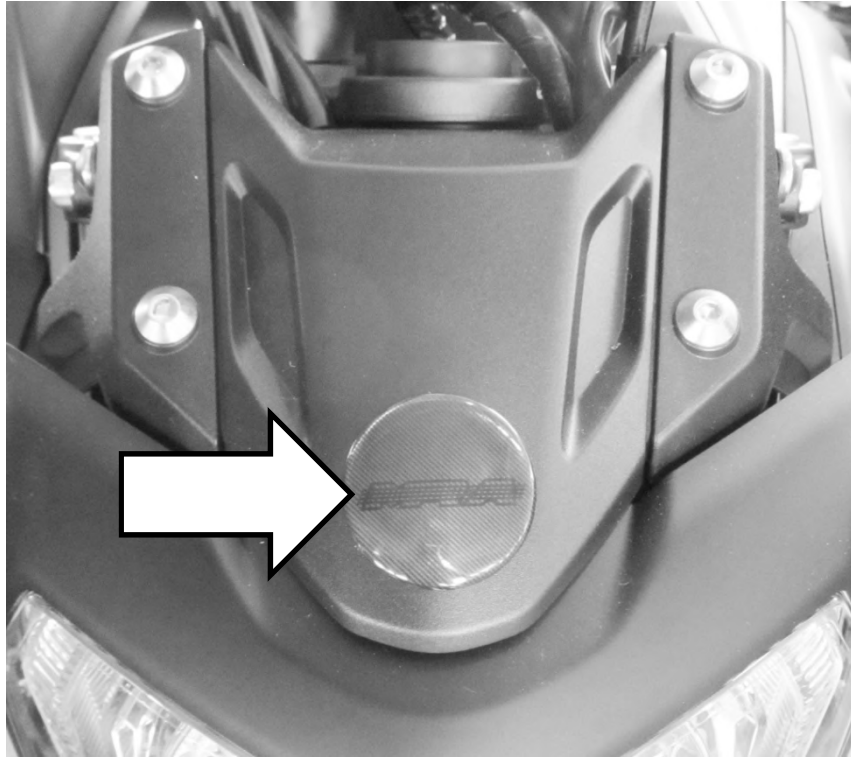

A




P 1

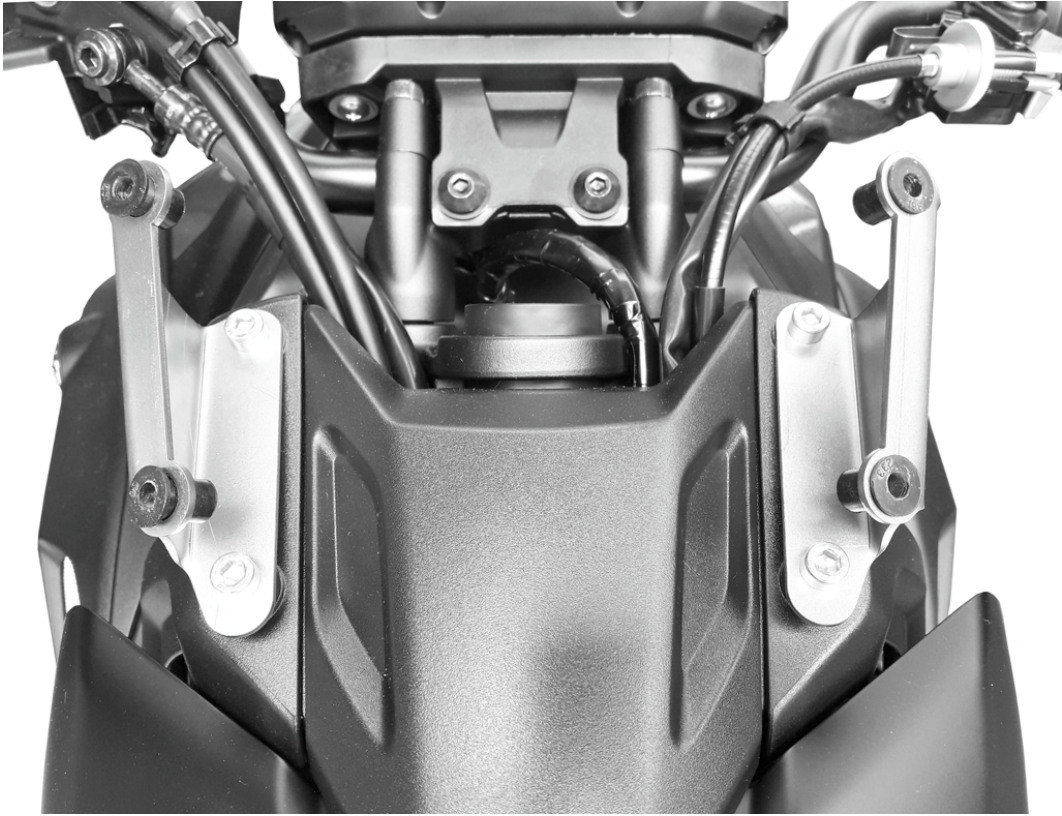

P 2



P 3

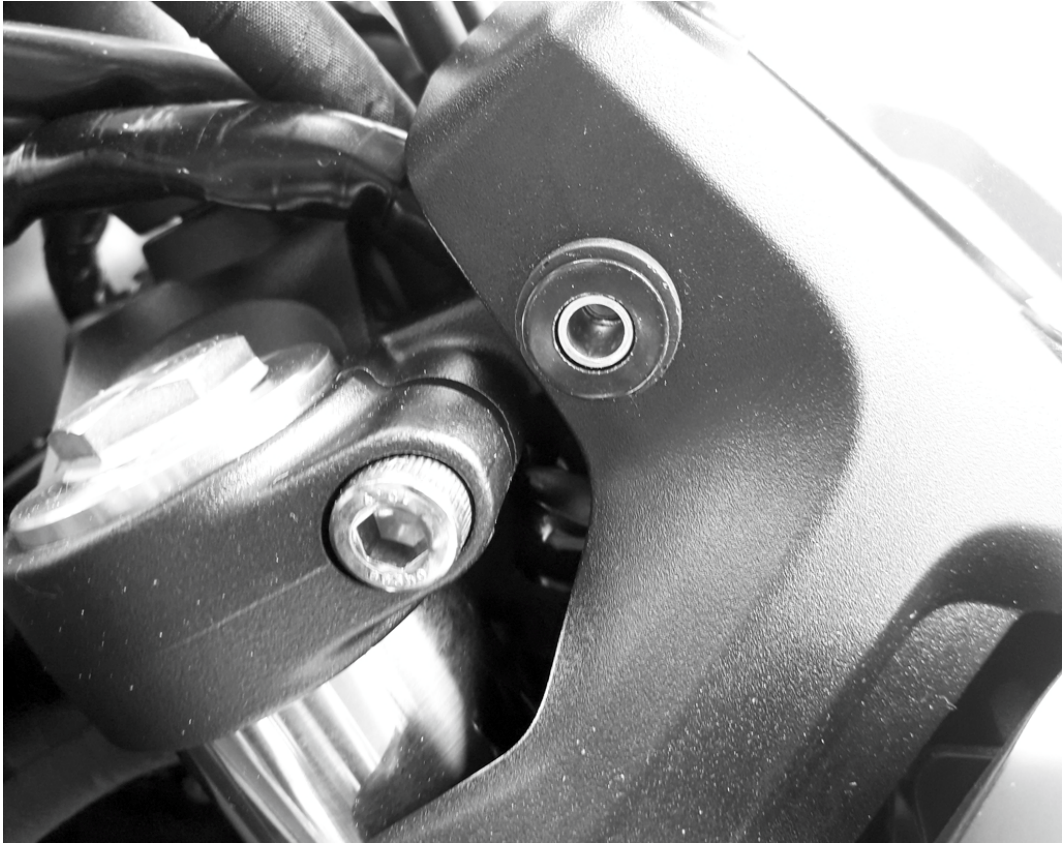

P 4



MRA puts everything within reach.

Check out the collection of motorcycle windshields & fairings we offer.