



INSTALLATION INSTRUCTIONS

KTM Duke 790 2018-

© by MRA-Klement GmbH – 08/2018 4025066163601

INSTALLATION INSTRUCTIONS

KTM Duke 790 2018-

Thank you for buying a MRA Windshield.


Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.

Number	Article	Article No..	Required tools
1	MRA windscreen	---	Allen key 3mm Allen key 5mm
1	pair of holders	11345	
4	Distance sleeves 3mm	10872	
4	O-ring 4.5 X 1.5	10992	
4	Plastic washers 12 X 5 x 0.5mm	10635	
4	M5 rubber nuts	10629	
4	Fillister head screw M5 X 20mm	10673	
2	Cheese-head screws M6 X 40mm	11016	
2	Nut covers	10540	
2	M6 nuts	10646	
2	Clamp for 28/32mm handlebars	11118	
2	Washers 12 X 6 X 1mm	10559	
1	Edge protection strip with clamping sleeves	---	


Fitting the screen to the motorcycle:

1. Place the motorcycle on a flat surface.
2. Assemble the handlebar clamps with spacer sleeves on the handlebars (P 1).
3. Now insert the M6 nut into the clamps from behind (P 2).
4. Assemble the holding plates with the M6x40mm Allen screws and the black washers to the clamps (P 3).
5. When assembling the holding plates, lightly press the M6 nut into the clamp to allow the screw to grip the nut and so that the nut cannot fall out to the rear.
6. Tighten the screws only slightly. Align the holding plates in the middle and at the correct angle to the motorcycle with the help of the MRA windscreen. Apply the rubber nuts to the holding plates (P 4).
7. Ensure that the clamps are not against the speedometer casing.
8. When the holding brackets are correctly aligned, securely tighten the M6x40mm screws and apply the cover cap to the clamps (P 5).
9. Insert the M5x20mm pan-head screws with the plastic washers into the holes on the MRA screen. The 3mm distance sleeves are attached onto the pan-head screws from the other side. Secure them with the 4.5x1.5mm O-ring (P 6).
10. Mount the MRA windscreen onto the holding plates and tighten the screws.
11. Apply the protective edge strip profile as shown in (P 7).
12. Push the clamping sleeves over the ends of the protective edge strip and lightly compress them, using a pair of pliers to secure the protective edge strip profile.

After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.

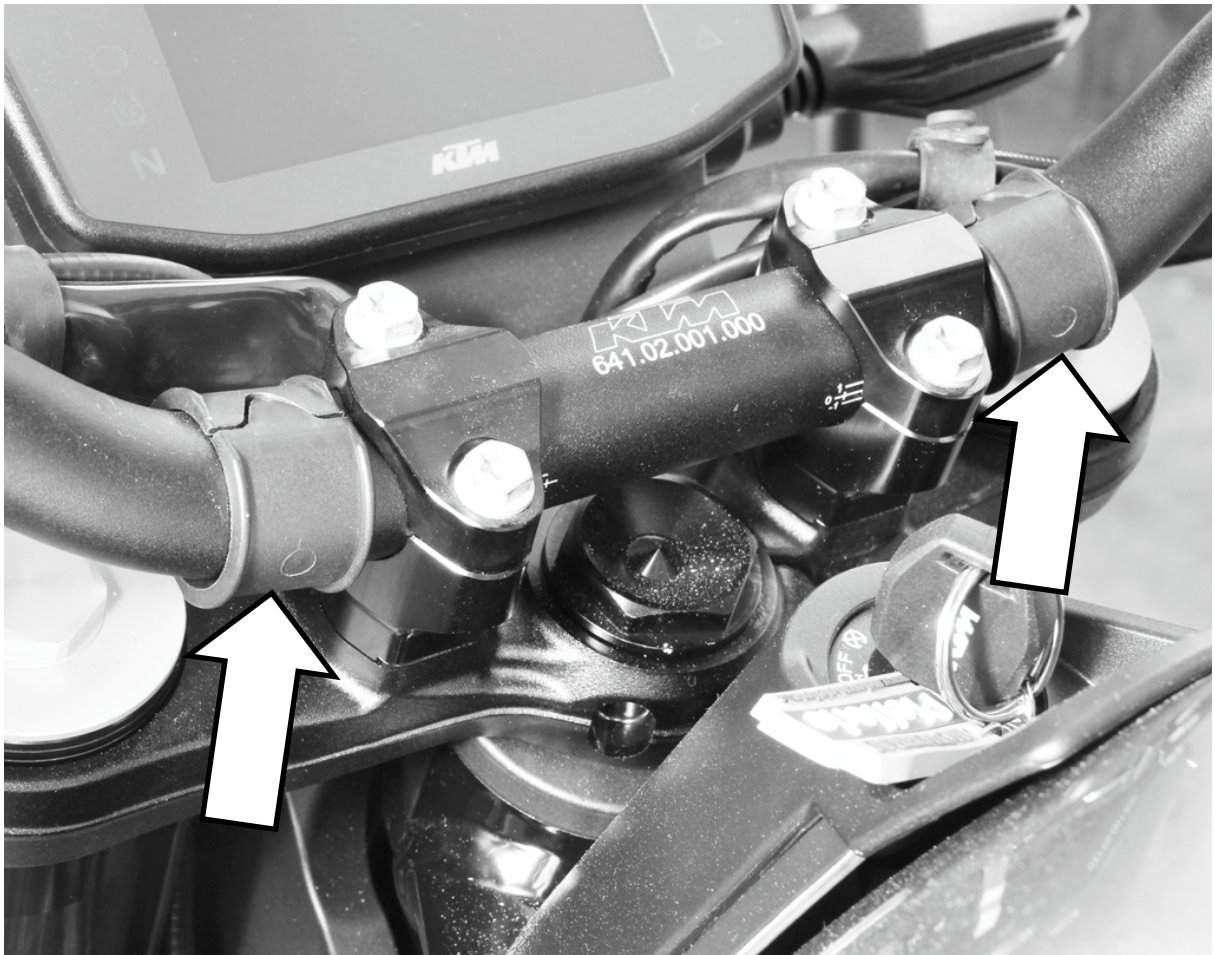


P 1

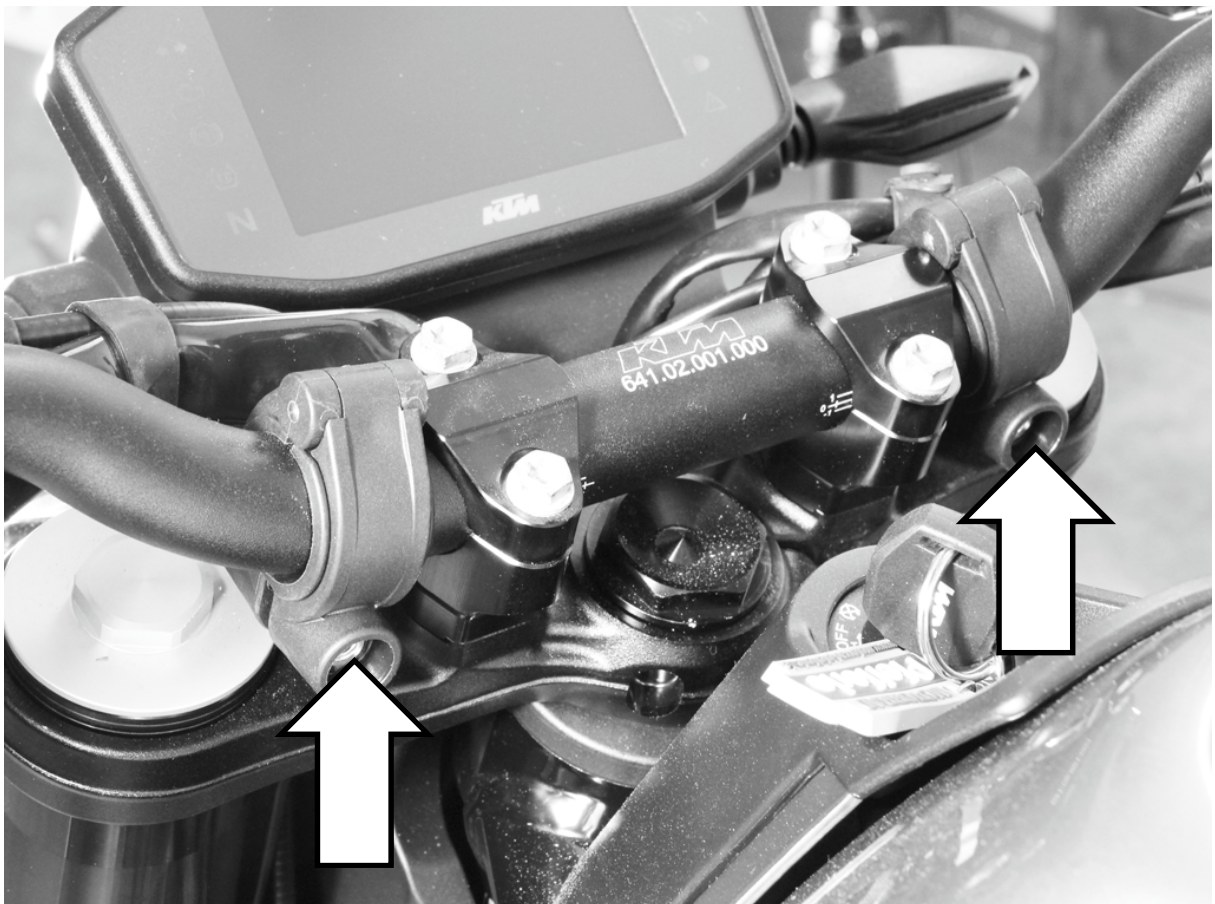


P 2



P 3

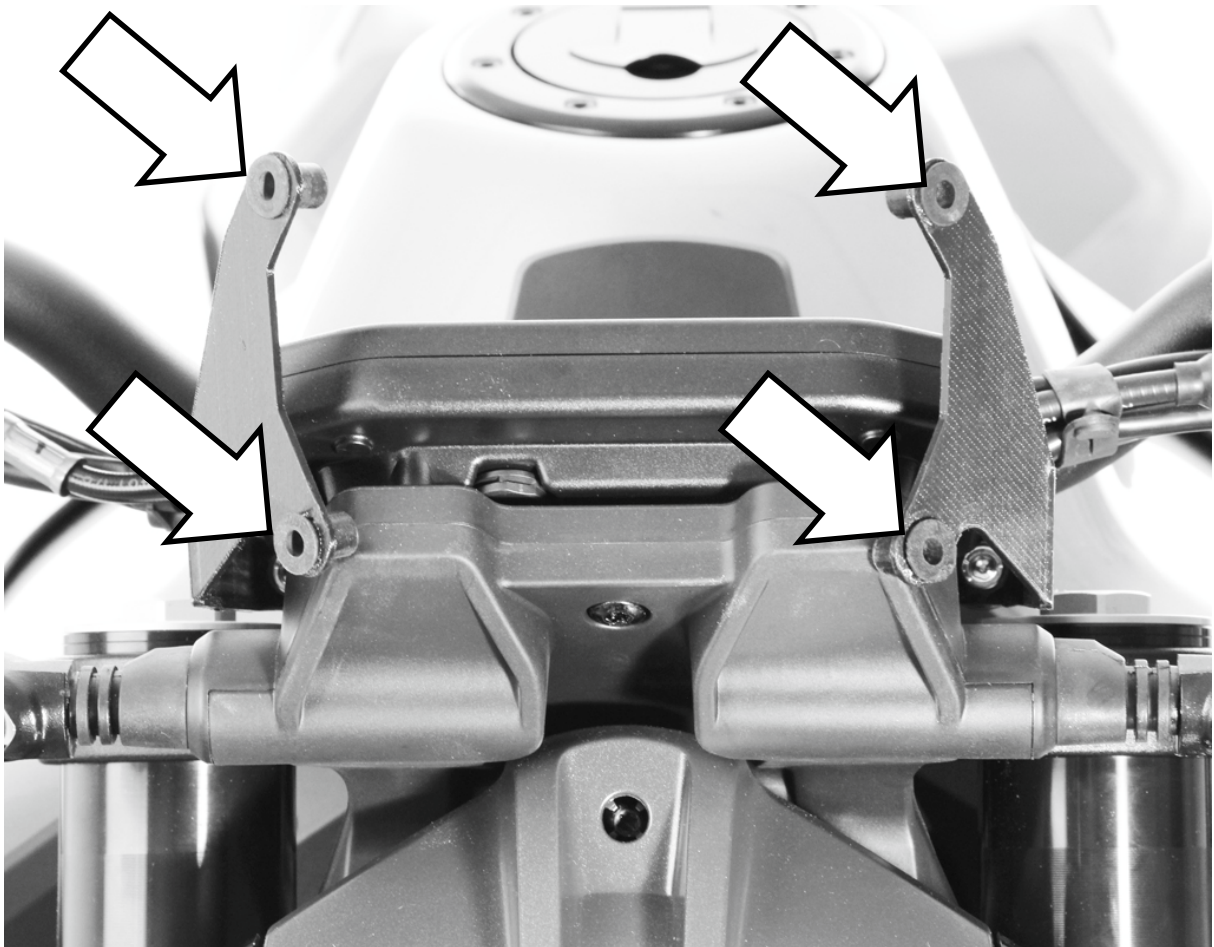

P 4

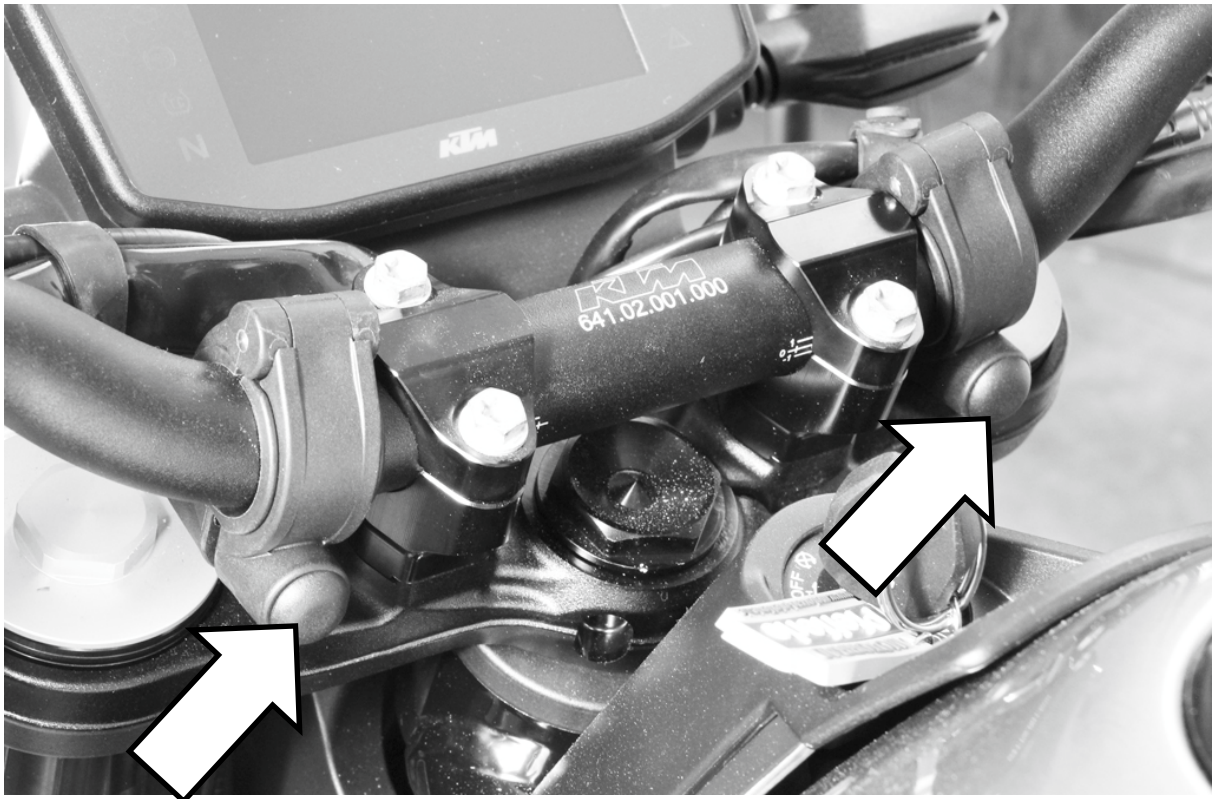

P 5



P 6



P 7